

HE-VA

Käyttöohjeet Varaosaluettelo EU-Vaatimuksenmukaisuusvakuutus

As good as it looks



As good as it looks



As good as it looks

As good as it looks



As good as it looks

Huomio: Lue käyttöohjeet ennen koneen käyttöä.

Grass-Roller

Hinattava: 4,5 m - 6,3 - 8,2 m

Manual no. 8000394-10 131023

HE-VA

N. A. Christensensvej 34
DK-7900 Nykøbing Mors
Tel: 97724288
Fax: 97722112
www.he-va.com

Sisällysluettelo

EU-VAATIMUSTENMUKAISUUSVAKUUTUS.....	4
VASTAANOTTOTARKISTUS	5
KONEEN TOIMINTASELOSTUS	5
TEKNISET TIEDOT	6
TEKNISET VAATIMUKSET	6
TURVALLISUUSOHJEET	7
YLEISTIEOJA	7
MAANTIEKULJETUKSEN OHJEITA	7
ETUAKSELIN KUORMITUS.....	7
TURVALLISUUS – JA MUITA KONEEN MERKINTÖJÄ	8
KÄYTTÖOHJEET	9
KYTKENTÄ.....	9
KONEEN LOHKOJEN AVAUS JA TAITTO	9
ASETUKSET JA SÄÄDÖT	10
PAINON SIIRTO	10
OLKIHARA.....	10
TASAUWLATA	11
JYRÄN KAAVIN.....	11
HUOLTO	12
VOITELU	12
KORJAUKSET.....	12
JOUSILATA.....	13
JOUSILADAN SYLINTERIN ASENNUS.....	13
SPARE PARTS LIST (ROLLER)	14
HOW TO READ THE SPARE PARTS LIST	14
FRONT - AND BACK DRAWBAR 4,5 M	14
FRONT AND REAR DRAWBAR 6,3 - 8,2M BEFORE MAY 2010, BEFORE MACHINE NO. 341713	16
FRONT DRAWBAR FROM JUNE 2010 MACHINE NO. 341713	18
HOSE PARKING FROM MAY 2016	20
FRONT- AND BACK DRAWBAR, FROM MACHINE NO. 347534.....	20
TRANSPORT BRACKET, ONLY WHEN STARRINGS ARE MOUNTED, ALL MODELS.....	22
MIDDLE SECTION BEFORE MACHINE 344648	22
MIDDLE SECTION AFTER MACHINE NO. 344648.....	24
WING & SIDE SECTION BEFORE SERIAL NO: 347070	25
WING SECTION RIGHT / LEFT AFTER SERIAL NO. 347070.....	26
WING SUSPENSION AND FOLDING CYLINDER 4,5M	26
PACKER ROLLER.....	28
RINGS	29
ROLLER SECTION WHEN CAST IRON RINGS.....	30
SUPPORT BEARING.....	31
HARROW 4,5 METER.....	32
HARROW FOR MIDDLE SEKTION 6,3 - 8,2M BEFORE DECEMBER 2014.....	34
PLANERPLANKE 4,5 – 6,3 – 8,2M.....	41

SPARE PARTS LIST SPRING-BOARD	42
MIDDLE AND SIDE SECTION TO SUIT HARROW MOUNTING 4,5M.....	42
MIDDLE AND SIDE SECTION TO SUIT HARROW MOUNTING 6,3 - 8,2M	43
MIDDLE SECTION INCL. HYDRAULICS, WHEN ONLY SPRING-BOARD 6.3 – 8.2M	44
SIDE SECTION INCL. HYDRAULICS, WHEN ONLY SPRING-BOARD (LEFT SHOWN) 6.3M	46
SIDE SECTION INCL. HYDRAULICS, WHEN ONLY SPRING-BOARD (LEFT SHOWN) 8.2M	47
SPRING-BOARD TINE WITH TRAVERSE LOCKING SYSTEM	49
SPARE PARTS LIST – MOUNTING OF MULTI-SEEDER.....	50
6,3 OG 8,2 METER.....	51
SPARE PARTS LIST HYDRAULICS.....	54
TIP, FOLDE & VÆGTOVERFØRINGSSYSTEM, RØD OG BLÅ 4,5M.....	54
HYDRAULICS FOR FOLDING & WEIGHT TRANSFER SYSTEM (BLUE) 6.3M	56
TIP CYLINDER FOR MIDDLE SECTION (RED) 6.3M.....	56
HYDRAULICS FOR FOLDING & WEIGHT TRANSFER SYSTEM (BLUE) 8.2M (BEFORE SERIAL NO. 352600).....	58
TIP CYLINDER FOR MIDDLE SECTION (RED) 8.2M.....	58
HYDRAULICS FOR FOLDING & WEIGHT TRANSFER SYSTEM (BLUE) 8.2M (FROM SERIAL NO. 352600)	60
HYDRAULICS, FRONT HARROW (GREEN) 4,5 - 6.3M	62
HYDRAULICS, FRONT HARROW (GREEN) 8.2M.....	64
SPRING-BOARD 4,5 - 6,3M.....	65
SPRING-BOARD 8,2M	66
HYDRAULIC BRAKES	67
AIR BRAKES	68



EU-VAATIMUSTENMUKAISUUSVAKUUTUS

joulukuun 29. pñä 2009 voimaantulleen EU konedirektiivin 2006/42/EY mukaisesti:

HE-VA ApS
N. A. Christensensvej 34,
DK-7900 Nykøbing Mors

todistaa täten, että seuraava kone on valmistettu Neuvoston Direktiivin 2006/42/EY mukaisesti.

Vakuutus koskee seuraavaa konetta:

Nurmijyrä 4,5m - 6,3m – 8,2m

Nykøbing, 29. Joulukuuta 2009



Villy Christiansen

Allekirjoittanut on oikeutettu kokoamaan yllä mainitun koneen teknisen dokumentoinnin.

Vastaanottotarkistus

Tarkista, ettei jyrässä ole vaurioita. Tarkista, ettei hydraulikkaletkuissa ole viiltoja tai puristusvaurioita. Tarkista myös, etteivät hydraulikan muut komponentit ole vaurioituneet kuljetuksen aikana.

Tarkista, ettei runkorakenne ole vaurioitunut. Tarkista myös, ettei jyrälohkoihin ole kohdistunut iskuja, jotka ovat voineet vaurioittaa jyrää tai kaksoistiivistettyjä kuulalaakereita.

Tarkista lopuksi, että kuljetuspyörät ovat kiristetyt ja kunnossa. Tarkistaa rengaspaineet: noin 3.8 bar.

Koneen nostamisen ja siirron ohjeita.

Kone on toimitettaessa täysin koottu. Erikoiskoulutettu kuljettajamme auttaa koneen siirtämisessä kuljetusajoneuvolta.

Kone siirretään kuljetusajoneuvolta traktorilla ramppien avulla, joista ohjeet antaa kuljettaja.

Kone ajetaan tasaiselle ja tukevalle alustalle.

Koneen toimintaselostus

Nurmijyrä on tarkoitettu nurmien ja ruohikkojen tiivistämiseen. Kun jyrä täytetään vedellä, saavutetaan suuri paino ja sen myötä tehokas ja tasainen nurmen tiivistys. Tiivistäminen varmistaa hyvän ja puhtaan nurmisadon ilman kiviä ja likaavaa maata. Kun jyrän eteen asennetaan kaksirivinen olkihara, irrottaa se uuden kasvuston peittämät kasvijätteet ja hienontaa ne. Nurmijyrä voidaan varustaa jousiladalla tai tasausladalla asennettuna olkiharana etupuolelle tasaamaan myyrän kekoja tai lehmien lantapaakkuja. Se estää maan tai lian pääsyn korjattavan rehun sekaan. Kun nurmijyrään asennetaan HE-VA Multi-Seeder kylvölaite, voidaan heinän- tai muuta siementä kylvää samanaikaisesti tiivistämisen yhteydessä. Tämä mahdollistaa nurmien uudelleen kylvön tai paikkauskylvön talvehtimisvaurioiden jälkeen.

Tekniset tiedot

		4,5 m	6,3 m	8,2 m
Nurmijyrä				
Työleveys	Cm	450	630	820
Sallittu enimmäisajonopeus	Km/h	25	25	25
Kokonaispaino	Kg	1560	3050	4210
Kokonaispaino vesitäytöllä	Kg	2830	5280	6420
Akselipaino	Kg	-	1980	3094
Akselipaino vesitäytöllä	Kg	-	3650	4720
Vetoaisapaino	Kg	-	810	1116
Vetoaisapaino vesitäytöllä	Kg	-	1550	1700
Kokonaispituus	Cm	409	409	550
Kokonaisleveys	Cm	222	242	244
Jyrän tilavuus	L	3 x 420 L	3 x 770 L	1 x 770 L 2 x 1130 L

Olkihara

Piikkiväli	Cm	9	9	9
------------	----	---	---	---

Tekniset vaatimukset

		4,5 m	6,3 m	8,2 m
Traktori				
Moottoriteho	kW (HK)	70 - 120	100 - 140	120 - 160

Sähköjärjestelmä

Akkujännite	V	12	12	12
Valopistoke		7 – napainen	7 – napainen	7 – napainen

Hydrauliikkajärjestelmä

Enimmäiskäyttöpaine	Bar	220	220	220
Pumpun tuotto	l/min	väh. 15	väh. 15	väh. 15

Öljytyyppi

Hydro Texaco HD32	Hydro Texaco HD32	Hydro Texaco HD32
Specifikation DIN 51524-3/ISO 11158 L-HV		

Turvallisuusohjeet

Yleistieoja

Älä aloita koneen käyttöä, jos koneen **läheisyydessä**¹ tai sen **vaara-alueella**², oleskelee henkilöitä.

Kun henkilöitä oleskelee koneen läheisyydessä (esim. säätöä, huoltoa, kytkentää tai irrottamista varten), on seuraavia ohjeita noudatettava:

1. Koneen pitää olla maahan laskettuna.
2. Hydrauliiikan paineet on vapautettava.
3. Traktorin moottori on pysäytettävä, virta-avain poistettava ja pysäköintijarru kytkettävä.
4. Kuljettajan pitää varmistaa, ettei kukaan oleskele koneen lähellä käytön aikana.

Useimmat, koneen käytön, kuljetuksen ja huollon aikana tapahtuvat onnettomuudet johtuvat siitä, ettei alkeellisimpiakaan turvaohjeita noudateta.

Tästä syystä on tärkeää, että kaikki henkilöt, jotka tekevät koneeseen toimenpiteitä, noudattavat turvaohjeita sekä muita koneen käytön ohjeita.

Konetta saa käyttää, huoltaa ja korjata ainoastaan sellaiset henkilöt, jotka tuntevat nämä työt ja jotka ovat tietoisia mahdollisista koneen aiheuttamista vaaratilanteista.

Maantiekuljetuksen ohjeita

Varmista ennen maatielle ajoa, että kone on kytketty traktoriin paikallisten, voimassa olevien säännösten mukaisesti (sallittu kokonaispaino, sallittu akselipaino, kuljetusleveys, ajovalot, varoituskilvet jne.).

Etuakselin kuormitus

Kun kone on kytketty traktoriin, on traktorin ajo-ominaisuudet tarkistettava. Varmista, että ohjaavilla pyörillä on riittävästi painoa. Etuakselipainon pitää olla vähintään 20 % traktorin painosta. Suurimpia sallittuja akseli- ja kokonaispainoja on aina noudatettava.


HUOM: Traktoriin kytketty raskas kone vaikuttaa traktorin ajo-, jarrutus- ja ohjausominaisuuksiin.

¹ Henkilöt koneen läheisyydessä: Henkilö, joka kokonaan tai osittain on koneen vaara-alueella.


² Vaara-alue: Koneen päällä ja alla sekä 4 m etäisyydellä koneesta.



Turvallisuus – ja muita koneen merkintöjä

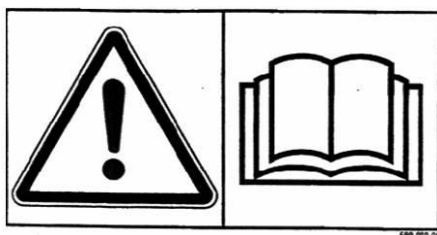


Tutustu huolellisesti käyttöohjeeseen ennen koneen käyttöä ja noudata siinä mainittuja turvaohjeita.

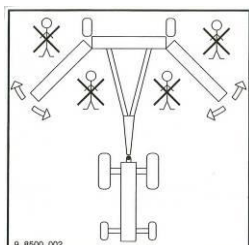

Varmista, ettei kukaan oleskele koneen vaara-alueella lohkojen taiton ja avaamisen aikana.



Koneen tyyppikilvessä on koneen mallinumero ja valmistusvuosi.

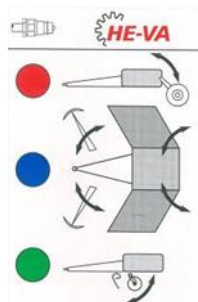


Koneen hydraulikkajärjestelmän tarra:

Punainen: Koneen keskilohkon nostohydrauliikka

Sininen: Lohkohydrauliikka (lohkojen taitto ja painonsiirtojärjestelmä)

Vihreä: Lisävarusteet

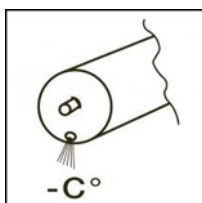

Tyhjennä jyrässä oleva vesi ennen kuin se jäätyy. Ellei näin tehdä, ei takuu vastaa aiheutuneista vaurioista.

HUSK - PLEASE NOTE -
ACHTUNG - ATTENTION
EFTERSPÄND BOLTE
TIGHTEN UP THE BOLTS
BOLZEN NACHZIEHEN
RESSERRER LES BOULONS

Kiristä pultit ja mutterit säännöllisesti. Ellei näin tehdä, ei takuu vastaa aiheutuneista vaurioista.

Maximum torque according to ISO 898-1 in Nm. w/lubricated thread			
Metric thread	Quality 8.8	Quality 10.9	Quality 12.9
M10	38	54	63
M12	66	95	110
M14	105	150	176
M16	164	235	274
M18	233	323	377
M20	331	458	535
M22	450	622	727
M24	572	791	925
Hub bolts M18x1,5 fine thread		360	
Hub bolts M22x1,5 fine thread		550	

Käyttöohjeet

KytKentä

Toimitettaessa jyrä on kuljetusasennossa. Jyrä kytetään traktoriin.

Tärkeää:

Tarkista, että traktorin vetokoukun korkeus on 500 - 550 mm
--

Nosta tukijalka ylös ja aseta se vetopuomin kuljetustukien varaan. Liitä kaikki hydraulikkaletkut.

Jyrä vaatii kaksi 2-toimista hydrauliiikan venttiiliä.

Keskilohkon nostosylinterin letkuissa on punaiset nippusiteet.

Lohkosylinterin letkuissa on siniset nippusiteet.

Olkiharan sylinterin (lisävar.) letkuissa on vihreät nippusiteet.

Power plug and control box for weight transfer protection are putted into the cabin (8.2m models)

Koneen lohkojen avaus ja taitto

1. Varmista, että tehtaalla letkuihin asennetut koirasliittimet sopivat traktorin naarasliittimiin.
2. Contact on the control box for weight transfer protection activated (diode lights up)
3. Kytke paine keskilohkon sylinteriin (punainen) niin, että sivulohkot nousevat irti kuljetustuesta.
4. Kytke paine lohkosylintereihin (sininen) niin, että sivulohkot avautuvat kokonaan sylintereiden ollessa lyhyimmässä asennossa.
5. Vapauta nyt keskilohkon sylinterin (punainen) paine, jolloin jyrä laskeutuu eteenpäin, alas käyttöasentoon. Vapauta hallintavipu, kun jyrä on käyttöasennossa.
6. Contact on the control box for weight transfer protection de-activated (diode off)
7. Kytke paine sivulohkojen sylintereihin (sininen) niin, että lohkot painautuvat maata vasten ja painemittarissa näkyy seuraavalla sivulla olevan taulukon mukainen hydrauliiikan paine. Näin keskilohkon ja sivulohkojen välille saadaan oikea paine.

Siirto käyttöasennosta kuljetusasentoon

8. Contact on the control box for weight transfer protection activated (diode lights up)
9. Ensin sivulohkot nostetaan irti maasta paineistamalla lohkosylinterit (sininen).
10. Keskilohkoa nostetaan ja käännetään taaksepäin. Se lukitaan paineistamalla kääntösylinteri (punainen).
11. Tämän jälkeen paineistetaan lohkosylinterit, jolloin sivulohkot kääntyvät eteen, vasten vetopuomissa olevia kuljetustukia.
12. Kun molemmat lohkot ovat samansuuntaiset vetopuomin kanssa, ne lasketaan alas kuljetustukien varaan vapauttamalla kääntösylinterin (punainen) paine. Tämä toimenpide tehdään huolellisesti. Tärkeää: Mihinkään sylinteriin ei saa kytkeä painetta kuljetuksen aikana.
13. Contact on the control box for weight transfer protection de-activated (diode off)
Important: You must not pressurise any cylinders in transport position.
14. Paineet vapautuvat kaikista hydraulikkaletkuista ja kone on valmiina kuljetukseen.



Asetukset ja säädöt

Painon siirto

Painon siirtoa säädetään riippuen jyrissä olevasta vesimäärästä. Painon siirtoa säädetään kytkemällä hydraulikkajärjestelmän (sininen) paine.

Paine on luettavissa koneen painemittarista.

Waterlevel / Bar	4,5 m	6,3 m	8,2 m
1/1	15	30	40-45
3/4	15	30	40-45
1/2	15	30	40-45
1/4	15	30	40-45

HUOM: Painonsiirtojärjestelmää voidaan kuormittaa enintään 100 bar paineella.

Olkihara


Olkiharaa nostetaan ja lasketaan vihreällä värillä merkityn hydrauliiikan avulla.

Käytön aikana olkiharaa voidaan nostaa ja laskea tarpeen mukaan. On kuitenkin huomattava, ettei haraa saa käyttää liian syvällä, sillä se kantaa muuten osan jyrän painosta.

Suosittelava olkiharän käyttösyvyys: 25 mm jyrää syvemmillä.

Olkiharän pitää toimia vaaka-asennossa kun kone on käyttöasennossa. Tämä säädetään säätövarsilla, löysäämällä varsien mutterit ja kiristämällä vastakkaista puolta ①.

Piikit voivat kulua noin 200 mm. Joustavuus kuitenkin vähenee kulumisen myötä ja vaihto voi olla ajankohtainen aikaisemmin.

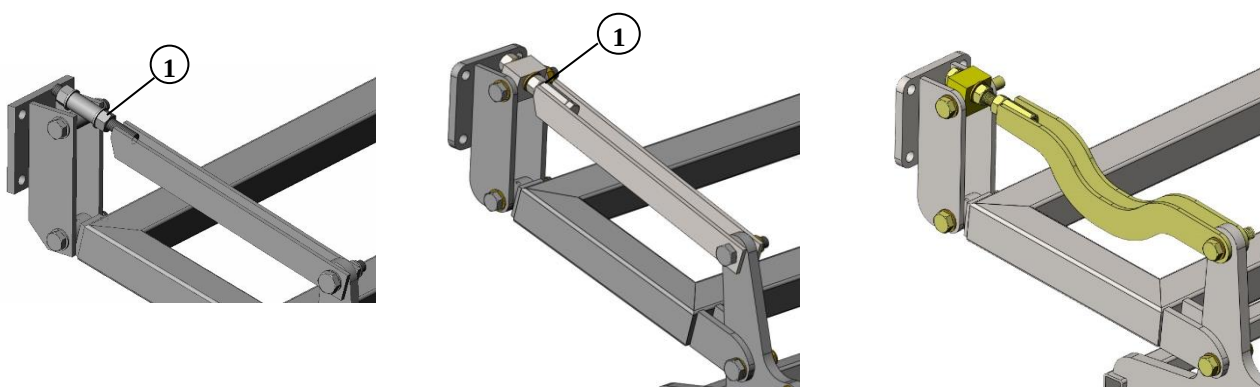


From machine number 341717

Tasauslata

The levelling board is raised in proportion to the wear and tear of the tines. This is performed by loosening 2 nuts (pos. 1), and hereafter screwing with a 19 mm spanner on the thread spindle (pos. 2), which determines the height. When the desired height is reached, the 2 nuts (pos. 1), are tightened again.

Be sure that all adjusters are set the same otherwise the levelling board will operate unevenly. This is easily done by measuring the length of the spindle.

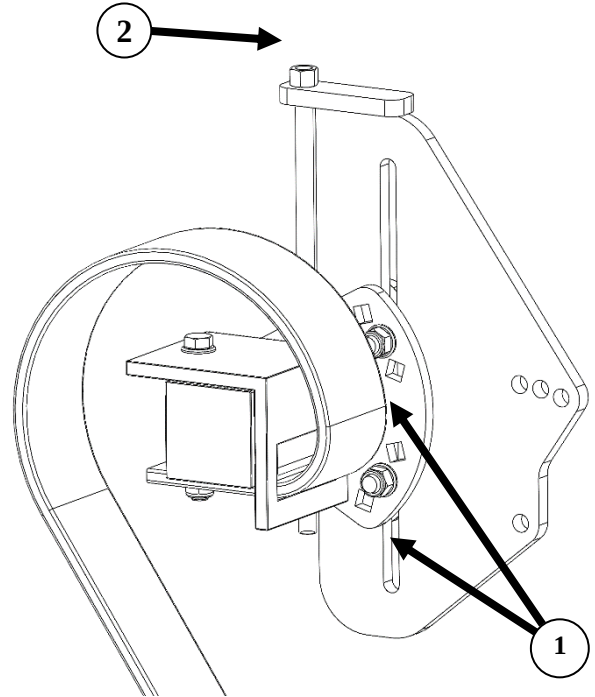


Jyrän kaavin

6.3 m

The scrapers are bolted on the end plates. In order to adjust the scraper bar loosen the 2 bolts (pos. 1) at the top and push the scraper bar (pos. 2) against the roller. Please be aware that the scraper bar is to be placed 5 – 10 mm from the roller.

8.2 m

The scrapers are adjusted in the same way as for 6.3 m. In the middle of the side sections 2 bolts are placed, which are to be loosened too.

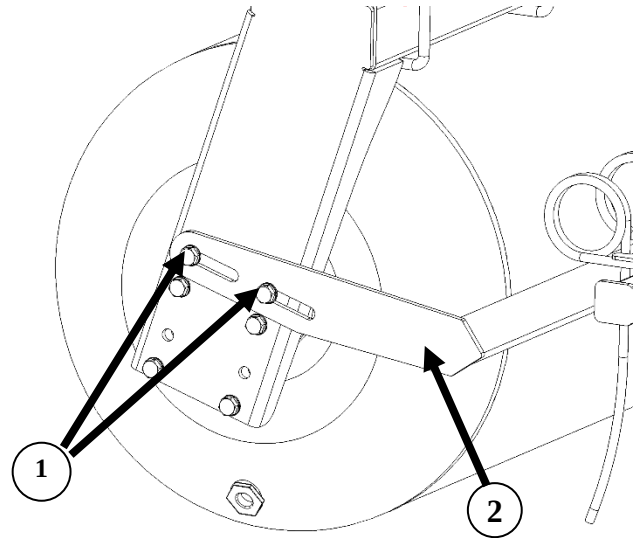

Huolto

Voitelu

Tärkeää:

Noin 10 käyttötunnin välein pyörät, kuulalaakerit ja rajoitinrenkaat kiristetään. Letkut, liitokset ja sylinterit tarkistetaan, ettei niissä ole vuotoja. tarvittaessa tehdään kiristys.

Noin 10 käyttötunnin välein voidellaan kaikki sivulohkojen liikkuvat osat, kuten myös lohkosylinterien 3 voitelukohtaa. 30 käyttötunnin välein voidellaan keskilohkon nostosylinterin tapit ja vetoaisan 3 tappia.
Jyrän laakerit voidellaan 100 käyttötunnin välein ja/tai pesun jälkeen.

Tärkeää:

Hydrauliikkajärjestelmä on täytetty Hydro Texaco HD32 öljyllä.

Käyttökauden jälkeen jyrä puhdistetaan ja voidellaan rasvalla ja öljyllä.

Tärkeää:

Sylinterin männänvarret voidellaan rasvalla ennen pitempiaikaista säilytystä.

Korjaukset

Korjauksessa käytetään ainoastaan HE-VA -alkuperäisosa.




Jousilata

Jousilata vaatii yhden kaksitoimisen hydraulikkaöljyn ulosoton. Jousien kulmaa ja tasaustehoa säädetään hydraulisesti traktorin ohjaamosta. Työsyvyys säädetään käsin. Jousiladan piikkien korkeutta voidaan säätää. Säädön seurauksena piikin kulma maata vasten muuttuu. Jouset toimivat toistaan riippumatta mutta ne voidaan myös lukita yhteen tangon avulla (lisävaruste) jos ladalta vaaditaan parempaa tasausominaisuutta. Muutos tehdään helposti ja nopeasti ilman työkaluja.

Jousiladan sylinterin asennus

Sylinterit on asennettu alla esitetyllä tavalla. On tärkeää, että sylinterit asennetaan oikein niin, että sylintereihin kohdistuva momentti on oikea.

Jousiladan sylinterit asennetaan reikiin 2 ja 2 b. Sen lisäksi jousiladan piikkien kärjet sijoitetaan aivan alas, jolloin ne on kiinnitetty pulteilla alempiin reikiin.

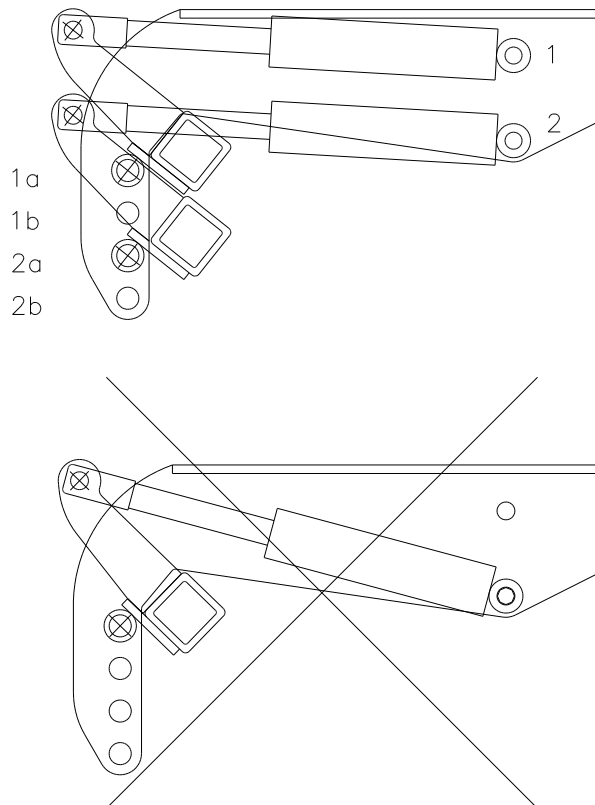


Spare parts list (Roller)

How to read the Spare parts list


The exploded drawings are always ahead of the belonging parts table. Pay attention to some part tables which are continued to the next page. Also, some drawings are on two pages, one after the other.

Front - and back drawbar 4,5 m

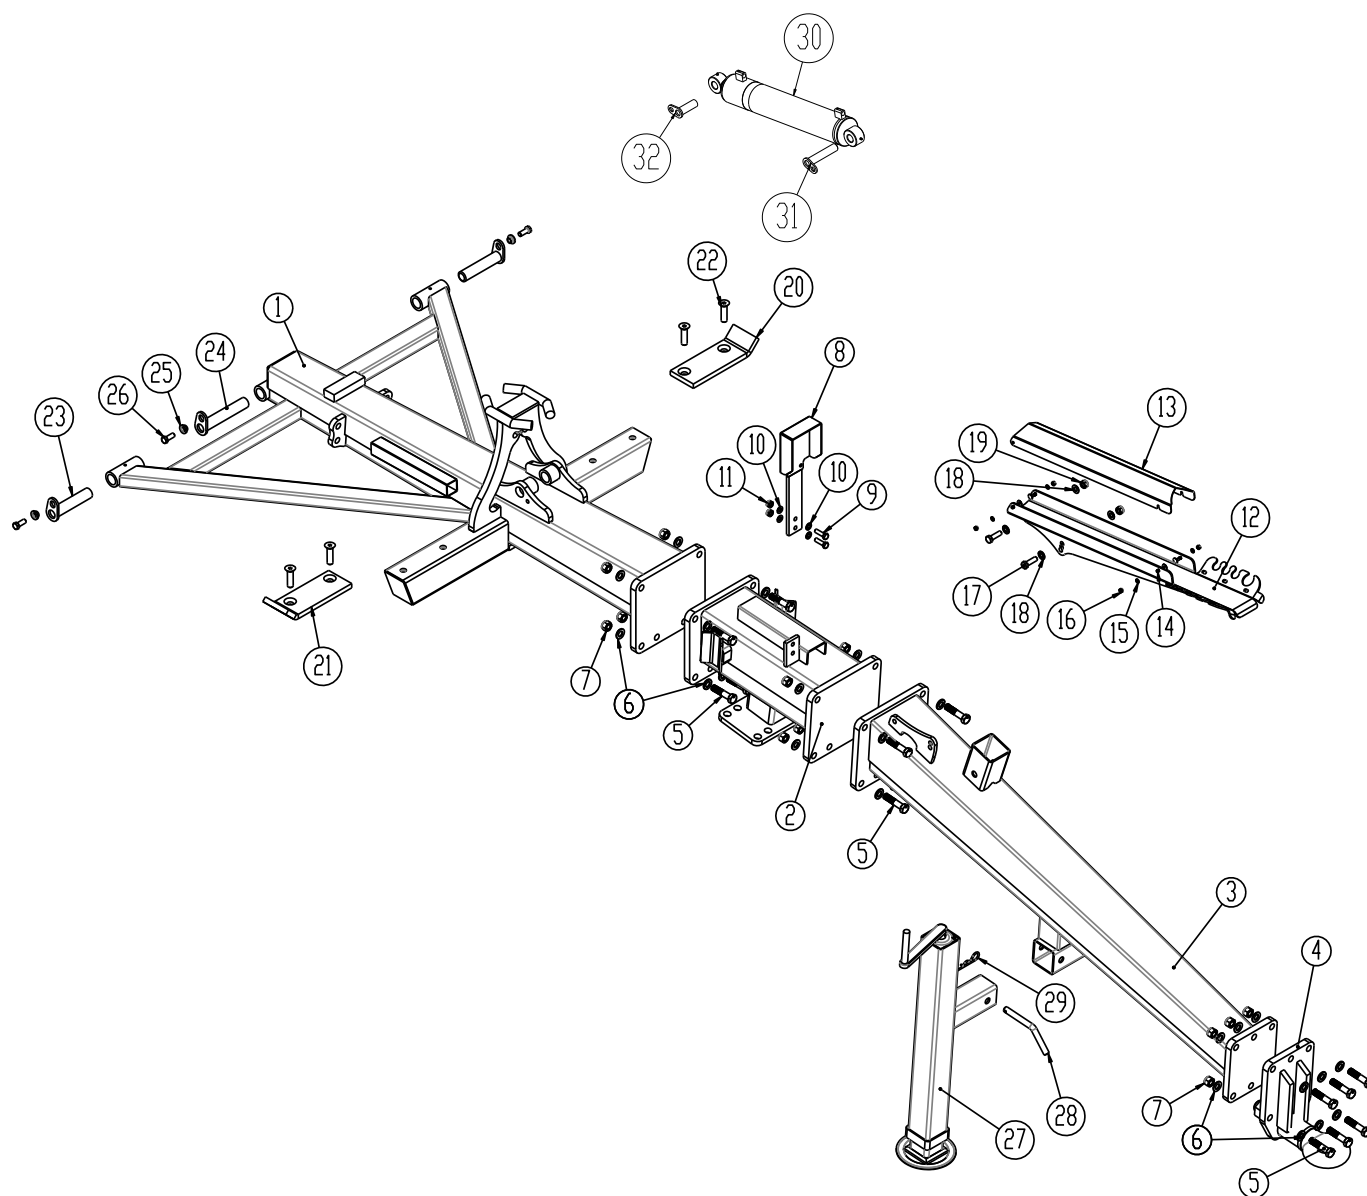


Pos.	Item no.	Designation	4,5m
1	630536200	Back drawbar	1
2	630286135	Drawbar extension 500 mm	1
3	630757032	Drawbar	1
4	630757028	Towing eye complete	1
5	690103130	Bolt M16x70 10.9	18
6	0272290	Facet washer Ø16 DIN 125B	36
7	0264090	Self-locking nut M16	18
8	630941066	Manometer holder	1
9	0235060	Set bolt M10x35 8.8	2
10	0272260	Facet washer Ø10 DIN 125B	4
11	0264060	Self-locking nut M10	2
12	7345001	Hose parking main part	1
13	7345003	Hose parking upper part	1
	7345010	Hose parking complete	
14	0246060	Carriage bolt M6x16 Fzb DIN 603	4
15	0272240	Facet washer Ø6 Fzb	4
16	0264040	Self-locking nut M6	4
17	0235360	Set bolt M12x40 8.8	2
18	0272270	Facet washer Ø12 Fzb DIN 125B	4
19	0264070	Self-locking nut M12	2
20	630762045	Transport bracket left	1
21	630762048	Transport bracket right	1
22	0229000	Bolt M16x60 countersinck DIN 7991	4
23	69430140G	Pin Ø30 L=140	2
24	69430170G	Pin Ø30 L=170	1
25	630532600	Lock bushing for pinhead	2
26	0235340	Bolt M12x30 8.8 Fzb	3
27	690141095	Support leg	1
28	69216094A	Pin Ø16 L=94	1
29	0377400	R-clip Ø4	1
30	690200109	Tip-Cylinder 100/50x600 Hydrflex	1
	690200284	Gasket set 100/50 Hydrflex	
31	69430150G	Pin Ø30 L=150	1
32	69430090G	Pin Ø30 L=90	1

Front and rear drawbar 6,3 - 8,2m before May 2010, before machine no. 341713

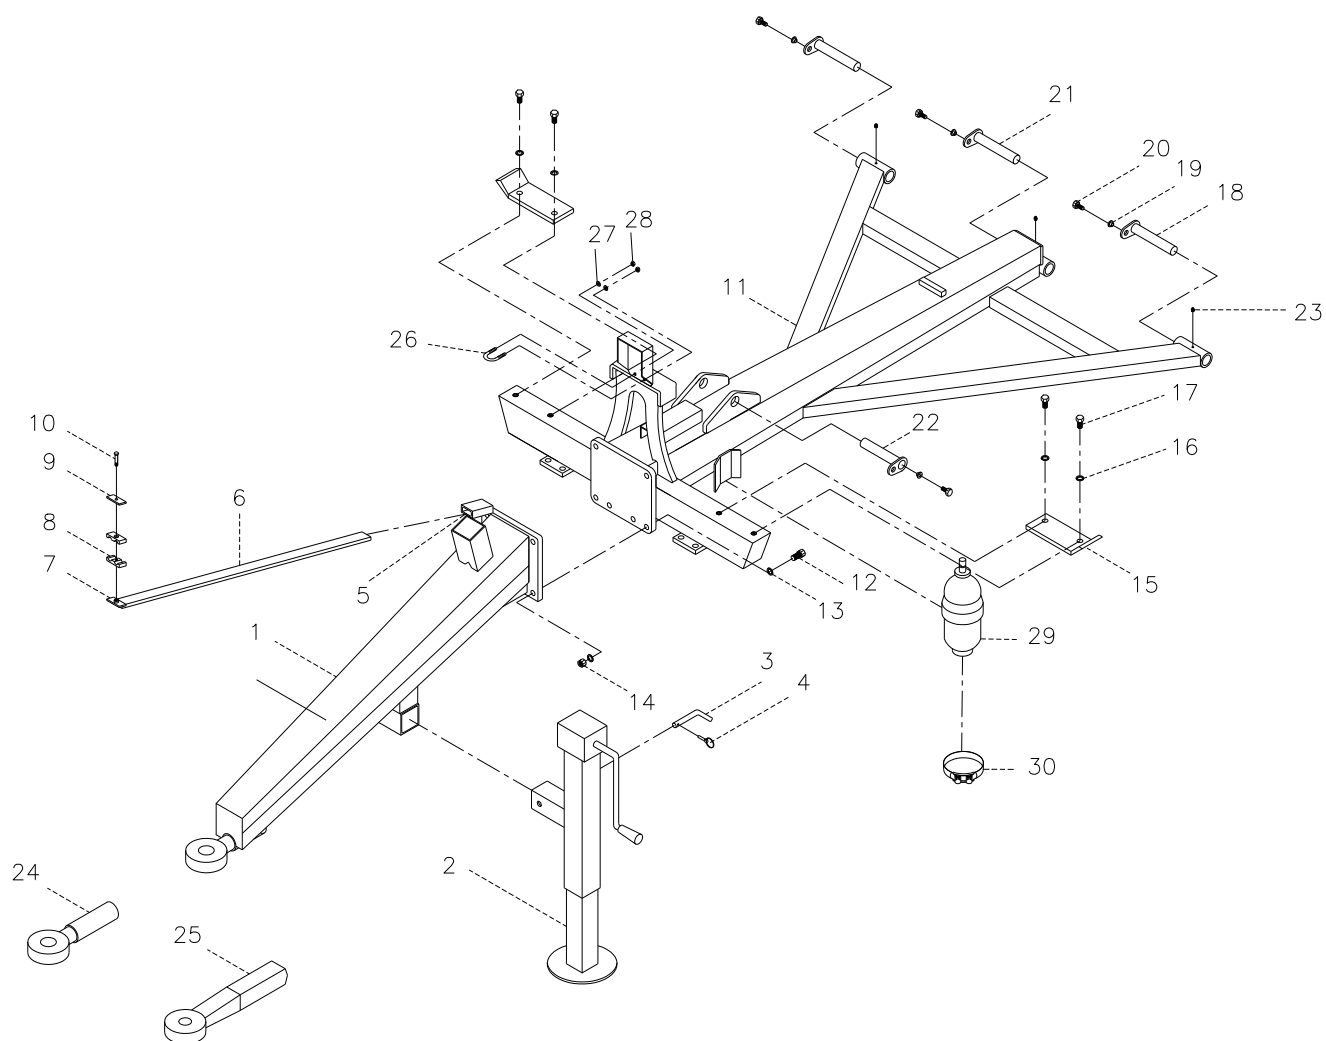

Pos.	Item no.	Designation	6.3m	8.2m
1	630771010	Front drawbar (Danish)	1	0
1	630831000	Front drawbar (Danish)	0	1
2	690141102	Supporting leg 6000 kg	1	1
3	69516094A	Pin Ø16 L=94	1	1
4	690133005	R-clip Ø4	1	1
5	690103075	Bolt M10x25	1	1
6	630771200	Parking device for hose	1	1
7	690210212	Welding plate for tube-support double	1	1
8	690210210	Tube-support double Ø14/Ø14	2	2
9	690210211	Top plate for tube-support double	1	1
10	690210213	Screw for tube-support double	1	1
11	630327110	Back drawbar	1	0
11	630347500	Back drawbar	0	1
12	690103190	Bolt M16x65	1	0
12	690103173	Bolt M20x70 10.9	0	1
13	0272290	Facet plate Ø16	1	0
13	0272310	Facet plate Ø20	0	1
14	0264090	Self-locking nut M16	1	1
14	0264110	Self-locking nut M20	0	1
15	630762045	Transport bracket, left	1	1
15a	630762048	Transport bracket, right	1	1
16	690119008	Spring washer Ø16	2	2
17	690103127	Bolt M16x50	2	2
18	69435175G	Pin Ø35 L=175	2	2
19	630532600	Lock-bush for pin head	4	4
20	690101101	Bolt M12x25	4	4
21	69435185G	Pin Ø35 L=185	1	1
22	69435175G	Pin Ø35 L=175	1	1
23	0432510	Lubricating nipple M8	3	3
24	690141211	Towing eye (Danish)	1	1
25	690105003	Towing eye (German)	1	1
26	690110003	U-bolt M8x60xØ35	1	1
27	0272250	Facet plate ø8	2	2
28	0264050	M8 Self-locking nut	2	2
29	690206403	Accumulator H700R 15 bar	1	1
29a	690206410	Accumulator H700R 40 bar	1	1
30	690206511	Clamp for accumulator	2	2

Front drawbar from june 2010 Machine no. 341713

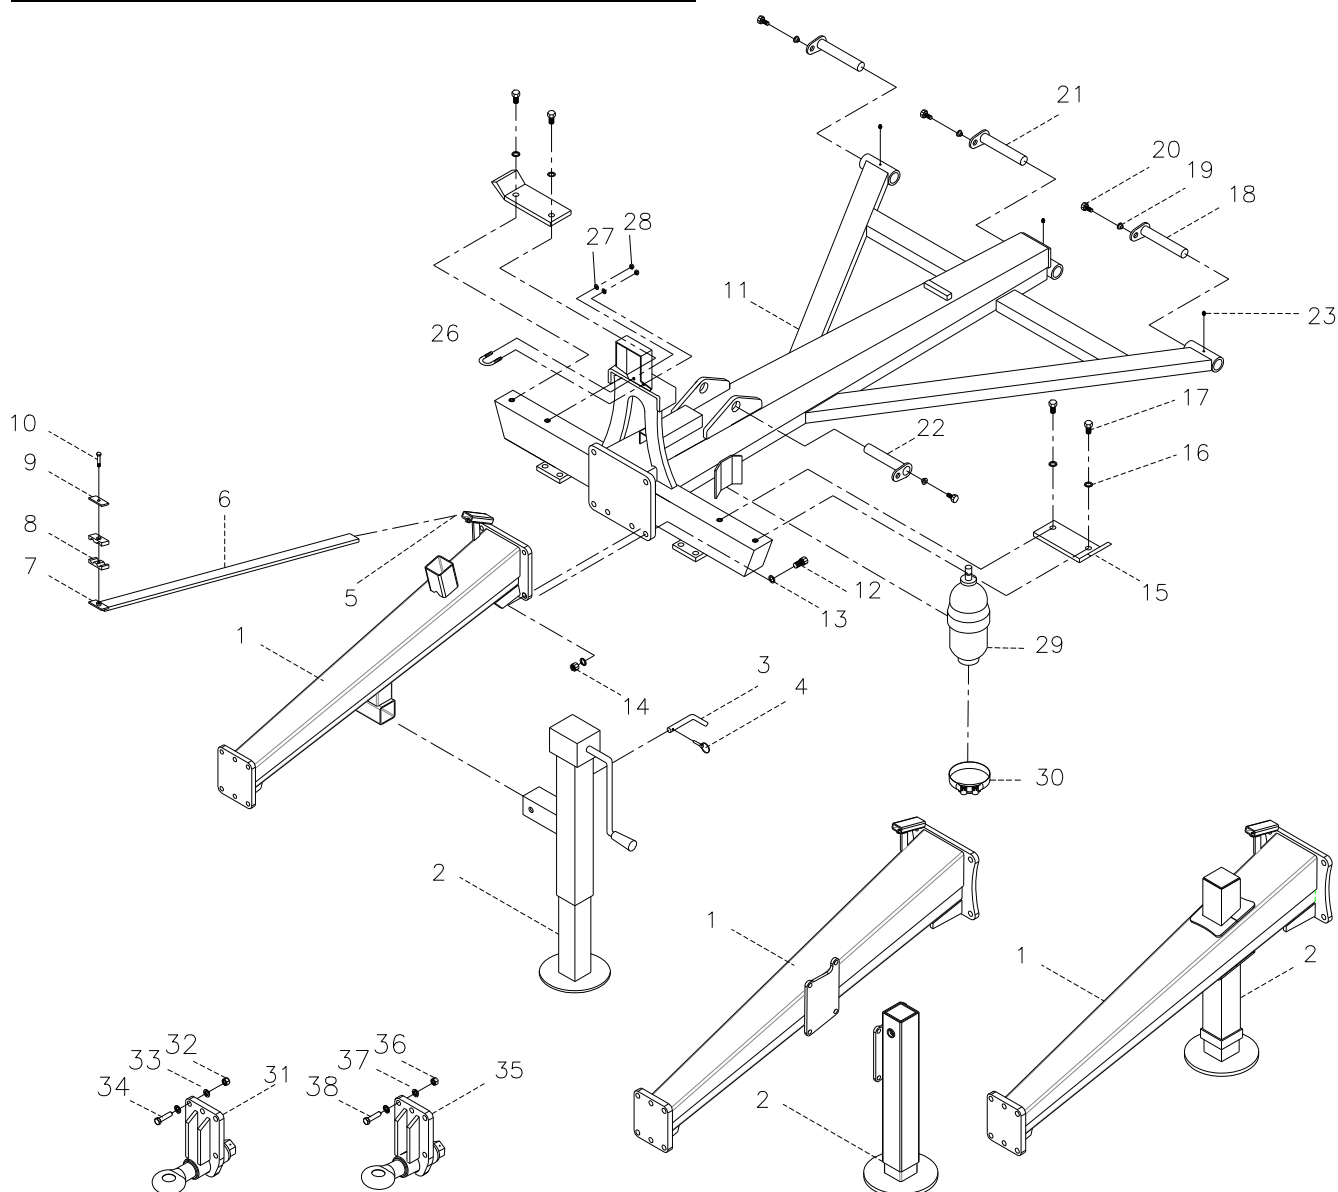


Pos.	Item no.	Designation	6,3m	8,2m
1	630771000	Front drawbar	1	0
1	630771020	Front drawbar from machine number 344524	1	
1	630831015	Front drawbar from machine number 341713	0	1
1	630831021	Front drawbar w/centre mounted supporting leg from machine number 342015		1
2	690141102	Supporting leg 6000 kg	1	1
2	690141099	Supporting leg hydraulic from machine number 341713		1
2	690141098	Supporting leg hydraulic from machine number 342015		1
3	69516094A	Pin Ø16 L=94	1	1
4	0377400	R-clip Ø4	1	1
5	690103075	Bolt M10x25	1	1
6	630771200	Parking device for hose	1	1
7	690210212	Welding plate for tube-support double	1	1

The tabel continues →


8	690210210	Tube-support double Ø14/Ø14	2	2
9	690210211	Top plate for tube-support double	1	1
10	690210213	Screw for tube-support double	1	1
11	630327110	Back drawbar	1	0
11	630327515	Back drawbar from machine number 344524	1	0
11	630347500	Back drawbar	0	1
12	0235851	Bolt M16x65 10.9	6	0
12	690103173	Bolt M20x70 10.9 from machine number 344524	6	
12	690103173	Bolt M20x70 10.9	0	6
13	0272290	Facet plate Ø16	12	0
13	0272310	Facet plate Ø20 from machine number 344524	12	
13	0272310	Facet plate Ø20	0	12
14	0264090	Self-locking nut M16	6	6
14	0264110	Self-locking nut M20 from machine number 344524	6	
14	0264110	Self-locking nut M20	0	1
15	630762045	Transport bracket, left	1	1
15a	630762048	Transport bracket, right	1	1
16	690119008	Spring washer Ø16	2	2
17	690103127	Bolt M16x50	2	2
18	69435175G	Pin Ø35 L=175	2	2
19	630532600	Lock-bush for pin head	4	4
20	690101101	Bolt M12x25	4	4
21	69435185G	Pin Ø35 L=185	1	1
22	69435175G	Pin Ø35 L=175	1	1
23	0432510	Lubricating nipple M8	3	3
26	690110003	U-bolt M8x60xØ35	1	1
27	0272250	Facet plate ø8	2	2
28	0264050	M8 Self-locking nut	2	2
29	690206403	Akkumulator H700R 15 bar	1	1
29a	690206410	Akkumulator H700R 40 bar	1	1
30	690206511	Clamp for accumulator	2	2
31	630757028	Drawbar complete Ø50 pivotal M16 bolte	1	0
31a	690141211	Towing eye Ø50 pivotal M16 bolte	1	
32	0264090	Self-locking nut M16	6	0
33	0272290	Facet plate Ø16	12	0
34	0235851	Bolt M16x65 10.9	6	0
35	630757017	Drawbar complete Ø50 pivotal M20 bolte	0	1
35a	690105006	Towing eye Ø50 pivotal M20 bolte		1
36	0272310	Self-locking nut M20	0	6
37	690113011	Facet plate Ø20	0	12
38	690103069	Bolt M20x80 10.9	0	6

Hose parking from may 2016

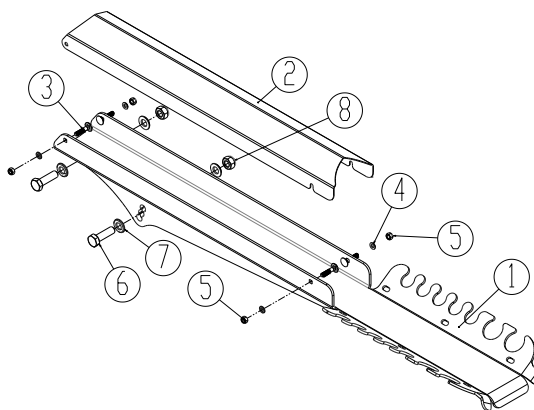

Pos.	Item no.	Designation	6.3-8,2m
1	7345006	Hose parking large model	1
2	7345003	Hose parking upper part	1
3	0246060	Carriage bolt M6x16 Fzb DIN 603	4
4	0272240	Faceted washer Ø6 Fzb	4
5	0264040	Self-locking nut M6	4
6	0235360	Set bolt M12x40 8.8	2
7	0272270	Faceted washer Ø12 Fzb DIN 125B	4
8	0264070	Self-locking nut M12	2


Front- and back drawbar, From machine no. 347534

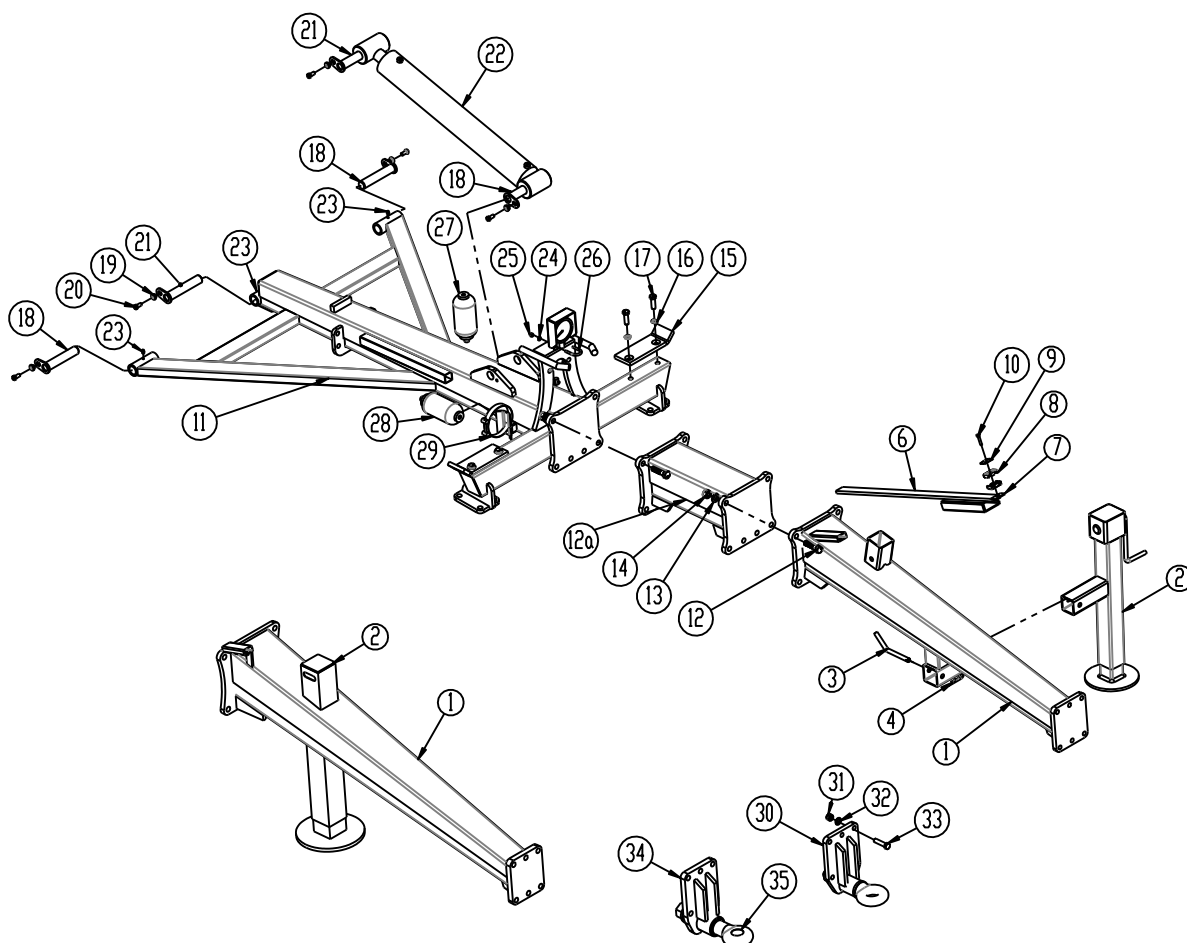

Pos.	Item no.	Designation	6.3m	8.2m
1	630771020	Front drawbar	1	0
1	630831021	Front drawbar	0	1
2	690141102	Supporting leg 6000 kg	1	0
2	690141098	Supporting leg, Hydraulic	0	1
3	69516094A	Pin Ø16 L=94	1	1
4	0377400	R-clip Ø4	1	1
5	690103075	Bolt M10x25	1	1
6	630771200	Parking device for hose	1	1
7	690210212	Welding plate for tube-support double	1	1
8	690210210	Tube-support double Ø14/Ø14	2	2
9	690210211	Top plate for tube-support double	1	1
10	690210213	Screw for tube-support double	1	1
11	630330001	Back drawbar From serial no. 347070	1	0
11	630367136	Back drawbar, From serial no. 347534	0	1
12	690103173	Bolt M20x70 10.9	12	12
12a	690779020	Drawbar extension 500mm	1	1
13	0272310	Faceted washer Ø20	12	12
14	0264110	Self-locking nut M20	12	12
15	630762045	Transport bracket Right	1	1
15	630762048	Transport bracket Left	1	1
16	690119008	Spring washer Ø16	2	2
17	690103127	Bolt M16x50	2	2
18	69435175G	Pin Ø35 L=175	3	3
19	630532600	Lock-bush for pin head	5	5
20	690101101	Bolt M12x25 8.8	5	5
21	69435185G	Pin Ø35 L=185	2	2
22	690200020	Tip cylinder Ø100/50 x 700 mm, Ø35 mm Replaced by 690200310	1	
	690200285	Gasket set 100/50mm, Laizhou		
22	690200310	Tip cylinder Ø110/50x700 mm, Ø35/Ø35 mm	1	
	690200311	Gasket set 110/50, Laizhou		
22	690200315	Tip cylinder Ø110/60 x 1000 mm, Ø35/Ø35 mm		1
	690200316	Gasket set 110/60, Laizhou		
23	0432510	Lubricating nipple M8	3	3
24	690110003	U-bolt M8x60xØ35	1	1
25	0272250	Facet plate ø8	2	2
26	0264050	Self-locking nut M8	2	2
27	690206403	Accumulator H700R 15 bar	1	1
28	690206410	Accumulator H700R 40 bar	1	1
29	690206511	Clamp for accumulator	2	2
30	630757028	Towing eye complete Ø50, turnable, M16 bolts	1	
31	0264090	Self-locking nut M16	6	
31	0264110	Self-locking nut M20		6
32	0272290	Facet washer Ø16	12	
32	0272310	Facetwasher Ø20		12
33	0235851	Bolt M16x65 10.9	6	
33	690103173	Bolt M20x70 10.9		6
34	630757017	Towing eye complete, Ø50, turnable, heavy duty, M20 bolte		1
35	690141211	Towing eye Ø50, turnable, heavy duty		




Transport bracket, only when Starrings are mounted, all models

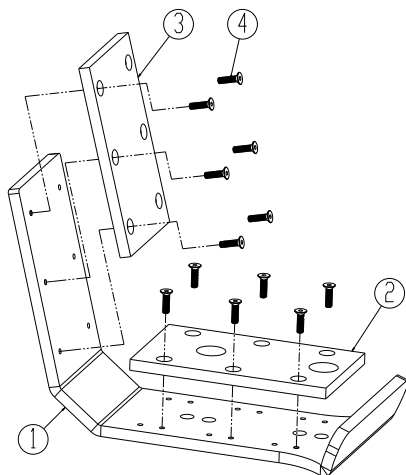


Pos.	Item no.	Designation	Qty.
1	1210334	Transport bracket	2
2	1210333	Plastic PEHD-300 15 mm black, horizontal	2
3	1210336	Plastic PEHD-300 15 mm black, vertical	2
4	0228032	Bolt countersunk M8x30 8.8 fzb DIN 7991	24

Middle section before machine 344648

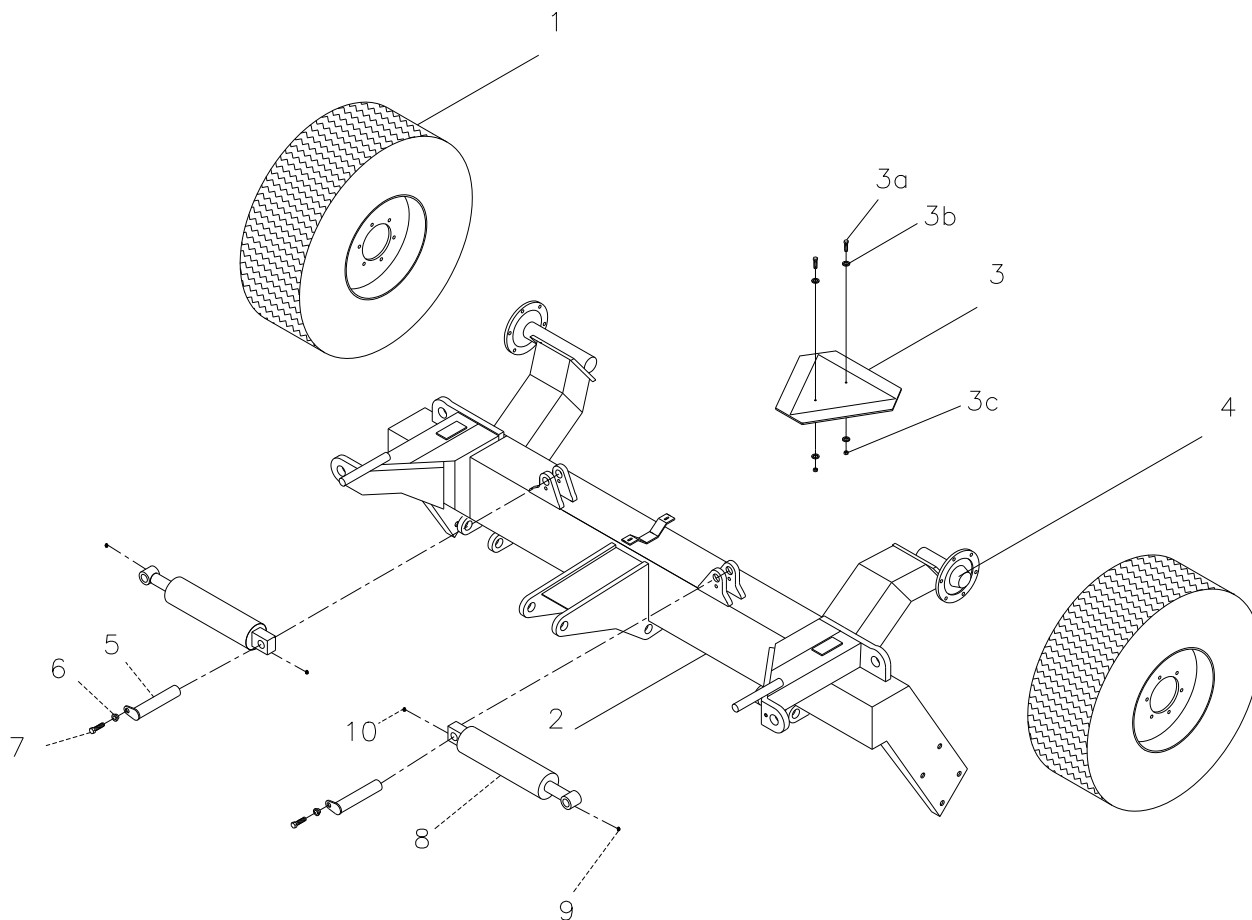


Pos.	Item no.	Designation	4,5m	6.3m	8.2m
1	690141310	Wheel 10.0/75x15,3-10 ply	2		
1	690141335	Wheel 400 / 60 x 15,5 14 ply		2	2
2	630536300	Middle section From machine no. 347231	1		
2	630327100	Middle section		1	
2	630347600	Middle section			1
2	630347602	Middle section From machine no. 344648			1
3	0521010	Warning triangle	1	1	1
3a	0233860	Bolt M5x20	2	2	2
3b	0272230	Faceted washer Ø5	4	4	4
3c	0264030	Self-locking nut M5	2	2	2
4	690141025	Hub 1700 kg - TVZ, see cover at hub for identification	2		
4	0395440	Hub 1700 kg - He-va, see cover at hub for identification	2		
4	690141030	Hub 2500 kg. - TVZ, see cover at hub for identification		2	2
4	0395442	Hub 2500 kg. - He-va, see cover at hub for identification		2	2
4	7297579	Nav m/bremse 3700 kg TVZ		2	2
4a	690141039	Hub bolt M18x1,5x49	12	12	12
4b	690141055	Hub nut M18	12	12	12
4f	690141314	Hub cover ø78 1700 kg hub - TVZ see cover for identif.	2		
4f	0395436	Hub cover ø78 1700 kg hub - He-va see cover for identif.	2		
4f	690141033	Hub cover ø80 2500 kg hub - TVZ see cover for identif.		2	2
4f	0395437	Hub cover ø88 2500 kg hub - He-va see cover for identif.		2	2
5	69430090G	Pin ø30 L=90	1		
5	69430100G	Pin ø30 L=100		2	2
6	630532600	Lock bush for pin head	1	2	2
7	690101101	Bolt M12x25	1	2	2
8	630286167	Traverse cylinder ø70/ø40-600 (not shown)	1		
8a	690200068	Gasket set 70/40 mm Laizhou			
8	630762047	Traverse cylinder 90/40 - 280		2	
8a	690200274	Gasket set 90/40			
8	690200340	Traverse cylinder 100/40 x 285			2
8a	690200290	Gasket set 100/40			
9	0432100	Lubricating nipple M6		2	2
10	0432510	Lubricating nipple M8		2	2

Middle section after machine no. 344648

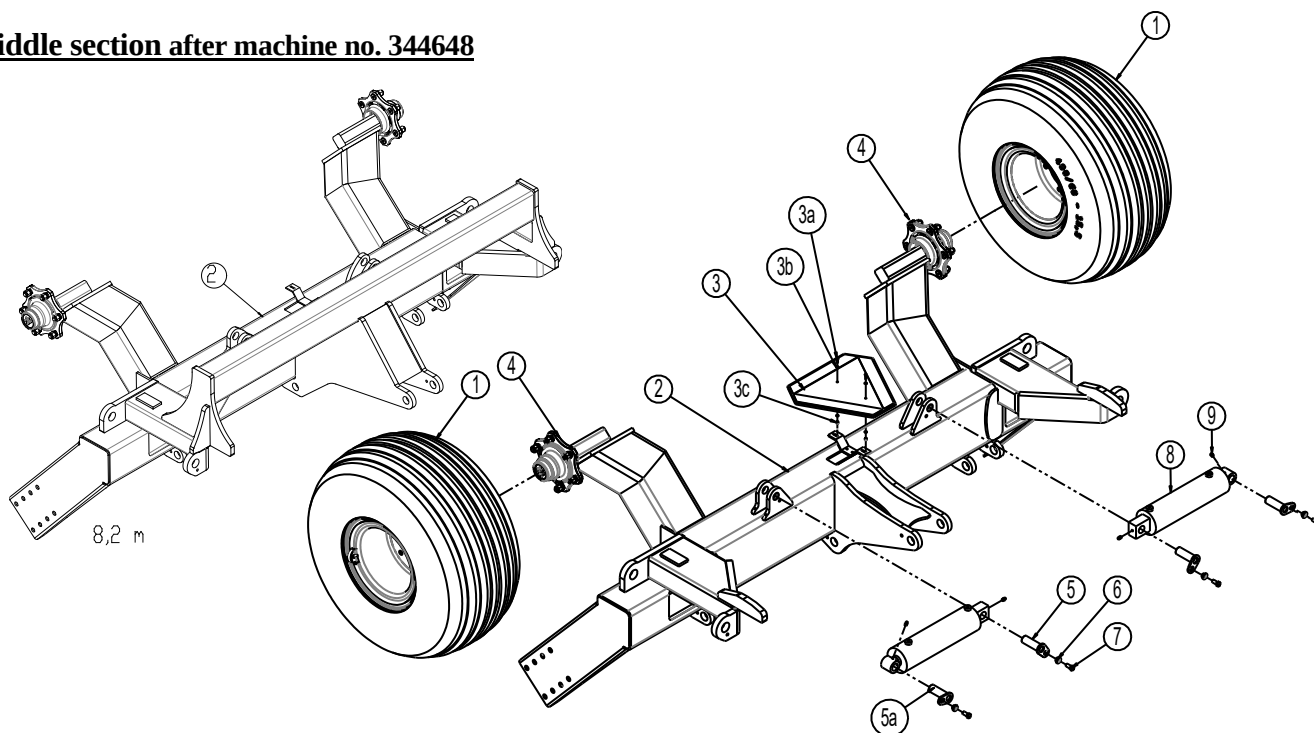


Pos.	Item no.	Designation	6,3m	8,2m
1	690141335	Wheel 400 / 60 x 15,5 14 PLY	2	2
2	630330065	Middle section	1	
2	630347602	Middle section		1
2	630327615	Middle section with brake	1	0
2	1200847	Middle section with brake	0	1
3	0521010	Warning triangle	1	1
3a	0233860	Bolt M5x20	2	2
3b	0272230	Facet washer Ø5	4	4
3c	0264030	Safety nut M5	2	2
4	690141030	Hub 2500 kg. - TVZ, see cover at hub for identification	2	2
4	0395442	Hub 2500 kg. - He-va, see cover at hub for identification	2	2
4	7297579	Hub with brake 3700 kg TVZ	2	2
4	690141044	Hub with brake 4500 kg - TVZ	2	2
4a	690141039	Hub bolt M18x1,5x49	12	12
4b	690141055	Hub nut M18	12	12
4f	690141033	Hub cap ø80 (2500 kg hub) - TVZ see cover for identtif.	2	2
4f	0395437	Hub cover ø88 2500 kg hub - He-va see cover for identtif.	2	2
5	69430090G	Pin Ø30 L=90	2	
5a	69430090G	Pin Ø30 L=90	2	
5	69435100G	Pin Ø35 L=100		2
5a	69435105G	Pin Ø35 L=105		2
6	630532600	Lock bush for pin head	2	2
7	690101101	Bolt M12x25	2	2
8	630762047	Traverse cylinder 90/40 – 280	2	
8a	690200274	Gasket set 90/40		
8	690200340	Traverse cylinder 100/40x285 Ø35/Ø35		2
8a	690200290	Gasket set 100/40		
9	690136029	Lubricating nipple M8	2	2

Wing & side section before serial no: 347070

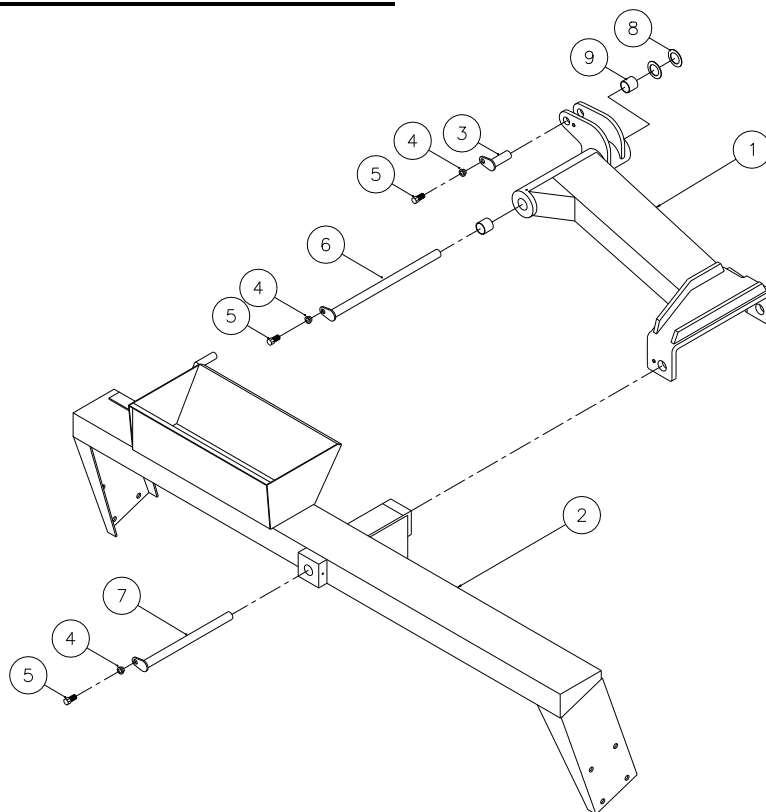


Pos.	Item no.	Designation	6.3m	8.2m
1	630773000	Wing suspension right	1	
1	630773100	Wing suspension left	1	
1	630347710	Wing suspension right Before serial no. 344648		1
1	630347712	Wing suspension right After serial no. 344648		1
1	630347700	Wing suspension left Before serial no. 344648		1
1	630347702	Wing suspension left After serial no. 344648		1
2	630774000	Wing section right Before serial no. 347070	1	
2	630774100	Wing section left Before serial no. 347070	1	
2	630347810	Wing section right Before serial no. 347070		1
2	630347800	Wing section left Before serial no. 347070		1
3	69430090G	Pin $\varnothing 30$ L=90	2	2
4	630532600	Lock bush for pin head	6	6
5	0235330	Bolt M12x25	6	6
6	69440525G	Pin $\varnothing 40$ L=525	2	2
7	69440508G	Pin $\varnothing 40$ L=508	2	
7	69440550G	Pin $\varnothing 40$ L=550		2
8	690140714	Spacer disc $\varnothing 42/\varnothing 66 \times 1,5$	4	4
9	690140715	Bushing $\varnothing 40/\varnothing 44$ L=40	4	4

Wing section right / left After serial no. 347070

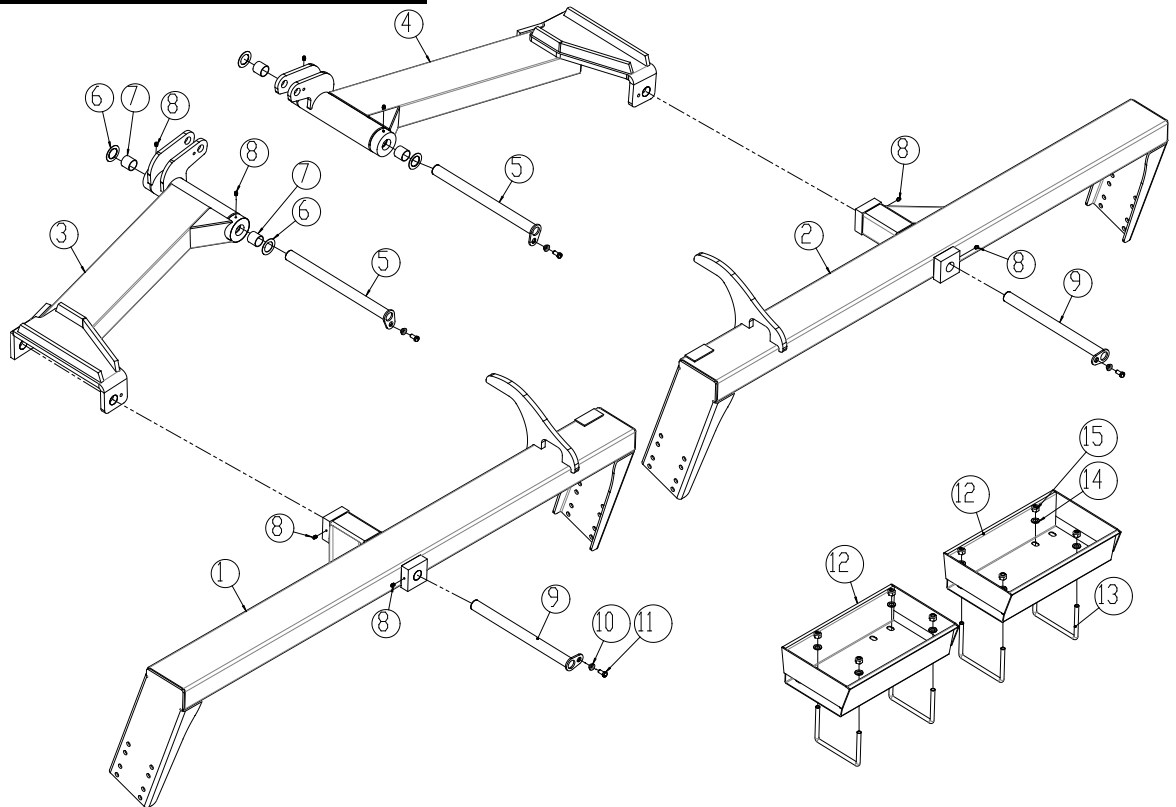


Wing suspension and folding cylinder 4,5m

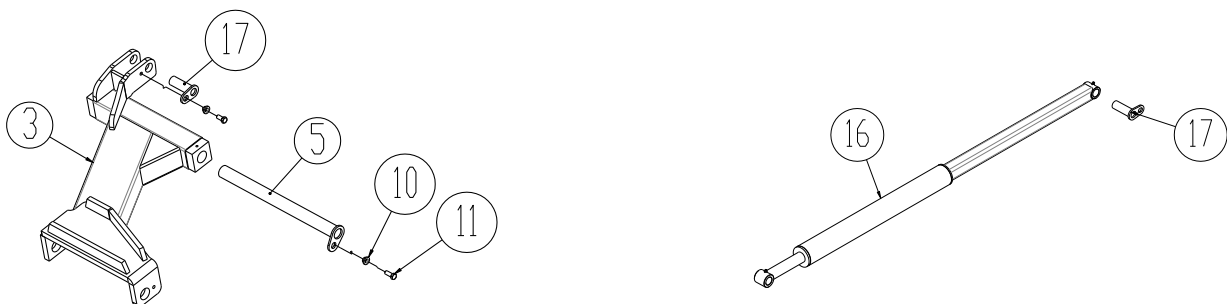


Pos.	Item no.	Designation	4,5m	6,3m	8,2m
1	630286159	Side section, right	1		
1	630330062	Side section, right After serial no. 347070		1	
1	630367102	Side section, right After serial no. 347534			1
2	630286146	Side section, left	1		
2	630330071	Side section, left After serial no. 347070		1	
2	630367101	Side section, left After serial no. 347534			1
3	1201059	Wing suspension, right	1		
3	630773000	Wing suspension, right		1	
3	630347712	Wing suspension, right			1
4	1201058	Wing suspension, left	1		
4	630773100	Wing suspension, left		1	
4	630347702	Wing suspension, left			1
5	69440525G	Pin Ø40 L=525	2	2	2
6	690140714	Spacer disc Ø42/Ø66 x 1,5mm	4	4	4
7	690140715	Bushing Ø40/Ø44 L=40	4	4	4
8	0432510	Lubricating nipple M8	8	8	8
9	69440508G	Pin Ø40 L=508	2	2	
9	69440550G	Pin Ø40 L=550			2
10	630532600	Lock bush for pin head	4	4	4
11	690101101	Bolt M12x25	4	4	4
12	630555015	Stone boxes, incl U-bolts	2	2	2
13	690110105	U-bolt M16x100x200x100	4	4	4
14	0272290	Facet washer Ø16	8	8	8
15	0264090	Self-locking nut M16	8	8	8
16	630286167	Cylinder 70/40x600	1		
	690200068	Gasket set 70/40 Laizhou			
17	69430090G	Pin Ø30 L=90	2		




Packer roller

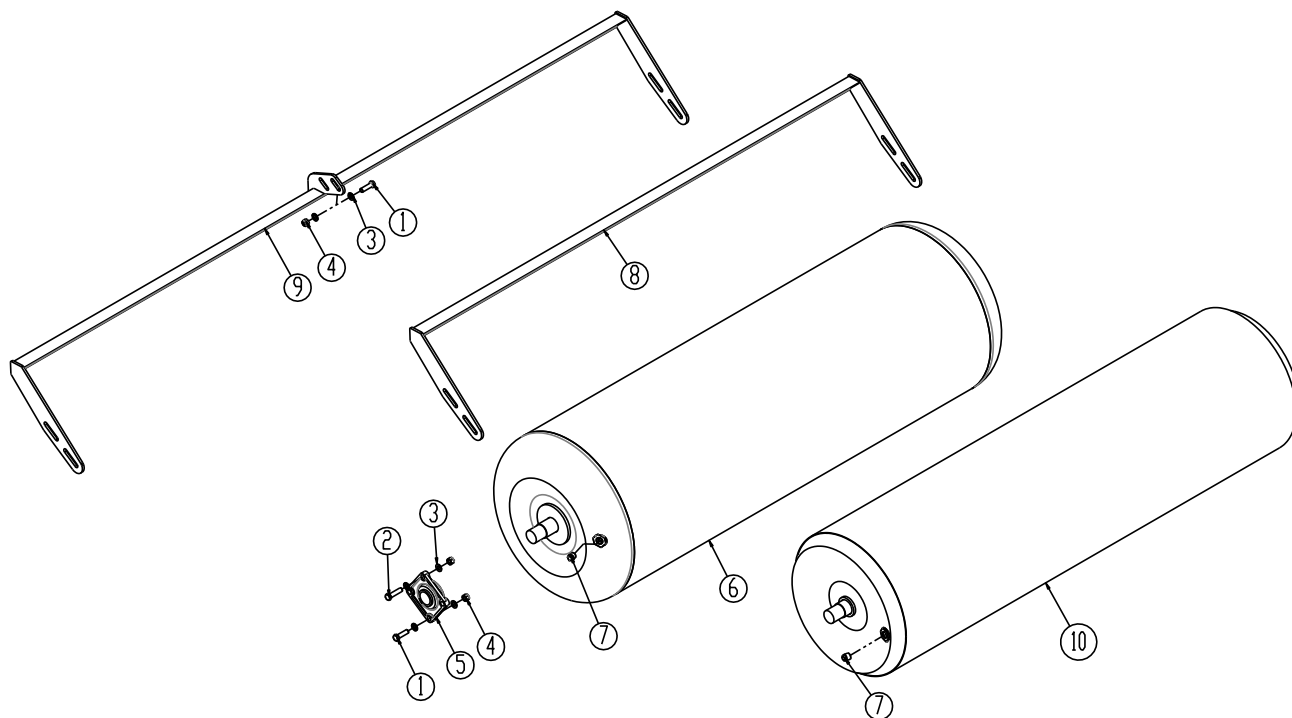



Pos.	Item no.	Designation	4,5m	6,3m	8,2m
1	0235830	Bolt M16x55 8.8	12	12	16
2	0235850	Bolt M16x65 8.8	12	12	12
3	0272890	Facet washer Ø16	60	48	56
4	0264090	Self-locking nut M16	30	24	28
5	690140813	Bearing UCF 211, ø55, 4-holes, ø60 shaft	6	6	6
6	630536600	Valser f/sideled+midterled L=1500 / Ø610	3		
6	630327207	Roller f/wing section+middle section L=2370 / Ø710		3	1
6	630327239	Roller f/side section L= 3283 / Ø710			2
7	690203321	Plug ¾" RG-sort	6	6	6
7a	690203320	welded nipple socket 1/2" x 3/4" RG, black	6	6	6
8	630536615	Scraper bar middle section	1		
8	630762041	Scraper bar		3	1
9	630536610	Scraper bar side sections right/left	2		
9	630327232	Scraper bar for side section right/left			2
10	630330079	Roller L=2370 / Ø610		3	

Rings

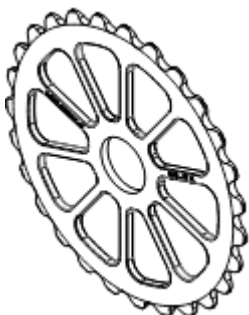
Cambridge rings Ø620 mm		Description	Quality	Part no.
Pos. 12 620 mm Lenient (10 spokes) 	Pos. 13 620 mm Breaker (10 spokes) 	Pos. 12 Hub 104 mm	GG25	690150113
		Pos. 12 Hub 104 mm	GGG50	7375016
		Pos. 12 Hub 80 mm	GG25	690150111
		Pos. 12 Hub 80 mm	GGG50	7375015
		Pos. 12 Hub 72 mm □	GGG50	7375021
		Pos. 12 Hub 82 mm □	GGG50	7375022
		Pos. 13	GG25	690150067
		Pos. 13	GGG50	690150116

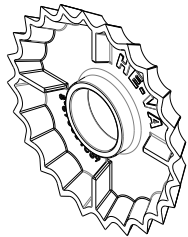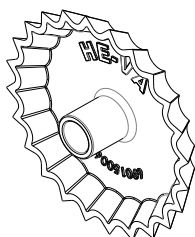Star ring Ø450/Ø500 mm			Description	Quality	Part no.
Pos. 17 500 mm 	Pos. 18 450 mm 	Pos. 19 235 mm 	Pos. 17 Ø500/Ø135	GGG50	690150063
			Pos. 18 Ø485	GGG50	690150064
			Pos. 19 Mounting plate		690150112

Star ring Ø550/Ø600 mm			Description	Quality	Part no.
Pos. 20 600 mm 	Pos. 21 550 mm 	Pos. 19 235 mm 	Pos. 20 Ø600/Ø135	GGG50	690150065
			Pos. 21 Ø550	GGG50	690150066
			Pos. 19 Mounting plate		690150112

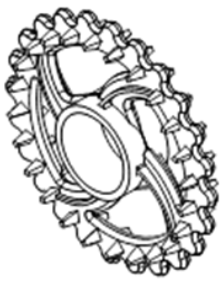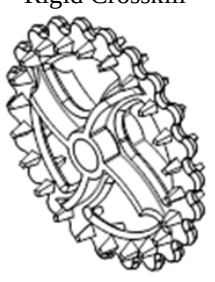
Crosskill 550/600 mm			Beskrivelse	Quality	Part no.
Pos. 22 Loose Crosskill 	Pos. 23 Rigid Crosskill 	Pos. 24 Hub 	Pos. 22 600 mm	GG25	690150075
			Pos. 23 550 mm	GG25	690150074
			Pos. 24 Hub Ø104		690150076

Roller section when cast iron rings

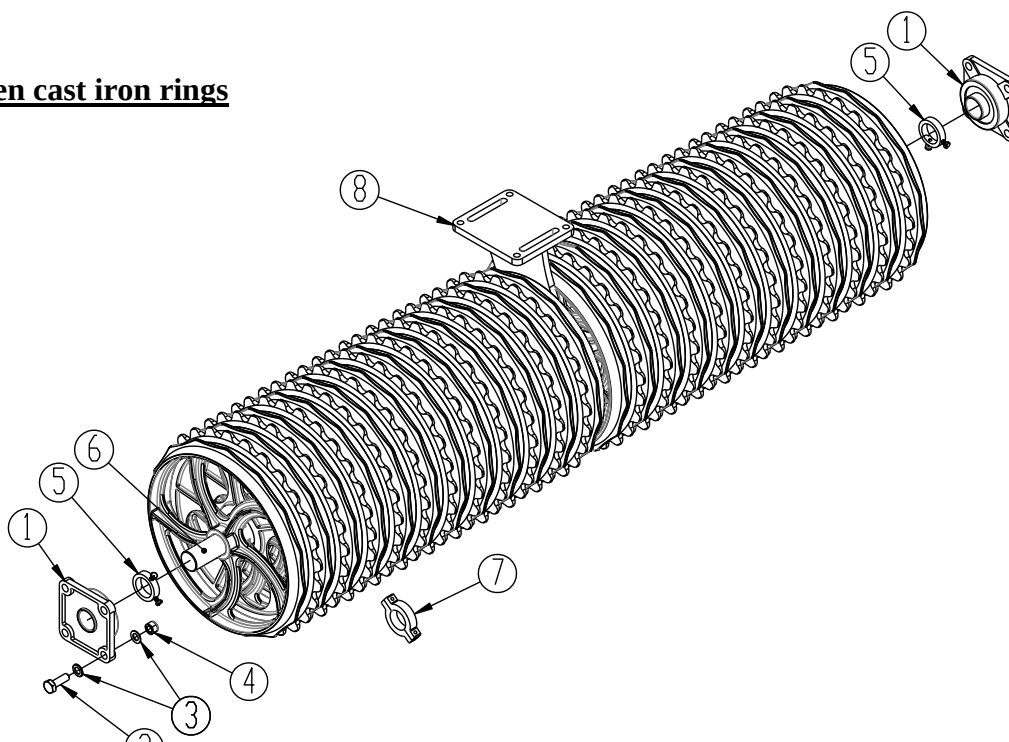


Pos.	Art. No.	Designation	4,5	6,3	8,2
1	690140813	Bearing UCF 211 ø55, complete bearing	6	6	6
2	690103197	Bolt M16x50 8.8 fzb	24	24	24
3	0272290	Faceted washer Ø16 DIN125B	48	48	48
4	0264090	Self-locking nut M16	24	24	24
5	671040400	Stop bushing w/2 pc. M12 bolts (til Ø60 shaft)	3	3	5
6	678661736	Axle for middle + side sections Ø60 ST70 L=1736	3		
6	678692370	Shaft f/middle section Ø60 CrNiMo6 L=2370		1	1
6	678662370	Shaft f/side section Ø60 ST70 L=2370		2	
6	678633283	Shaft f/side section Ø60 ST60 L=3283			2
7	690150090	Distancering 15mm			
7	690150099	Distancering 20mm			
7	690150091	Distancering 25mm			
8		Support bearing, for side sections see next page			2

Support bearing

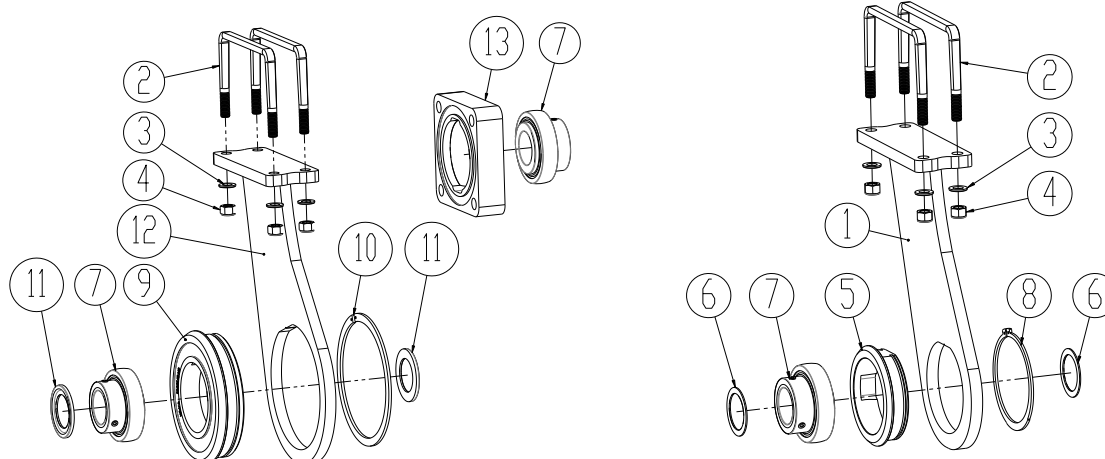

Pos.	Art. No.	Designation	8,2
1	630764006	Console for bearing with Ø60 axle	2
2	0382852	U-bolt M16x100x200x100	4
3	0272290	Facetwasher Ø16 DIN125B	8
4	0264090	Self-locking nut M16	8
5	630764008	Housing for bearing	2
6	7355000	Thrust plate, narrow f/ UCF312 hub	4
7	690140116	Bearing UC312 R6 (ø60)	2
8	691370150	Seeger circlip ring Ø150 DIN471	2
9	7355040	Bearing housing UCRSC 312 w/molded PVC ring	2
10	691370220	Seeger circlip ring Ø220 DIN471	2
11	7355000	Thrust plate, narrow f/ UCF312 hub	4
12	1210139	Console for rubber damped support bearing with Ø60 axle	2
13	7355013	Bearing housing UCRSF 312 w / molded PVC ring	6

Harrow 4,5 meter

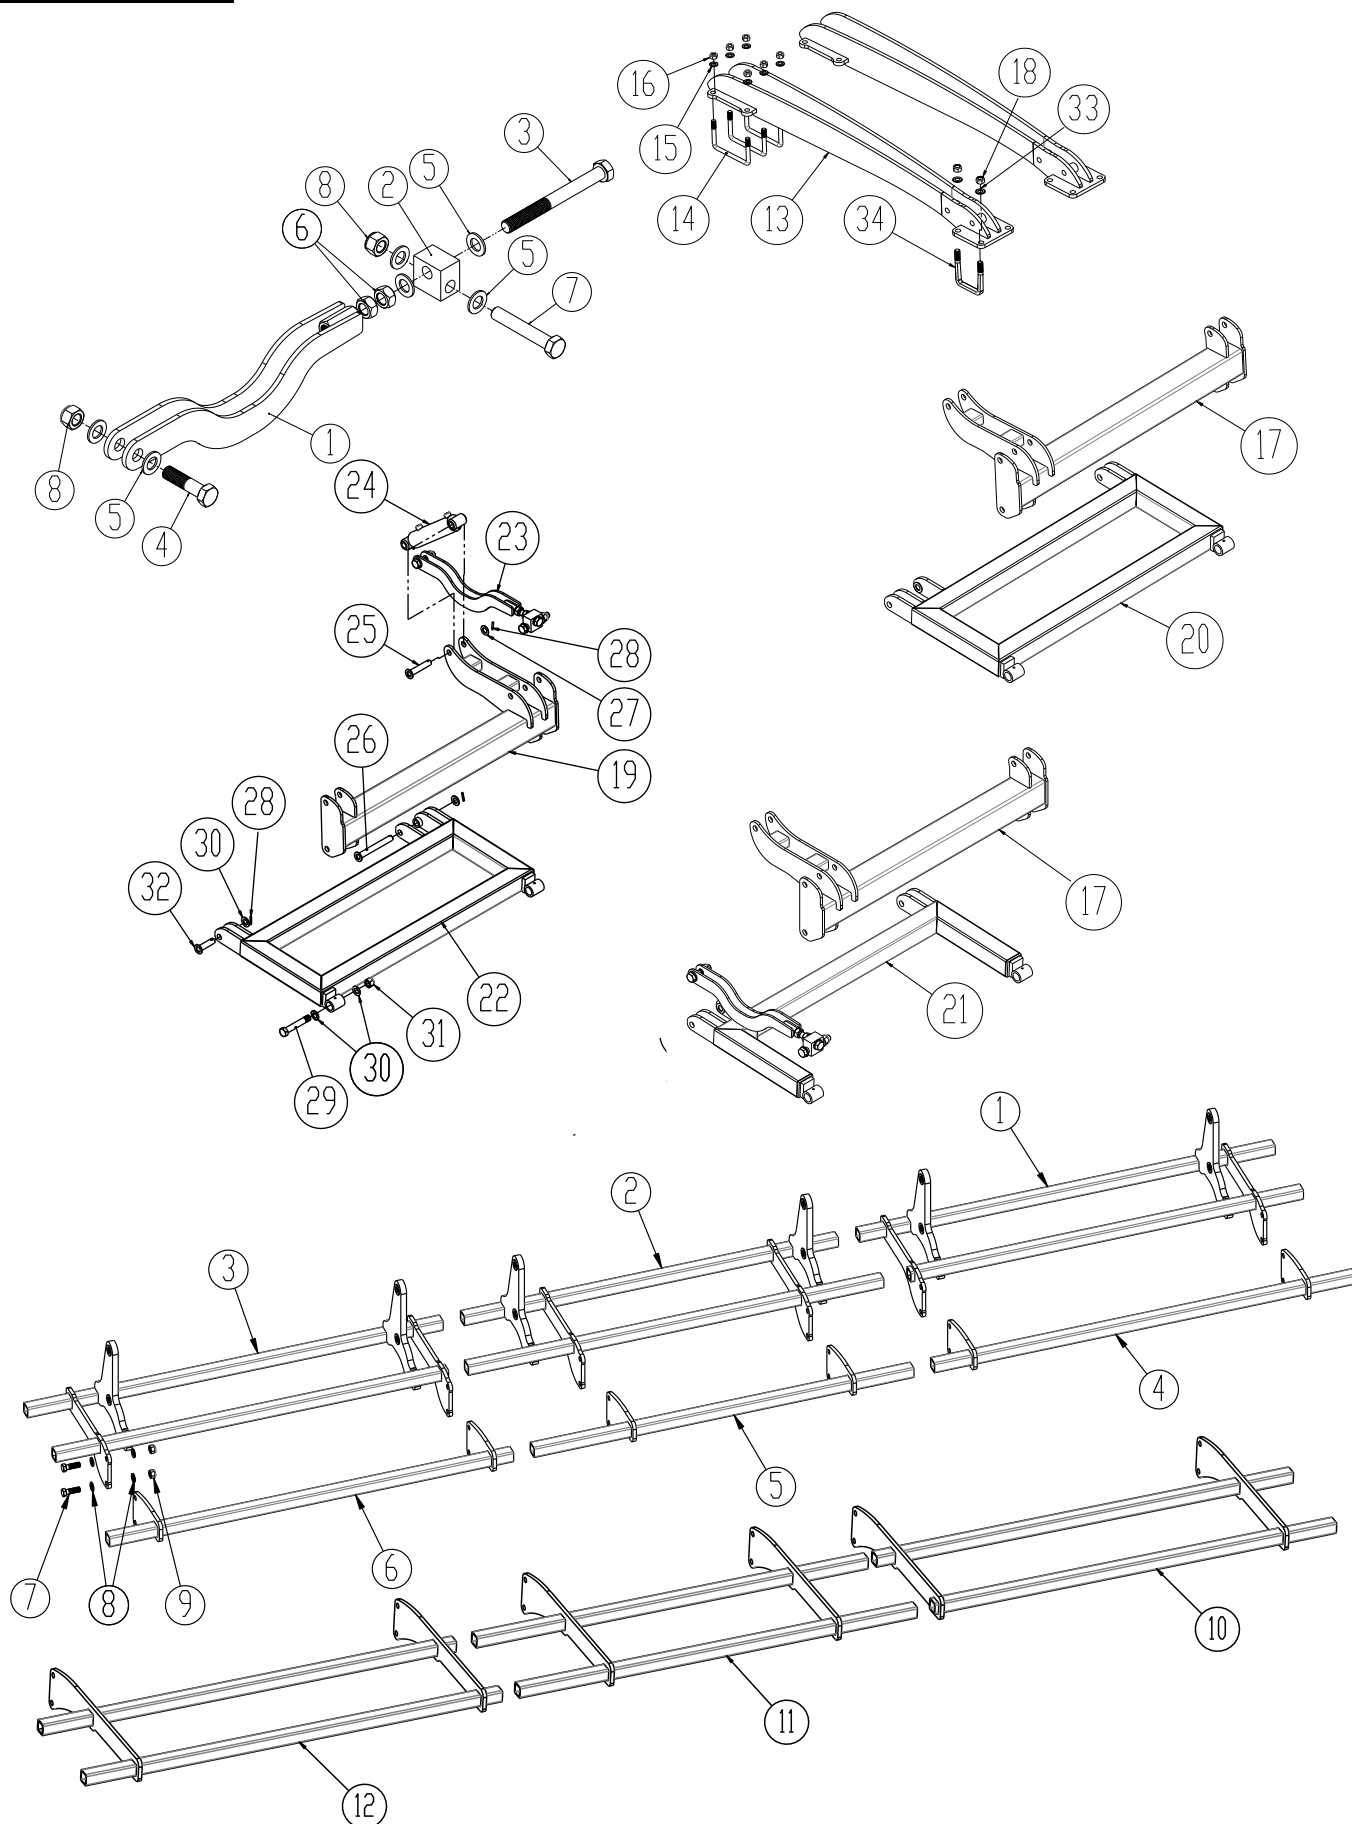

Pos.	Item no.	Designation	4,5m
1	630286141	Harrow frame, left	1
2	630286150	Harrow frame, middle	1
3	630286153	Harrowframe, right	1
4	1200223	1 additional harrow bar Grass-Roller left	1
5	1200224	1 additional harrow bar Grass-Roller middle	1
6	1200225	1 additional harrow bar Grass-Roller right	1
7	0235810	Bolt M16x50 8.8	12
8	0272290	Facet washer Ø16	24
9	0264090	Låsemøtrik M16	12
10	630286154	2 additional harrow bar Grass-Roller left	1
11	630286161	2 additional harrow bar Grass-Roller middle	1
12	630286160	2 additional harrow bar Grass-Roller right	1
13	630286130	Horn	4
14	690110102	U-bolt M16x80x160x80	12
15	0272290	Facet washer Ø16	24
16	0264090	Self-locking nut M16	24
17	630286145	Suspention for front harrow left and middle	2
18	0264100	Self-locking nut M18	24
19	630286164	Suspention for front harrow right	1
20	630286109	Lifting frame frontharrow left	1
21	630286181	Lifting frame frontharrow middle	1
22	630286110	Lifting frame frontharrow right	1
23	630327523	Parallel arm complete	3
24	690200040	Cylinder 50/30x155 Ø20,5/20,5	3
25	69520087F	Pin Ø20 L=87	3
26	69520155F	Pin Ø20 L155	3
27	0272310	Facet washer Ø20	9
28	0371395	Roll pin Ø5x35	9
29	0236200	Bolt	6
30	0272310	Facet washer Ø20	12
31	0264110	Self-locking nut M20	6
32	69520061F	Nagle	3
33	0272300	Facet washer Ø18	24
34	0382900	DragbåndM18x100x100x100	12

This technical drawing is an exploded view of a mechanical assembly, likely a medical device component. The central part of the image shows a perspective view of the assembled unit, which consists of a long, rectangular frame with internal structural elements. Surrounding this central view are several exploded sub-assemblies, each with its components labeled with circled numbers from 1 to 32. The exploded views include:

- Top Left:** A bracket-like structure (15) with a cable (13) and various mounting hardware (14, 16, 17, 25, 27).
- Top Right:** A complex assembly (21) featuring a circular component (26) and multiple structural parts (14, 19, 23, 24, 25, 30, 33).
- Bottom Left:** A large structural frame (1) with various mounting points (2, 3, 4, 6, 7, 8, 9, 10, 11, 12) and a cable (13).
- Bottom Right:** A smaller assembly (2) with a cable (31) and mounting hardware (3, 4, 10, 29, 32).
- Center:** A perspective view of the main assembly, showing the internal structure and the mounting points for the various sub-assemblies.
- Bottom Center:** A separate component (8) labeled "NY MODEL", which appears to be a flexible, curved element.

The diagram uses standard engineering conventions, including dashed lines to indicate hidden internal features and arrows to show the relative positions and assembly sequence of the components.

Pos.	Item no.	Designation	6.3m	8.2m
1	630327182	Lifting frame left + middle front harrow	1	1
2	630327183	Suspension f/harrow middle section	1	1
2a	690110101	U-bolt f/mounting 63027183 M16x100x100x100	4	4
2b	0272290	Facet plate Ø16	8	8
2c	0264090	Self-locking nut M16	8	8
3	0272310	Facet plate Ø20	24	24
4	0264110	Self-locking nut M20	8	8
5	0236200	Bolt M20x110 8.8	2	2
6	630327178	Harrow section middle section	1	0
6	630327226	Harrow section middle section	0	1
7	0236170	Bolt M20x80 8.8	3	3
8	630327180	Parallel rod f/front harrow	2	2
8	630327252	Parallel rod (discontinued model) From machine no. 341717	2	2
8	630327521	Parallel rod (new curved model) From machine no. 341717	2	2
8a	690112015	Bolt M20 x 150 Set bolt 8 From machine no. 341717	2	2
9	0236265	Bolt M20x180 8.8	1	1
10	630327179	Toggle joint at bracket on the harrow (ended)	2	2
10	630327251	Angle block for parallel rod From machine no. 341717	2	2
11	0261410	Nut M20	4	4
12	690200040	Cylinder 50/30x155mm Ø20/Ø20 mm	1	1
12a	690200045	Gasket set 50/30		
13	690110050	U-bolt M12 40x40x40	23	23
14	0272270	Facet plate Ø12	74	74
15	0426110	Long finger tine ø12 x 100 curved	23	23
16	690113013	Self-locking nut M12 (all-metal) quality 10	46	46
17	1012520	Clamping plate M12	23	23
18	630327192	Height adjustment for levelling board	2	2
19	630327193	Clamping plate w/bar for height adjustment	2	2
20	630327191	Clamping plate for height adjustment	2	2
21	0422390	Clamp	2	2
22	0422145	Spring-Board tine 80x10mm	2	2
23	630327199	Threaded block for height adjustment of levelling board	2	2
24	630327196	Levelling board – Middle section	1	0
24	630327237	Levelling board – Middle section	0	1
25	690113019	Self locking nut M12 (all-metal) Quality 8	16	16
26	0235470	Bolt M12x110 8,8	2	2
27	0235380	Bolt M12x50 8.8	10	10
28	0236210	Bolt M20x120 8.8	3	3
30	0248680	Bolt (carrier bolt) M12x50	4	4
31	69520087F	Pin Ø20 L=87	1	1
32	0378200	Ring pin Ø4,5 mm	1	1
33	630327217	Threaded rod for levelling board	2	2



This exploded perspective view illustrates the assembly of a mechanical device. The main components are shown in their relative positions, with arrows indicating the assembly sequence. The assembly includes a base structure (1) and a central component (2). Various sub-assemblies are shown, including a top section (3) and a side section (4). The assembly is completed by attaching a final component (5) to the side section (4). The exploded view shows the following components and their assembly sequence:

- Component 1: Base structure.
- Component 2: Central component.
- Component 3: Top section.
- Component 4: Side section.
- Component 5: Final component.


The exploded view shows the following components and their assembly sequence:

- Component 1: Base structure.
- Component 2: Central component.
- Component 3: Top section.
- Component 4: Side section.
- Component 5: Final component.

Pos.	Item no.	Designation	6.3m	8.2m
1	630327182	Lifting frame left + middle front harrow	1	0
1	630327181	Lifting frame right	1	0
1	630327221	Lifting frame left	0	1
1	630327220	Lifting frame right	0	1
2	630327177	Harrow frame left	1	0
2	630327176	Harrow frame right	1	0
2	630327228	Harrow frame left	0	1
2	630327227	Harrow frame right	0	1
3	0272310	Facet plate Ø20	20	30
4	0264110	Self-locking nut M20	8	12
5	0236180	Bolt M20x90 8.8	2	3
6	690113013	Self-locking nut M12 (all-metal)	48	62
7	690117014	Facet plate Ø12	76	88
8	1012520	Clamp, M12	24	31
9	0426110	Long finger tine ø12 x 100 curved	24	31
10	690110050	U-bolt M12 40x40x40	24	31
11	630327192	Height adjustment f/levelling board	2	3
12	0235380	Bolt M12x50 8.8	10	15
13	690113019	Self-locking nut M12 (all-metal)	16	16
14	630327191	Clamp for height adjustment	2	3
15	630327193	Clamp with bar for height adjustment	2	3
16	630327199	Threaded block for height adjustment of levelling board	2	3
17	0248680	Bolt (carrier bolt) M12x50	4	6
18	630327217	Threaded rod for levelling board	2	3
19	0422145	Spring-Board tine 80x10 mm	2	3
20	0422390	Clamp for Spring-Board tine	2	3
21	690103098	Bolt M12x110 8,8	2	3
22	630327195	Levelling board, left	1	0
22	630327194	Levelling board, right	1	0
22	630327236	Levelling board, left	0	1
22	630327235	Levelling board, right	0	1
24	630327180	Parallel rod f/front harrow	2	3
24	630327252	Parallel rod (discontinued model) From machine no. 341717	2	3
24	630327521	Parallel rod (new curved model) From machine no. 341717	2	3
24a	690112015	Bolt M20 x 150 Set bolt 8 From machine no. 341717	2	3
25	630327179	Toggle joint at bracket on the harrow	2	3
25	630327251	Angle block for parallel rod From machine no. 341717	2	3
26	0236210	Bolt M20x120 8.8	4	6

27	630327185	Left cylinder bracket f/side sections	1	1
27a	630327186	Right cylinder bracket f/side sections	1	1
27b	630327277	Middle cylinder bracket, left side section	0	1
27c	630327279	Middle cylinder bracket, right side section	0	1
28	630327184	Mounting bracket on side sections without cylinder	2	2
29	690110106	U-bolt M16x200x100x200	4	6
30	0264090	Self-locking nut M16	8	12
31	0272290	Facet plate Ø16	8	12
32	0261410	Nut M20	4	6
33	690200040	Cylinder 50/30x155mm Ø20/Ø20 mm	1	2
33a	690200045	Gasket set 50/30		
34	69520087F	Pin Ø20 L=87	1	2
35	0378200	Ring pin Ø4,5 mm	1	2
36	0236265	Bolt M20x180 8.8	1	2


Lifting frames and suspension for harrows 6,3 - 8,2m, from January 2015

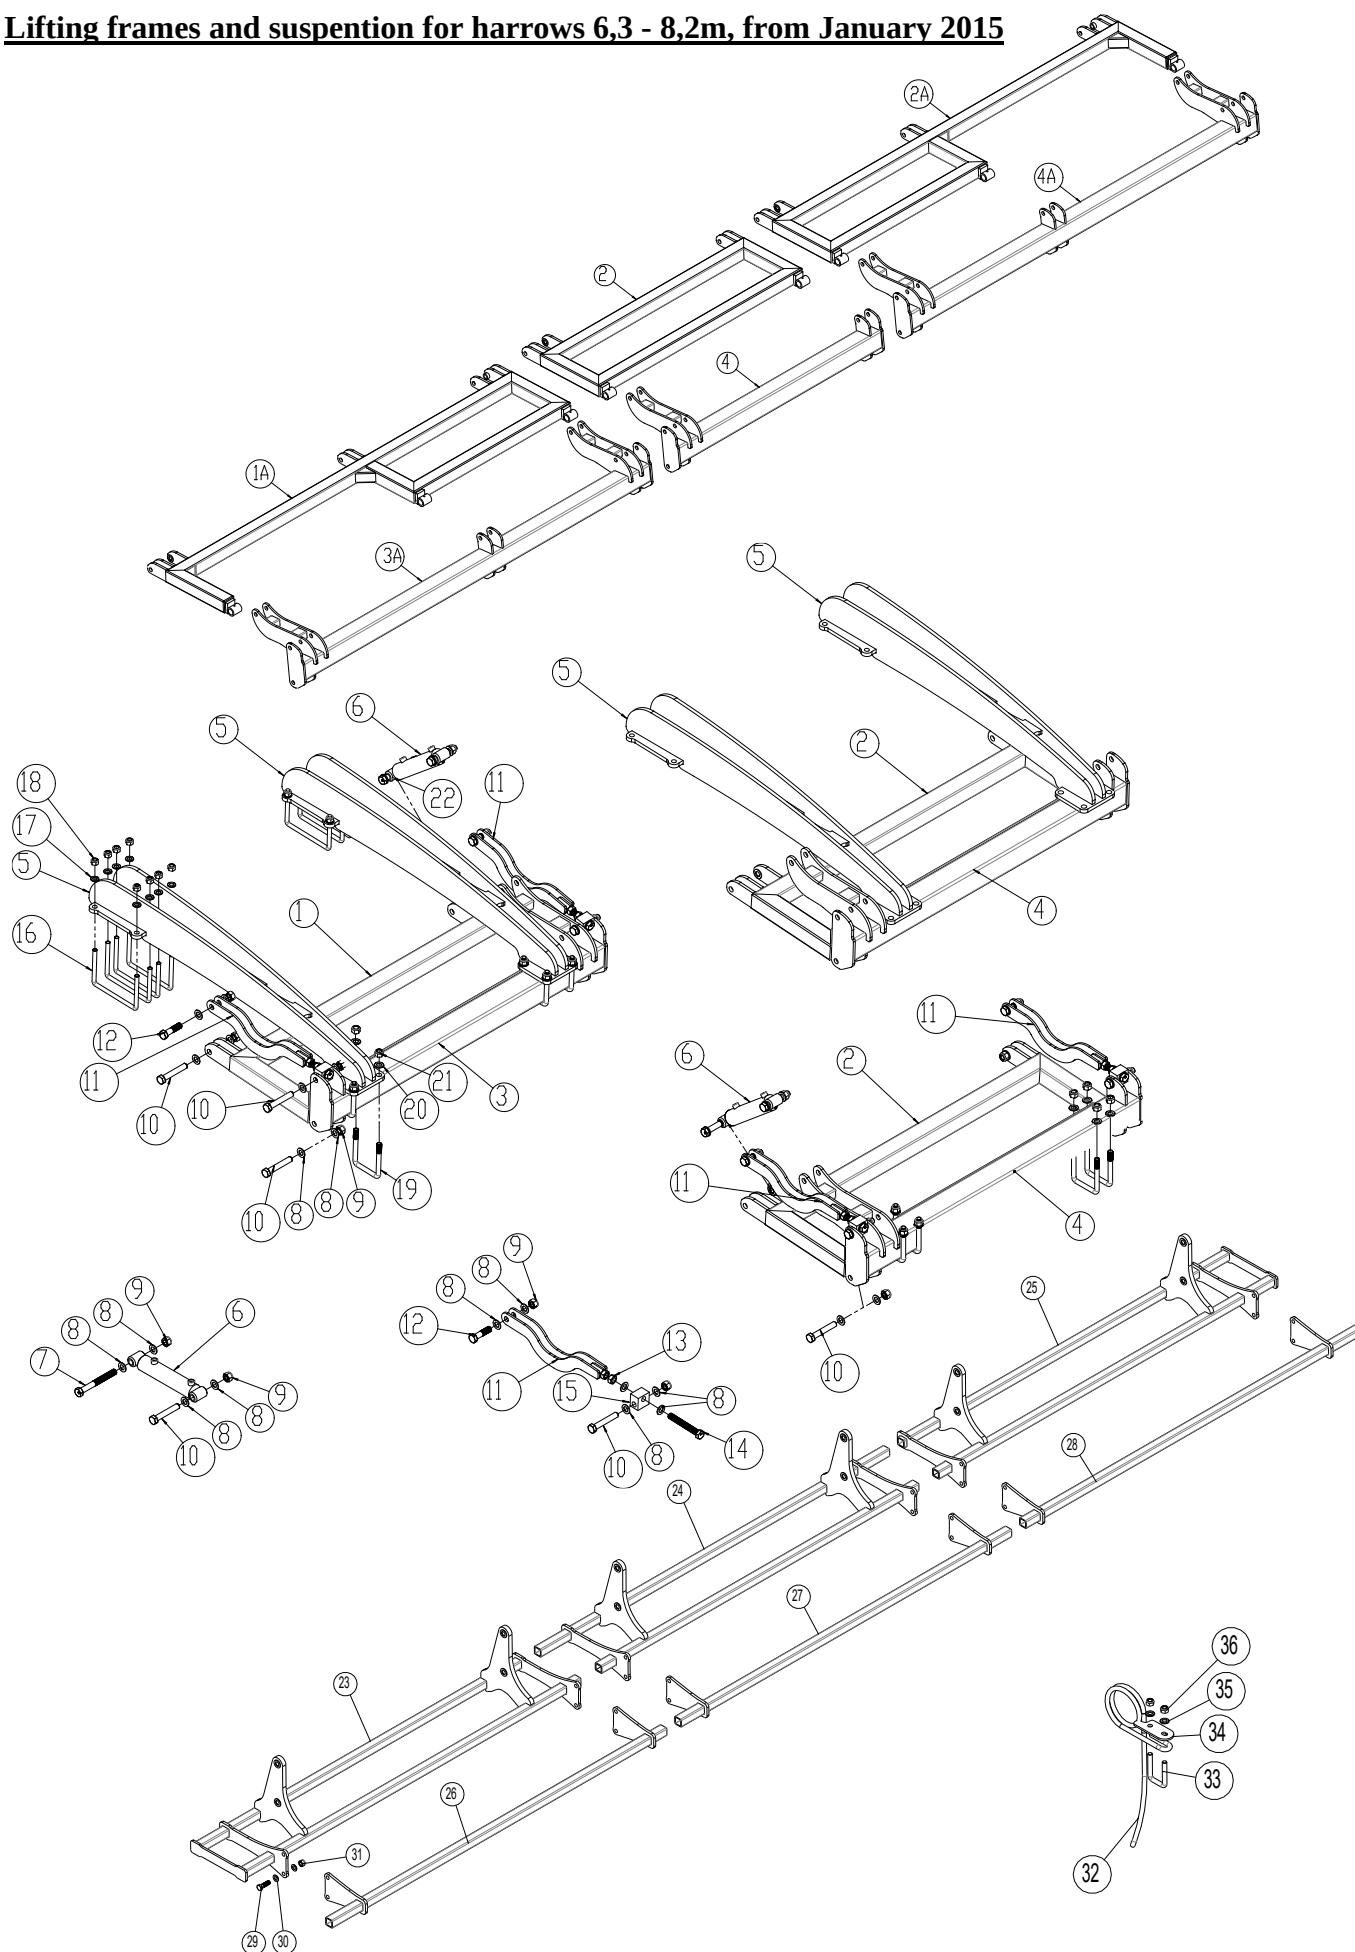

Pos.	Item no.	Designation	6,3m	8,2m
1	630327181	Lifting frame, right	1	
1A	630367105	Lifting frame, right		1
2	630327182	Lifting frame, left - middle	2	1
2A	630367124	Lifting frame, left		1
3	630330032	Suspention right	1	
3A	630367103	Suspention right		1
4	630330059	Suspention left - middle	2	1
4A	630367125	Suspention left		1
5	630330012	Horn	4	6
6	690200040	Cylinder 50/30x155mm Ø20/Ø20 mm	3	3
	690200045	Gasket set 50/30		
7	690103160	Bolt M20x180 8.8	3	3
8	0272310	Facet washer Ø20	12	12
9	0264110	Self-locking nut M20	18	20
10	0236210	Bolt M20x120 8.8	18	20
11	630327521	Parallel arm	6	8
12	0236265	Bolt M20x180 8.8	6	8
13	0261410	Nut M20	12	16
14	690112015	Bolt M20x150 8.8 Set bolt	6	8
15	630327251	Angel block w/parallel arm	6	8
16	690110105	U-bolt M16x100x200x100	16	24
17	0272290	Facet washer Ø16	32	48
18	0264090	Self-locking nut M16	32	48
19	690110404	U-bolt M18x100x100x100	8	12
20	0272300	Facet washer Ø18	16	24
21	0264100	Self-locking nut M18	16	24
22	0432100	Grease nipple M6	6	6
23	1200066	Harrow frame, right	1	
23	630367161	Harrow frame, right		1
24	1200060	Harrow frame, center	1	
24	630367157	Harrow frame, center		1
25	1200063	Harrow frame, left	1	
25	630367160	Harrow frame, left		1
26	1200080	Harrow 1 row, right	1	
26	1200756	Harrow 1 row, right		1
27	1200079	Harrow 1 row, center	1	
27	1200760	Harrow 1 row, center		1
28	1200081	Harrow 1 row, left	1	
28	1200758	Harrow 1 row, left		1
29	0235810	Bolt M16x50mm, 8.8 fzg	12	
30	0272290	Faceted disc 16mm, fzb	24	
31	0264090	Self locking nut M16 DIN985	12	
32	0426110	Tine Ø12 x 100 buet		
33	690110050	U-BoltM12x40x40x40 (pr.tine)	1	1
34	1012521	Bracket for tine (pr. tine)	1	1
35	0272270	Faceted disc Ø12 pr. tine)	2	2
36	0264070	Self locking nut M12 DIN985 (pr.tine)	2	2

Planerplanke 4,5 – 6,3 – 8,2m


4,5m vist

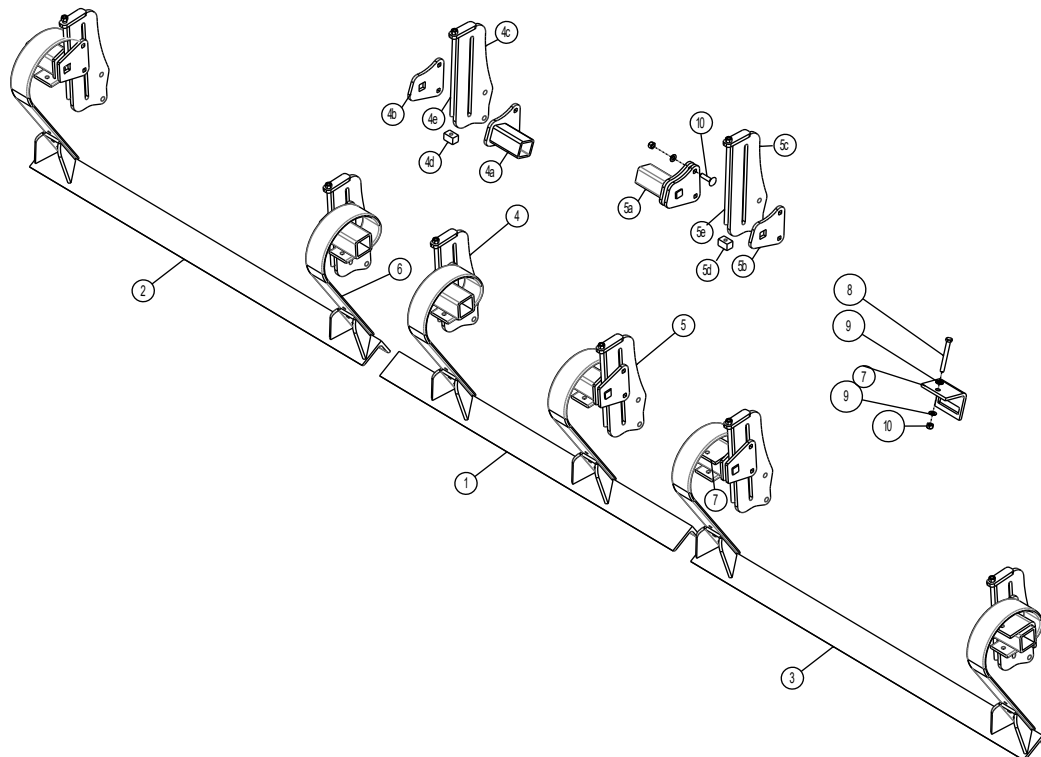

Pos.	Vare nr.	Betegnelsen	4,5m	6,3m	8,2m
1	630286177	Levelling bar, center	1		
1	1200058	Levelling bar, center		1	
1	630367173	Levelling bar, center			1
2	630286179	Levelling bar, right	1		
2	1200068	Levelling bar, right		1	
2	630367174	Levelling bar, right			1
3	630286179	Levelling bar, left	1		
3	1200068	Levelling bar, left		1	
3	630367172	Levelling bar, left			1
4	630286185	Bracket for levelling bar	3	3	4
4a	630327167	Clampingplate with tube	3	3	4
4b	630317165	Clampingplate without tube	3	3	4
4c	630367171	Leftturned bracket	3	3	4
4d	630327199	Threaded block	3	3	4
4e	630327217	Threaded rod	3	3	4
5	630367185	Bracket for levelling bar	3	3	4
5a	630367169	Clampingplate with tube	3	3	4
5b	630317165	Clampingplate without tube	3	3	4
5c	630367170	Rightturned bracket	3	3	4
5d	630327199	Threaded block	3	3	4
5e	630327217	Threaded rod	3	3	4
6	0422146	Spring-Board tine 90x14mm		6	8
6	0422145	Spring-Board tine 80x10mm	6		
7	0422395	Tandholder, tand 90x14		6	8
7	0422390	Tandholder, tand 80x10	6		
8	0235470	Bolt M12x110 8.8	12	12	16
9	0272270	Faceted disc 12mm, fzb DIN 125B	24	48	48
10	690113019	Self-locking nut M12 (all-metal)	12	24	48
11	0248680	Carriage bolt M12x50 8.8	12	12	16
12	0235380	Bolt M12x50mm, 8.8 fzb	12	24	48

Spare parts list Spring-Board

Middle and side section to suit harrow mounting 4,5m

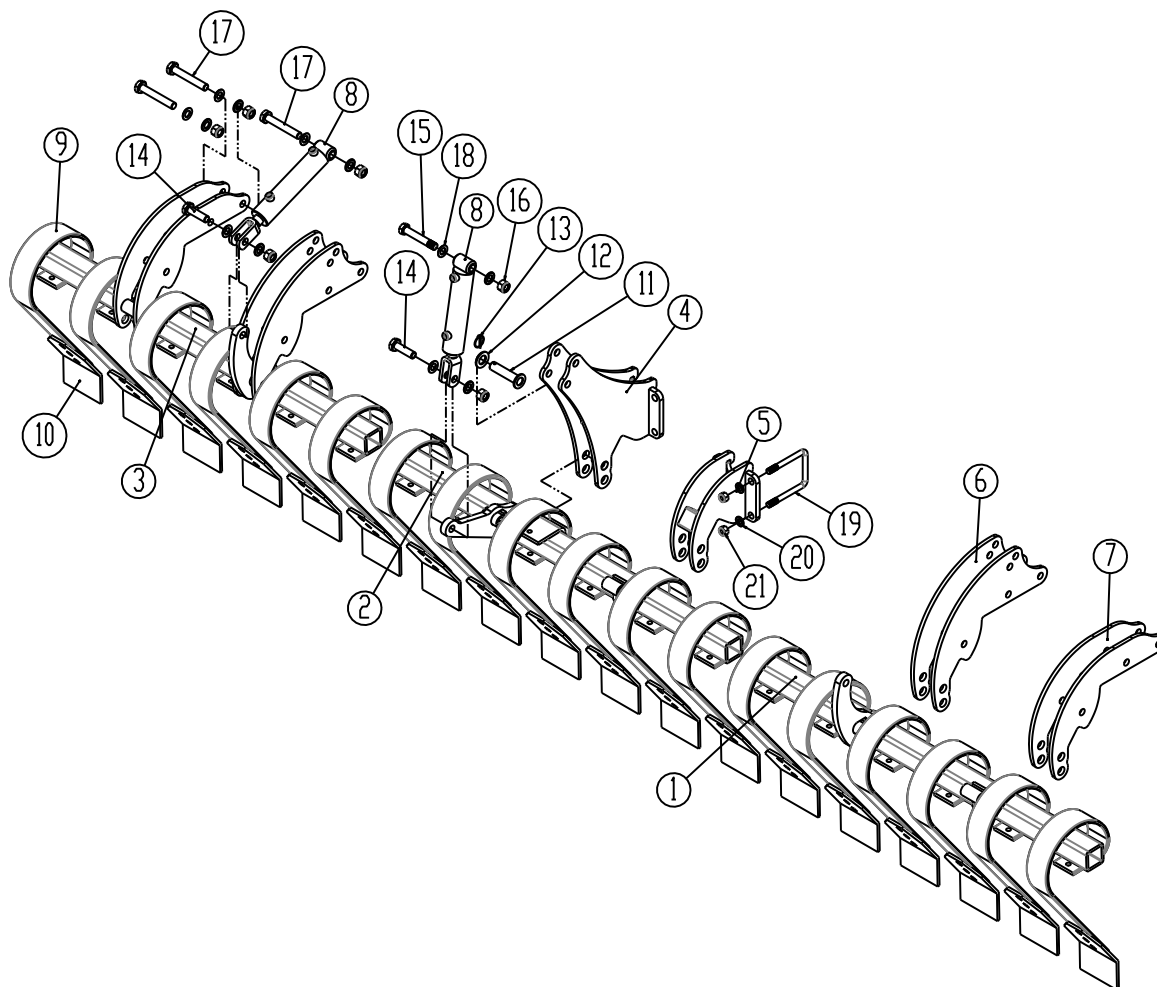


Pos.	Item no.	Designation	4,5m
1	630286173	Spring-Board bar left	1
2	630286169	Spring-Board bar middle	1
3	630286176	Spring-Board bar right	1
4	630330022	Suspension middle frame for cylinder	1
5	630330021	Suspension middle where non cylinder	1
6	630286172	Suspension Spring-Board side frame for cylinder	4
7	630286171	Suspension Spring-Board side frame where non cylinder	4
8	690200160	Cylinder 50/30x155 Ø20,25/clevis	3
8a	690200045	Gasket set 50/30	
9	0422145	Tine 10x80	18
10	0422143	Wearing point 8x150	18
11	69525095F	Pin Ø25 L=95	6
12	0272340	Facet washer Ø27	6

The table continues →


13	0378200	Ring clip Ø4,5	6
14	0236150	Bolt M20x70 8.8 fzb DIN931	3
15	0236210	Bolt M20x120 8.8 fzb DIN931	1
16	0264110	Self locking nut M20	14
17	0236220	Bolt M20x130 8.8 fzb DIN931	10
18	0272310	Facet washer Ø20	28
19	690110101	U-bolt M16 100x100x100	4
20	0272290	Facet washer Ø16	8
21	0264090	Self locking nut M16	8

Middle and side section to suit harrow mounting 6,3 - 8,2m

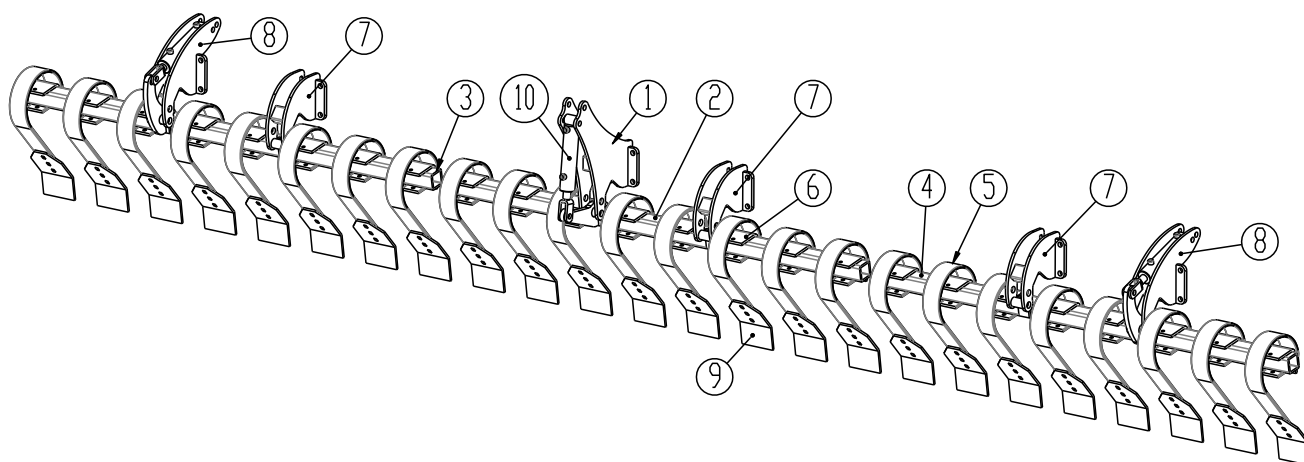

Pos.	Item no.	Designation	6,3m	8,2m
1	630330022	Suspension middle section for cylinder	1	
2	630330023	Spring-Board bar middle	1	
2	630367117	Spring-Board bar middle		1
3	630330025	Spring-Board bar right	1	
4	630330024	Spring-Board bar left	1	
3+4	630367117	Spring-Board bar right / left		2
5	0422145	Spring-Board tine 80x10 - long	24	32
6	0422390	Clamp for Spring-Board tine, 70x70 mm bar	24	32
7	630330021	Suspension middle/side sections without cylinder	3	3
8	630367120	Suspension side sections with cylinder	2	5
9	633052100	Wearing point Spring-Board 150x8	24	32
10	690200160	Cylinder 50/30x155 Ø20,25/clevis	3	3
	690200045	Gasket set 50/30		


Middle section incl. hydraulics, when only Spring-Board 6.3 – 8.2m

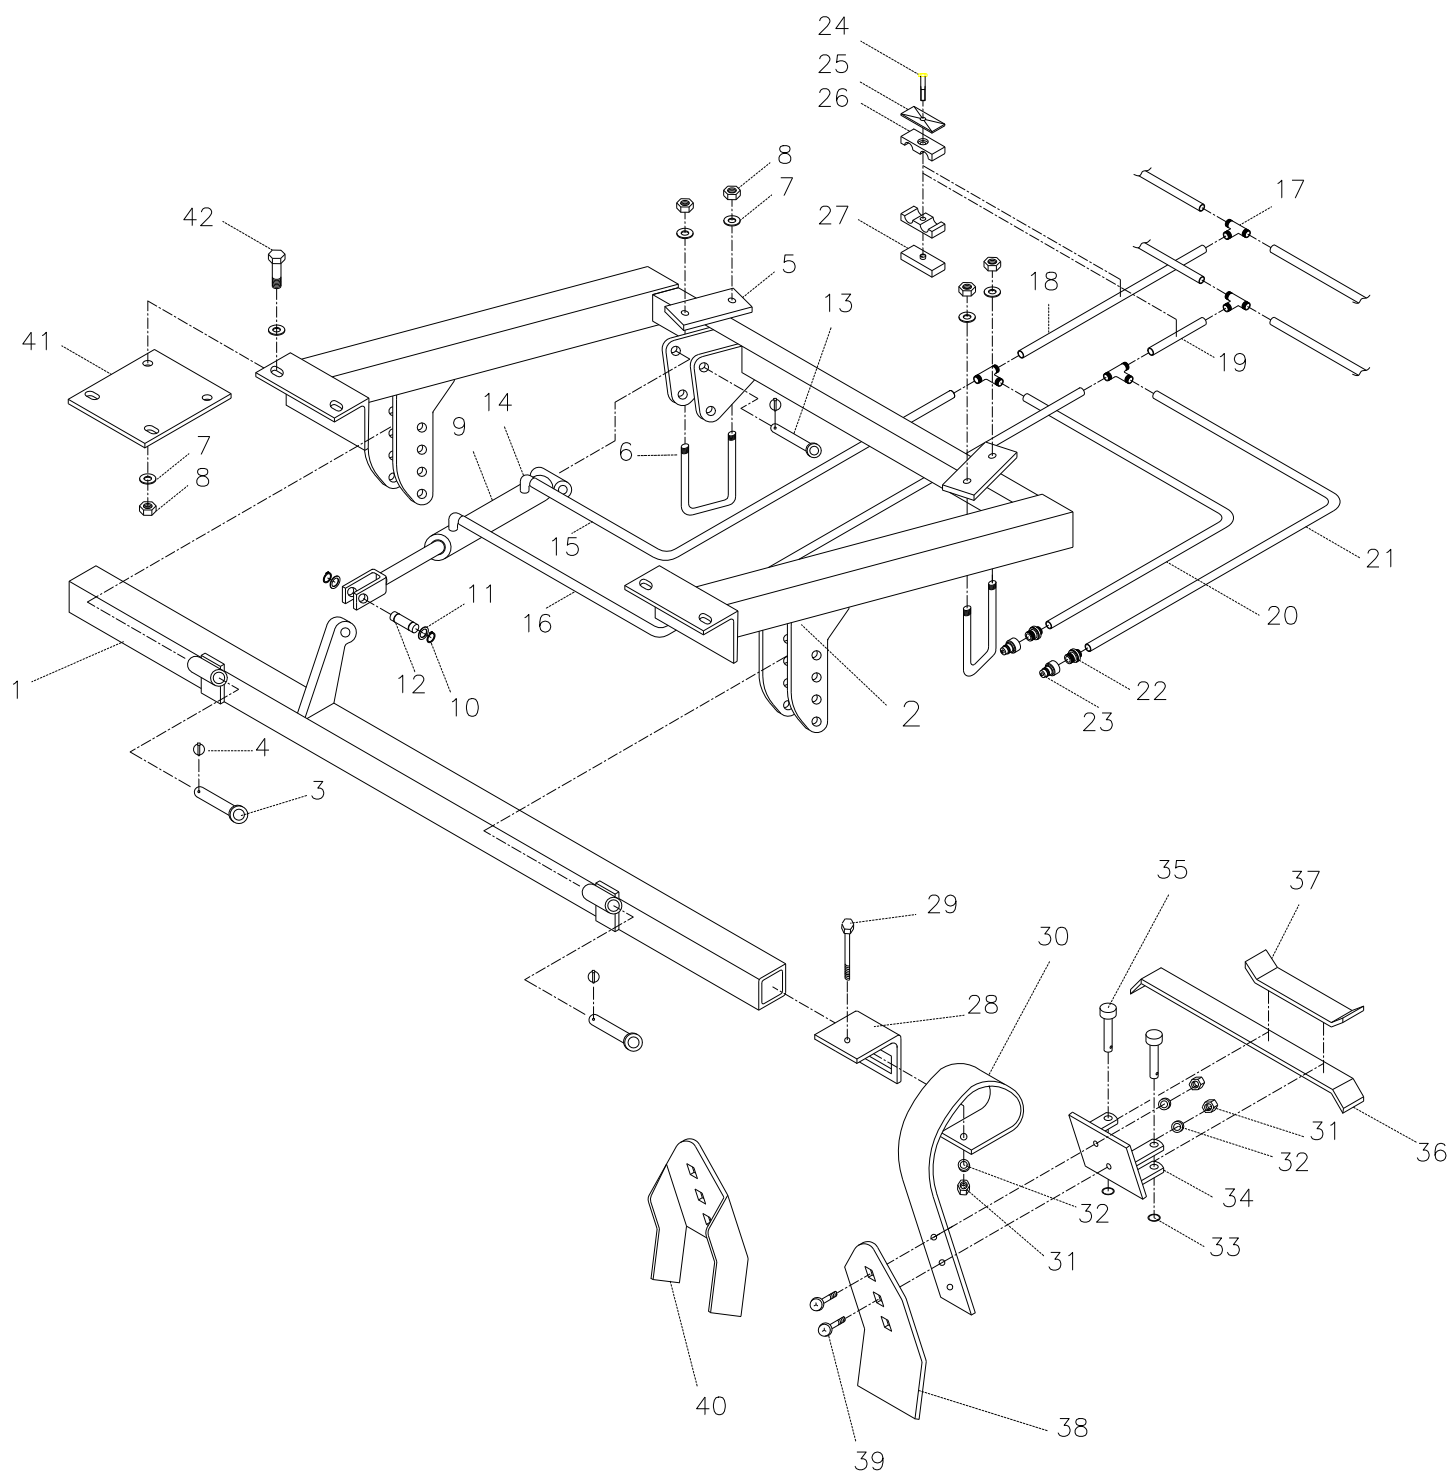


Pos.	Item no.	Designation	6.3m	8.2m
1	635053020	Bar for tines	1	0
1	633073020	Bar for tines	0	1
2	635051000	Suspension for middle section	1	0
2	633061000	Suspension for middle section	0	1
3	69525087F	Pin Ø25 L=87	2	2
4	0378200	Ring pin Ø4,5	3	3
5	670861100	Flange	2	2
6	690110101	U-bolt M16x100x100x100	2	2
7	0272290	Facet plate Ø16	8	8
8	0264090	Self-locking nut M16	6	6
9	690200160	Cylinder 50/30x155	1	1
9e	690200045	Gasket set 50/30 mm	1	1
10	691372020	Seeger circlip ring Ø20 Din 471	2	2
11	690115010	Washer Ø20/Ø28x1mm	2	2
12	69520046D	Pin Ø20 L=46	1	1
13	69520087F	Pin Ø20 L=87	1	1
14	690203006	Fitting 90angle 10 x 3/8" BSP	2	2
15	690201051	Hydraulic hose 1/4" L=250 mm	1	1
16	690201059	Hydraulic hose 1/4" L=350 mm	1	1
17	690203015	Fitting T10	4	4
18	690201032	Hydraulic hose 1/4" L=1130 mm	1	1
19	690201053	Hydraulic hose 1/4" L=1260 mm	1	1
20	690201038	Hydraulic hose 1/4" L=4000 mm	1	0
20	690201047	Hydraulic hose 1/4" L=4610 mm	0	1
21	690201006	Hydraulic hose 1/4" L=3800 mm	1	
21	690201047	Hydraulic hose 1/4" L=4610 mm		1
22	690203003	Fitting, straight 10 x 1/2" BSP	2	2
23	690203001	Quick coupling (male) E402 1/2"	2	2
24	690210213	Screw for tube-support double	5	5
25	690210211	Top plate for tube-support double	5	5
26	690210210	Tube-support double ø14/ø14	10	10
27	690210212	Welding plate for tube-support double	5	5
28	0422390	Clamp for tine	8	6
29	690103098	Bolt M12x110	8	6
30	0422145	Tine (10x80)	8	6
30a	633052000	Tine complete	8	6
31	0264070	Self-locking nut M12	24	18
32	0272270	Facet plate ø12	24	18
The table continues →				

Pos.	Item no.	Designation	6.3m	8.2m
33	0431975	Locking ring 30xØ3	16	12
34	633055500	Tine bracket for transverse locking system	8	6
35	69512040K	Pin Ø12,5x40	16	12
36	633055710	Long locking bar for transverse locking system	7	5
37	633055700	Short locking bar for transverse locking system	2	2
38	0422143	Tine point (8x150)	8	6
39	0248670	Bolt (carrier bolt) M12x45	16	12
40	633052150	Tine point (slicing plates)	8	6
41	635055010	Distance plate for mounting	2	2
42	690103126	Bolt M16x45	4	4

Side section incl. hydraulics, when only Spring-Board (left shown) 6.3m

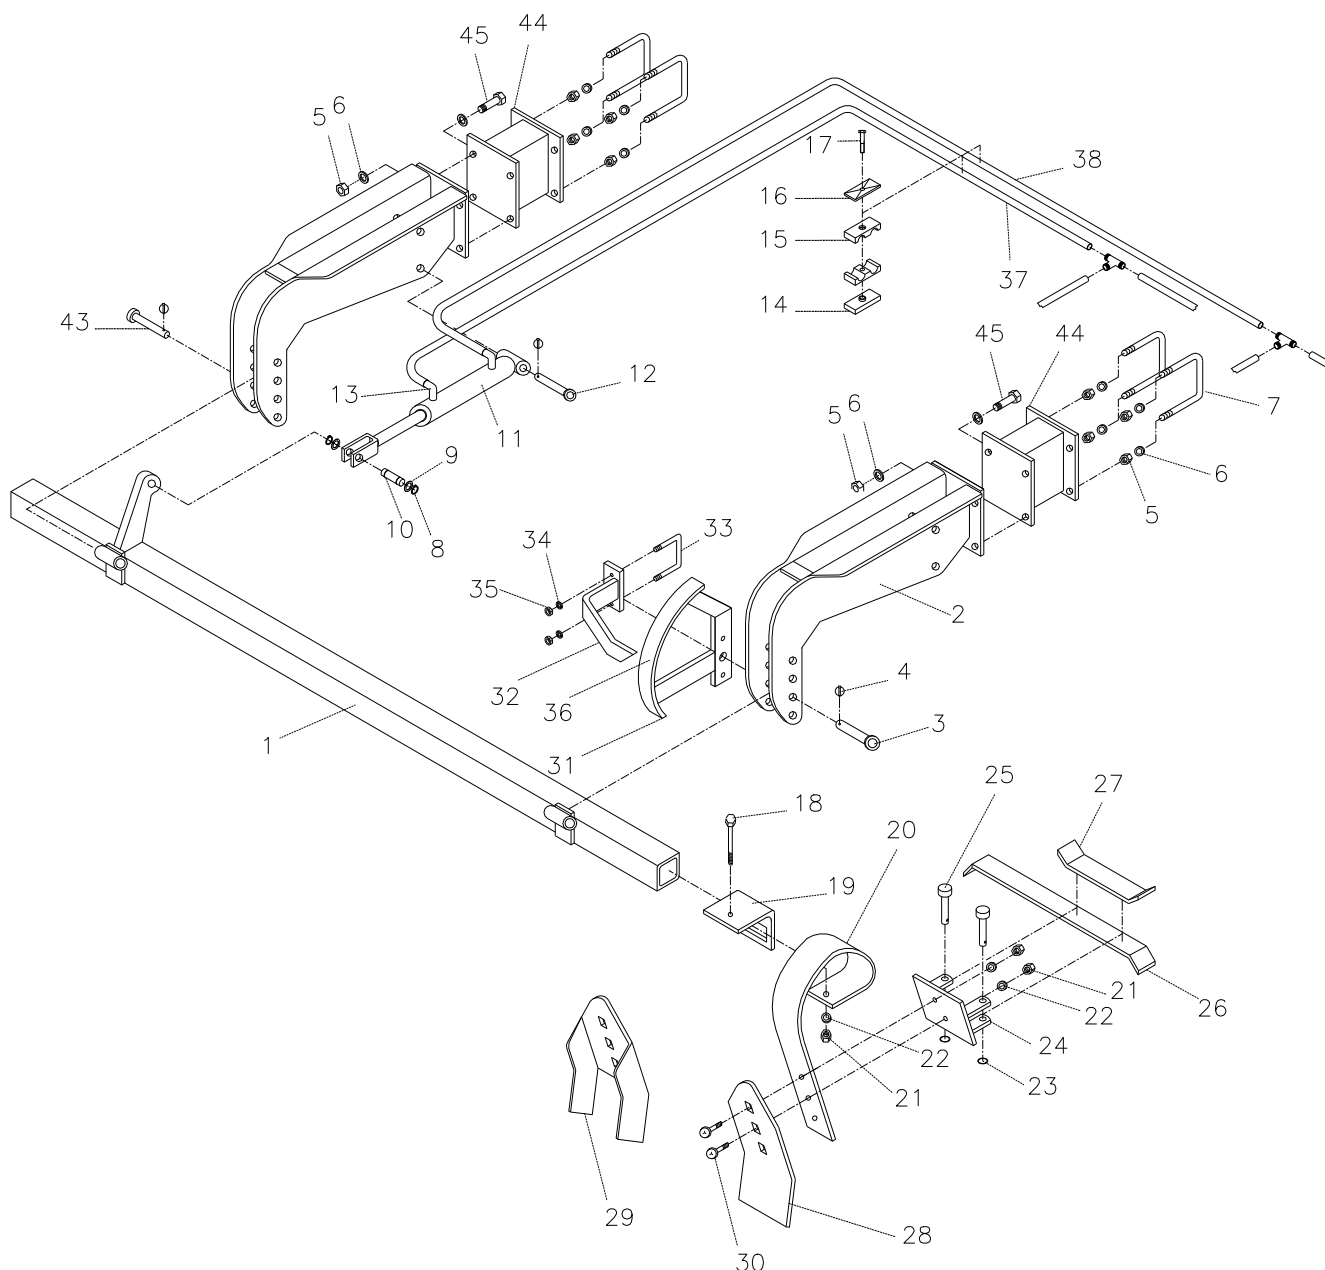

Side section incl. hydraulics, when only Spring-Board (left shown) 8.2m

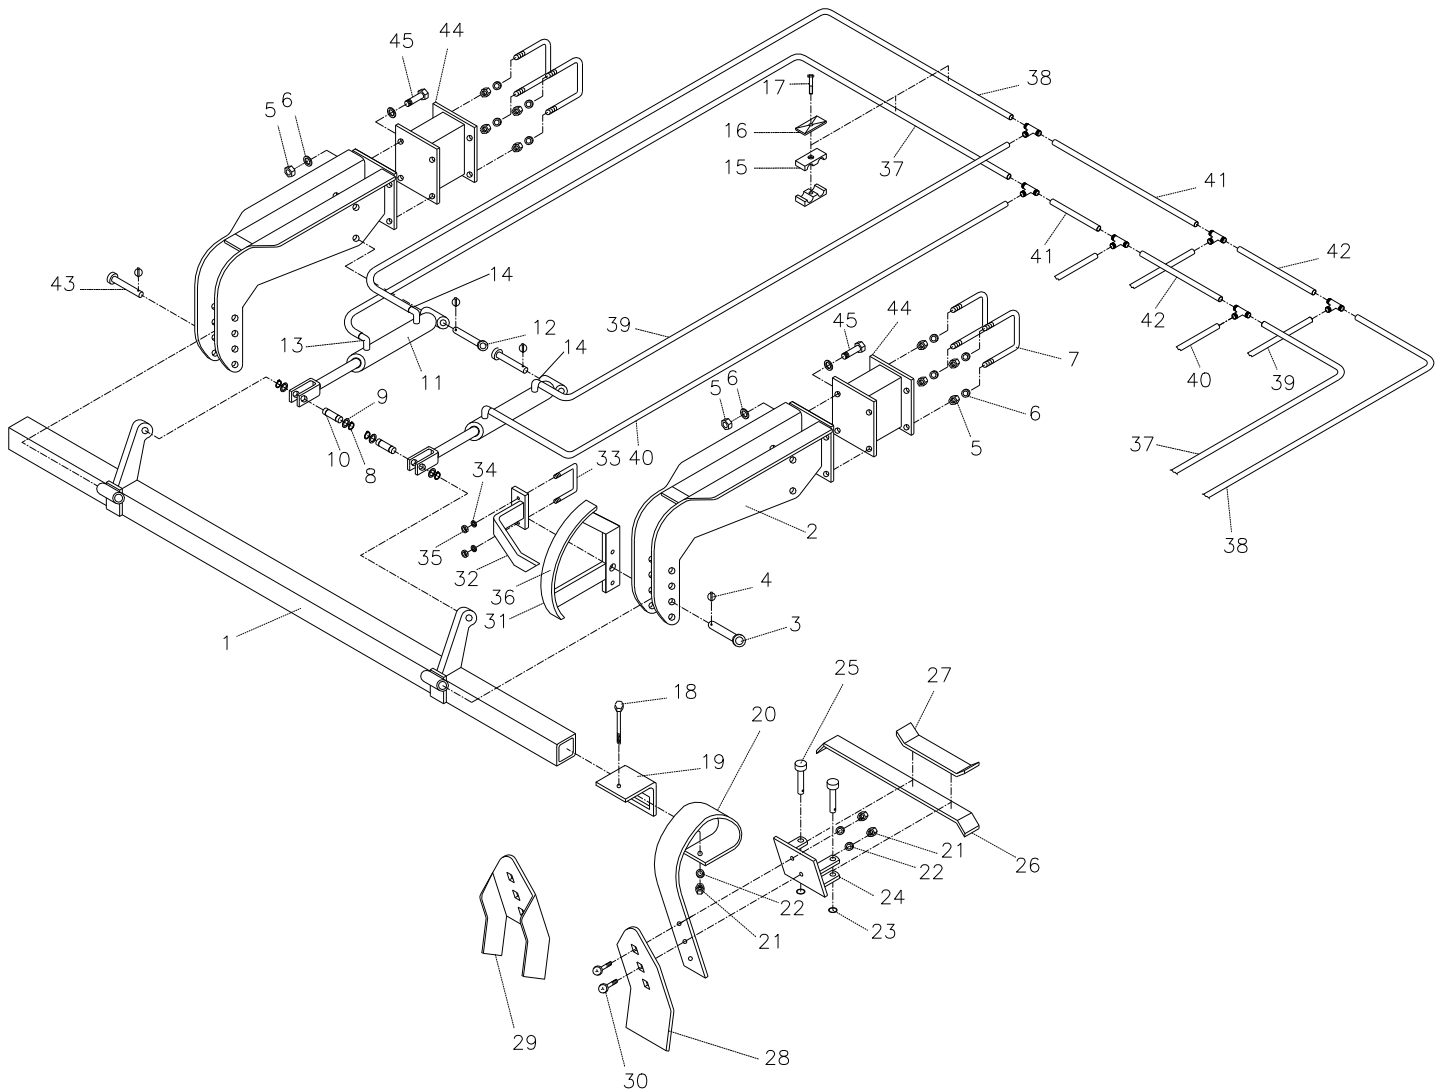


Pos.	Item no.	Designation	6.3m	8.2m
1	635053010	Bar for tines (right)	1	
1	635053030	Bar for tines (left)	1	
1	633063010	Bar for tines (right)		1
1	633063030	Bar for tines (left)		1
2	635054500	Horn	4	4
3	69525095F	Pin Ø25 L=95	1	1
4	0378200	Ring pin Ø4,5	6	6
5	0264090	Self-locking nut M16	32	32
6	0272290	Facet plate Ø16	48	48
7	690110106	U-bolt M16x200x100x200	8	8
8	691372020	Seeger circlip ring Ø20 Din 471	4	8
9	690115010	Washer Ø20/Ø28x1mm	4	8
10	69520046D	Pin Ø20 L=46	2	4
11	690200160	Cylinder 50/30 x 155	2	4
11e	690200045	Gasket set 50/30 mm	2	4
12	69520087F	Pin Ø20 L=87	2	4
13	690203006	Fitting, 90angle 10 x 3/8" BSP	2	4
14	690203002	Fitting, straight 10 - 3/8" BSP	2	4
15	690210210	Tube bracket double ø14/ø14	16	20
16	690210211	Top plate for tube-support double	8	10
17	690210213	Screw for tube-support double	8	10
18	690103098	Bolt M12x110	16	26
19	0422390	Clamp for tine	16	26
20	0422145	Tine (10x80)	16	26
20a	633052000	Tine complete	16	26
21	690112011	Binding nut 12mm	32	52
22	0272270	Facet plate Ø12	48	78
23	0431975	Locking ring 30xø3	32	52
24	633055500	Tine bracket for transverse locking system	16	26
25	69512040K	Pin ø12,5x40	32	52
26	633055710	Long locking bar for transverse locking system	14	24
27	633055700	Short locking bar for transverse locking system	4	4
28	0422143	Tine point (8x150)	16	26
29	633052150	Tine point (slicing plates)	16	26
30	0248670	Bolt (carrier bolt) M12x45	32	52
31	635151000	Scale f/depth control	1	1
32	635152000	Pointer f/depth control	1	1
33	690110020	U-bolt M10x70x70x70 mm	1	1
34	0272260	Facet plate Ø10	2	2
35	0264060	Self-locking nut M10	2	2
36	698500018	Label for scale for depth control	1	1
37	690201048	Hydraulic hose 1/4" L= 3610 mm (right side section)	1	0
The tabel continues →				



Pos.	Item no.	Designation	6.3m	8.2m
37	690201006	Hydraulic hose 1/4" L= 3800 mm (left side section)	1	0
37	690201022	Hydraulic hose 1/4" L= 3140 mm	0	2
38	690201044	Hydraulic hose 1/4" L= 3460 mm (right side section)	1	0
38	690201048	Hydraulic hose 1/4" L= 3610 mm (left side section)	1	0
38	690201060	Hydraulic hose 1/4" L= 3000 mm	0	2
39	690201009	Hydraulic hose 1/4" L= 355 mm	0	2
40	690201069	Hydraulic hose 1/4" L= 450 mm	0	2
41	690201063	Hydraulic hose 1/4" L= 1600 mm	0	2
42	690201016	Hydraulic hose 1/4" L= 1830 mm	0	2
43	69525087F	Pin Ø25 L=87	3	3
44	635055000	Connecting link	4	4
45	690103197	Bolt M16x50	16	16

Spring-Board tine with traverse locking system

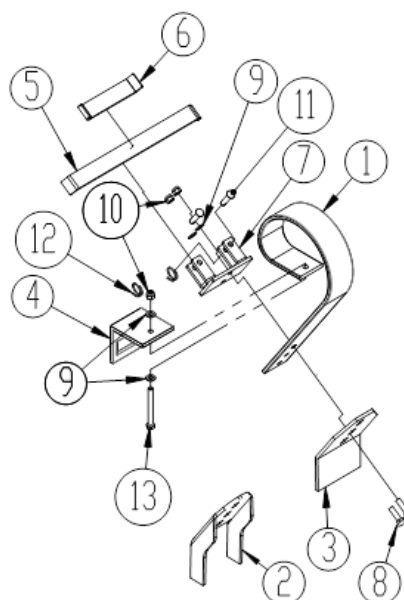


Pos.	Item no.	Designation	Pcs.
1	0422145	Springboard tine 80x10 - lang	1
2	633052150	Slicing point (crust breaker)	1
3	0422143	Wearing point for Spring-Board tine	1
4	0422390	Clamp for Spring-Board tine	1
5	633055710	Traverse bar (long) for traverse locking system	1
6	633055700	Traverse bar (short) for traverse locking system	1
7	633055500	Bracket for traverse locking system	1
8	0248670	Carriage bolt M12x45 8.8	2
9	0272270	Facet washer Ø12	4
10	0264070	Self locking nut M12	3
11	69512040K	Pin Ø12,5 L = 40 St 52 Yellow Zink Plated	2
12	690134000	Ring clip 30xø3 Galvanized	2
13	690103098	Bolt M12x110 10.9	1


Spare parts list – mounting of Multi-Seeder

Spare parts and wearing parts for HE-VA Multi-Seeder can be found in a separate operation instructions which also contains a spare parts list.

4,5 meter

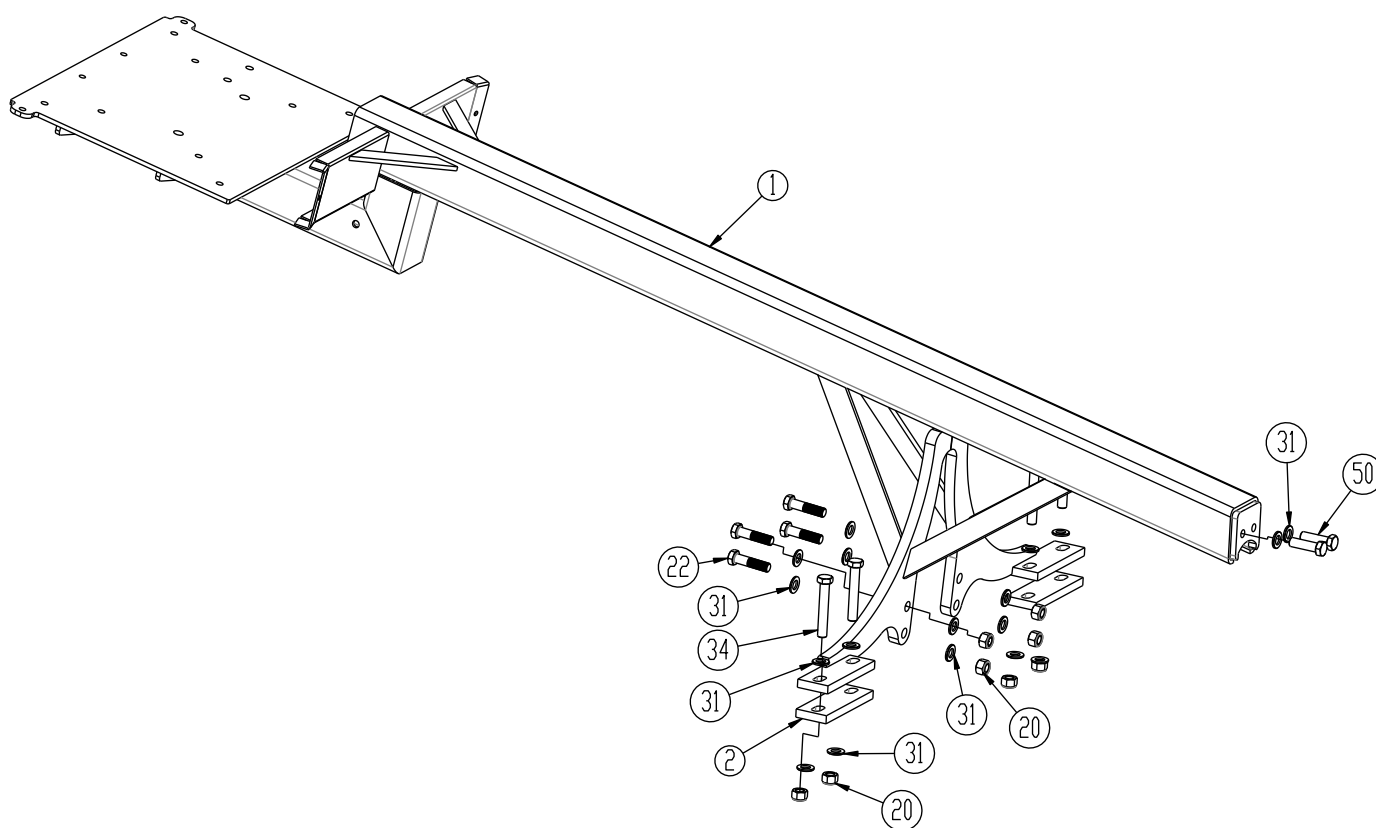

6,3 og 8,2 meter

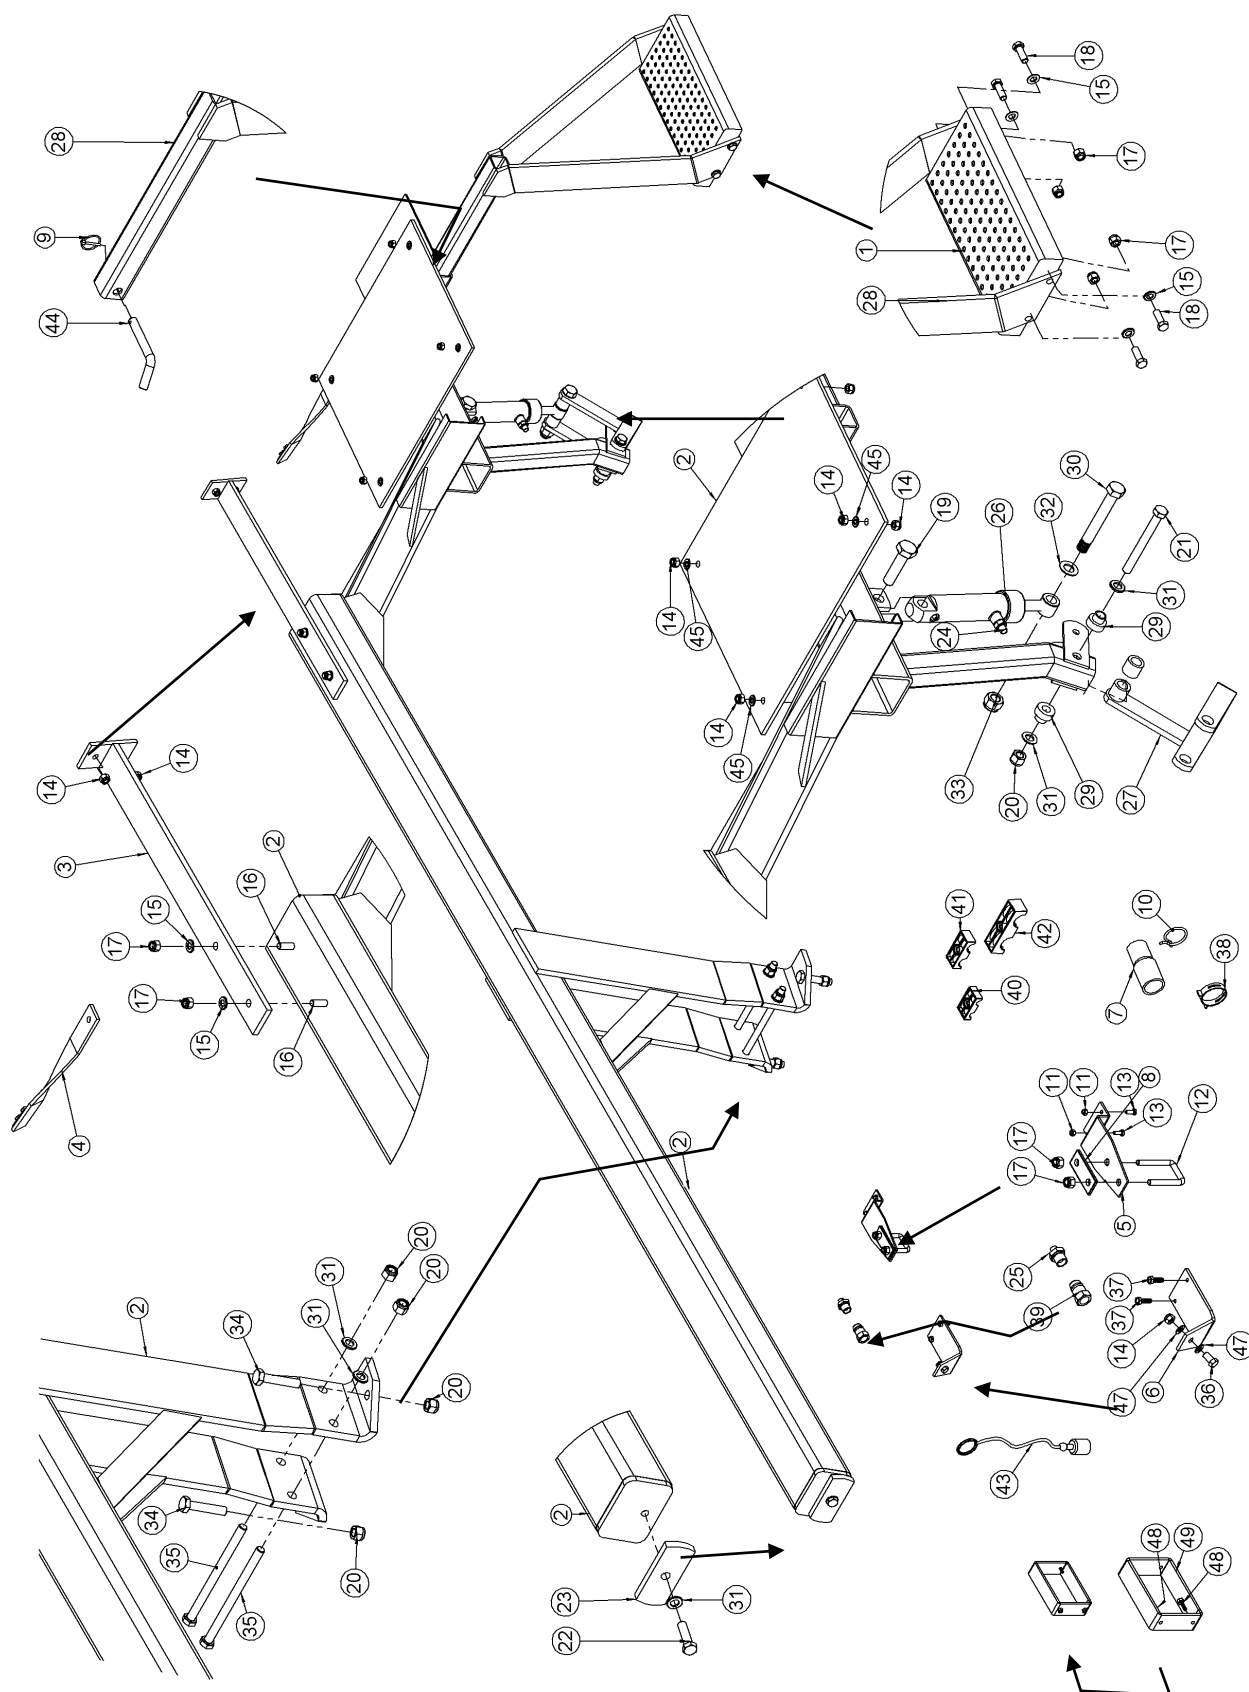


Pos.	Item no.	Designation	4,5m	6.3m	8.2m
1	0487007	Step panel 200 x 400 x 45 mm	1	1	1
2	1132998	Mounted frame for Grass-Roller	1		
2	1131850	Mounted frame for Grass-Roller			1
2	1131470	Mounted frame for Grass-Roller		1	
3	1131960	Mounted fan bracket			1
3	1131950	Bracket for fan		1	
4	1131840	Mounted cable bracket		1	1
5	1131780	Bracket for distribution plate	8	8	16
6	1131770	Wide holder short			8
7	0489020	Rubber bellow for drill hose			8
8	1012520	Clamping plate M12	8	8	16
9	0378200	Ring split, ø4.5 mm, galv. No.2045321	1	1	1
10	0435100	Clamp for drilling tube 38/12			8
11	0264040	Self-locking nut M6, fzb DIN985	16	16	32
12	0382120	U-bolt M12	8	8	16
13	0234280	Steel set screw M6x16mm 8.8 fzb	16	16	32
14	0264060	Self-locking nut M10, fzg DIN985	4	6	6
15	0272270	Facet plate 12mm, fzg	8	12	12
16	0235360	Steel set screw M12x40mm, 8.8 fzg		2	2
17	0264070	Self-locking nut M12, fzb DIN985	20	21	37
18	0235350	Steel set screw M12x35mm, 8.8 fzb	4	4	4
19	0236170	Steel bolt M20x80mm, 8.8 fzg		1	1
20	0264090	Self-locking nut M16, fzb DIN985	8	5	5
21	0235950	Steel bolt M16x150mm, 8.8 fzb		1	1
22	0235840	Steel bolt M16x60mm, 8.8 fzb	4	1	1
23	1131120	Clamping flange		1	1
24	0444500	Hexagon nipple 1/4" Kon 01BK04		2	2
25	0444490	Hexagon nipple 1/2"x1/4" 02BP0804		2	2
26	0468200	Hydraulic cylinder 40/20 x99mm 2x1/4"		1	1
26a	0468270	Gasket set			
27	1131130	Mounted lifting bracket for wheel, short		1	1
28	30551200	Mounted bracket for step panel	1	1	1
29	1130290	Bush		2	2
30	0236240	Steel bolt M20x150mm, 8.8 fzb		1	1
31	0272290	Facet plate 16mm, fzb	18	11	11
32	0272310	Facet plate 20mm, fzb		4	4
33	0264110	Self-locking nut M20, fzb DIN985		2	2
34	0235880	Steel bolt M16x80mm, 8.8 fzb			2
34	0235900	Steel bolt M16x100mm, 8.8 fzb		4	
The tabel continues →					

Pos.	Item no.	Designation		6.3m	8.2m
35	0242760	Machine bolt M16x240mm, 4.6 fzb			2
36	0235030	Steel set screw M10x20mm, 8.8 fzb		8	8
37	0230825	Screw Tapetite M8x25 6k.hov 211-08-025			16
38	0435110	Clamp for tube 46/12			8
39	0444020	Quick-coupling ½" Hanpart-kegle Sterling		2	2
40	0449430	Tube-support double ø14-14mm green		1	1
41	0449700	Tube-support double ø22-22mm green (at hydraulic fan)		1	1
42	0449730	Tube-support double ø32-32mm green		2	5
43	0449020	Dust cap 1/2" Std., 1/2" C51		2	2
44	1030280	Pin for wing, ø16x150mm		1	1
45	0235430	Steel bolt M12x75mm, 8.8 fzb	4	4	4
46	0230320	Screw Tapetite M6x50 6k.hov 211-06-050		2	7
47	0272260	Facet plate 10mm, fzb DIN125B		8	18
48	0230290	Screw Tapetite M6x20 6k.hov 211-06-020		4	4
49	630327242	Hose bracket square		2	2
	0455160	Hydr. hose 1/4"x8000 mm			1
	0455060	Hydr. hose 1/4"x6900 mm		1	
	0454490	Hydr. hose 1/2" x 1550mm			1
	0434450	Clamp Ø22-32mm, 9 mm wide		8	32
	0434531	Clamp Ø68-85mm, 9 mm wide			2
	0434531	Clamp Ø68-85mm, 9 mm wide (at hydraulic fan)		2	
50	0235830	Bolt M16x55 8.8	2	2	


Spare parts list Hydraulics

Tip, Folde & vægtoverføringssystem, rød og blå 4,5m

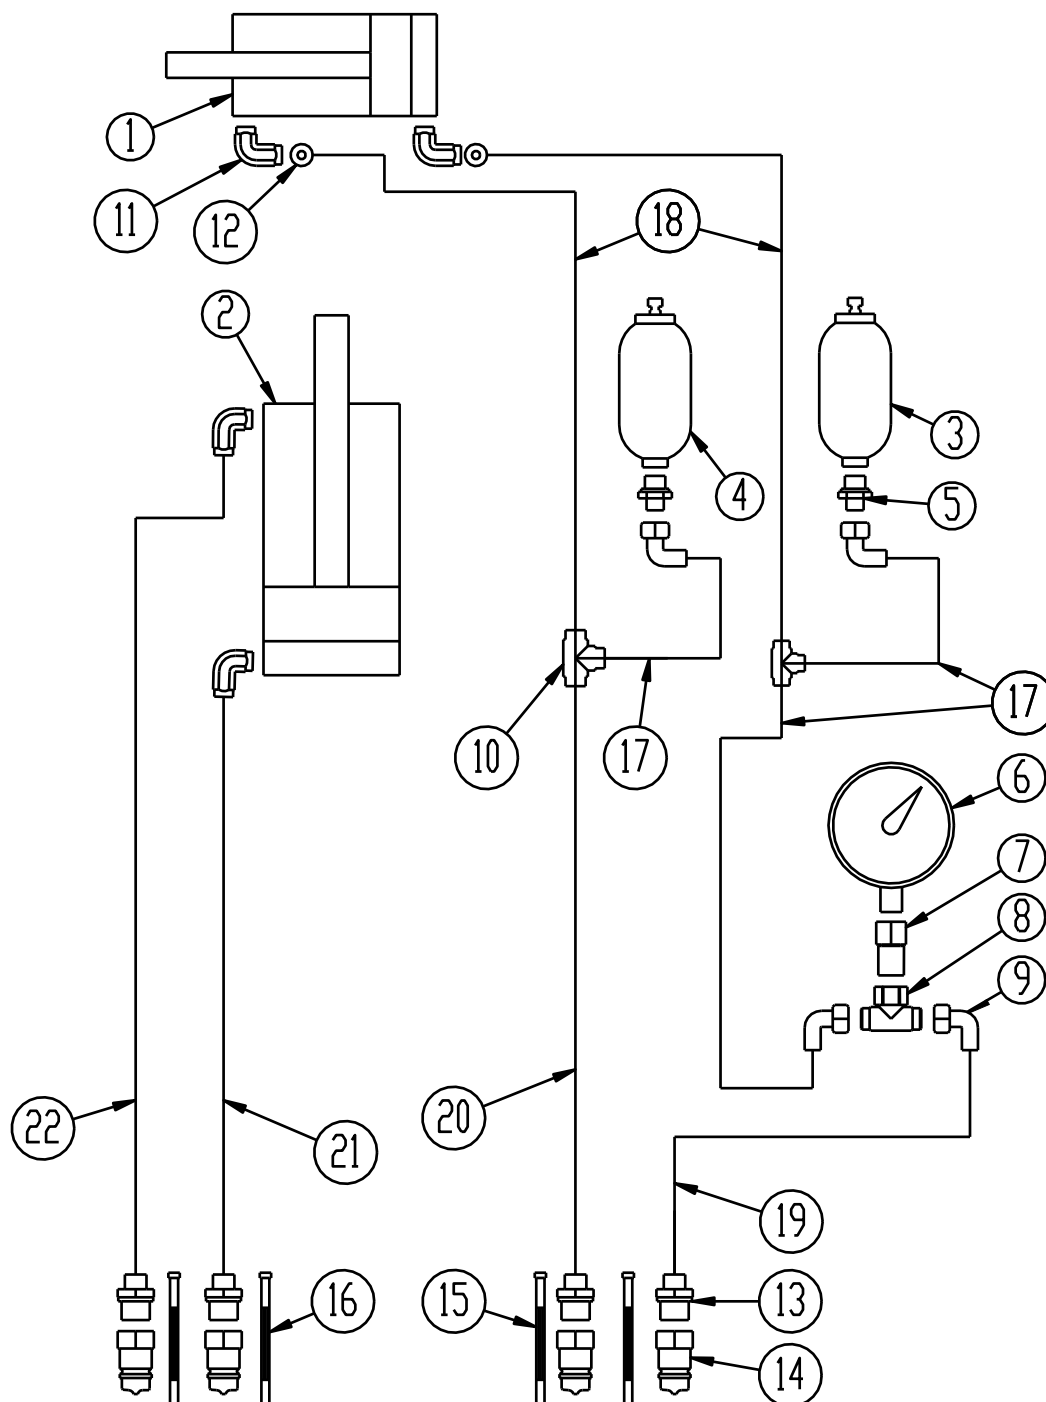


Pos.	Item no.	Designation	4,5 m
1	630286167	Cylinder folding 70/40 x 600	
1a	690200068	Gasket set 70/40	
2	690200109	Cylinder tip 100/50 x 500	
2a	690200284	Gasket set 100/50 Hydrflex	
3	690206410	Accumulator H700R. 40 bar	
4	690206403	Accumulator H700R 15 bar	
5	690203096	Fitting straight M18x1,5 / Ø10	
6	690206822	Manometer 250 bar Ø100mm	
7	690206823	Manometer fitting 10- ½"	
8	690203014	Fitting T - 10 with union nut	
9	0446678	Fitting 90° Ø10	
10	690203015	Fitting T - 10	
11	690203006	Fitting, 90angle 10-3/8" Bsp	
12	690207901	Restrictor 1mm	
13	690203003	Fitting, straight 10- ½" BSP	
14	690203001	Quick coupling, male E402 ½"	
15	690119202	Cable straps (blue)	
16	690119203	Cable straps (red)	
17	690201042	Hydraulic hose L = 500 1/4" st/st	
18	690201021	Hydraulic hose L = 2300 1/4" st/st	
19	690201237	Hydraulic hose L = 2800 1/4" st/st	
20	690201022	Hydraulic hose L = 3140 1/4" st/st	
21	690201006	Hydraulic hose L = 3800 1/4" st/st	
22	690201029	Hydraulic hose L = 4300 1/4" st/st	

Hydraulics for folding & weight transfer system (blue) 6.3m

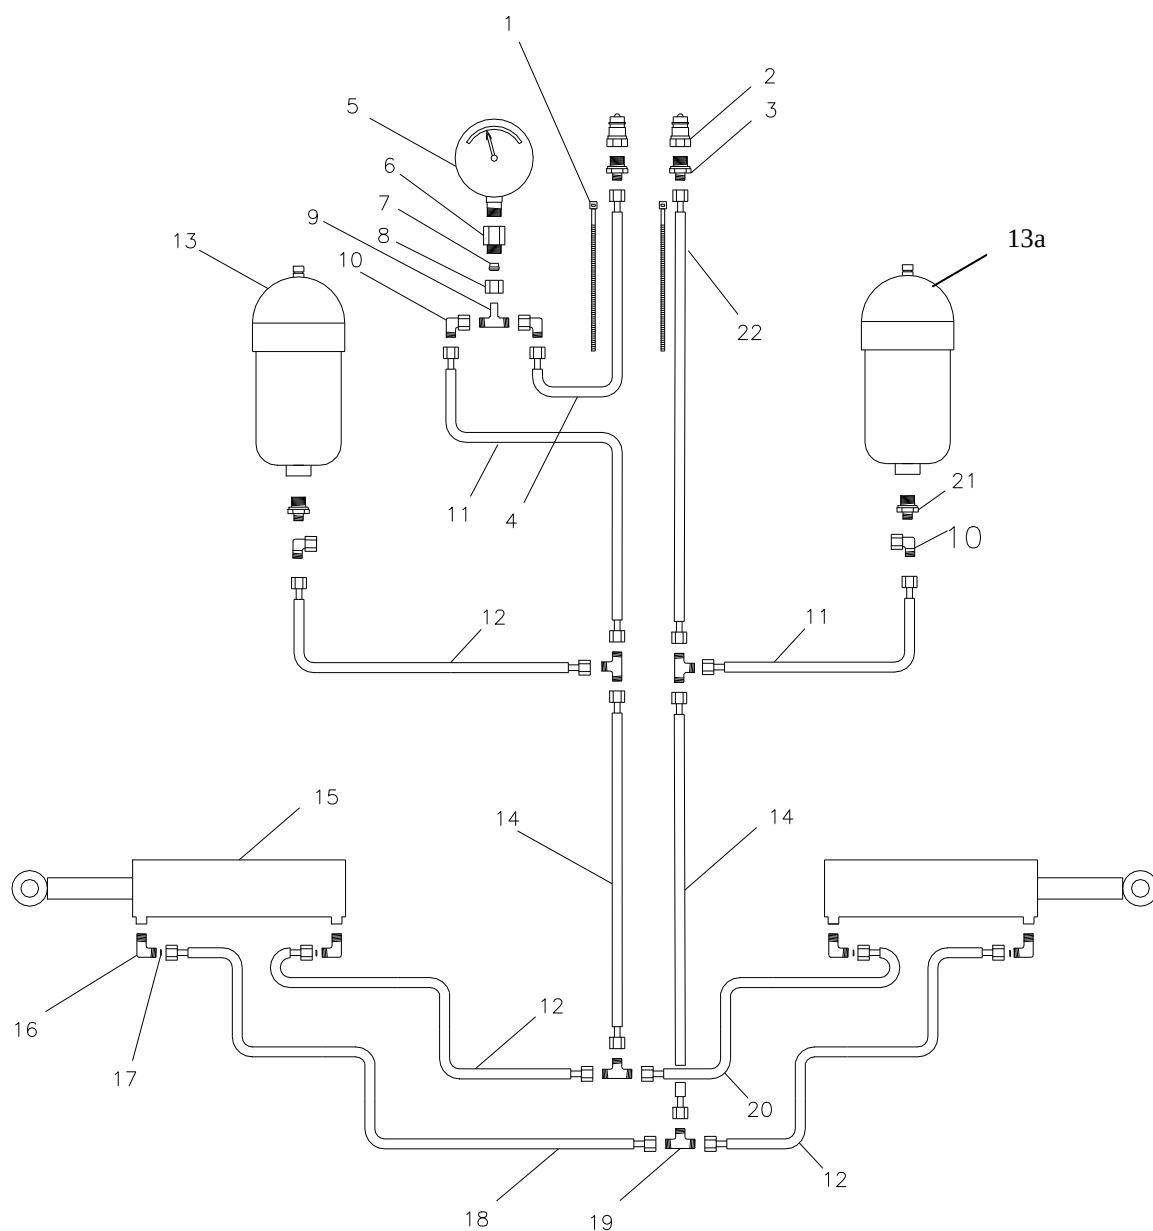


Tip cylinder for middle section (red) 6.3m

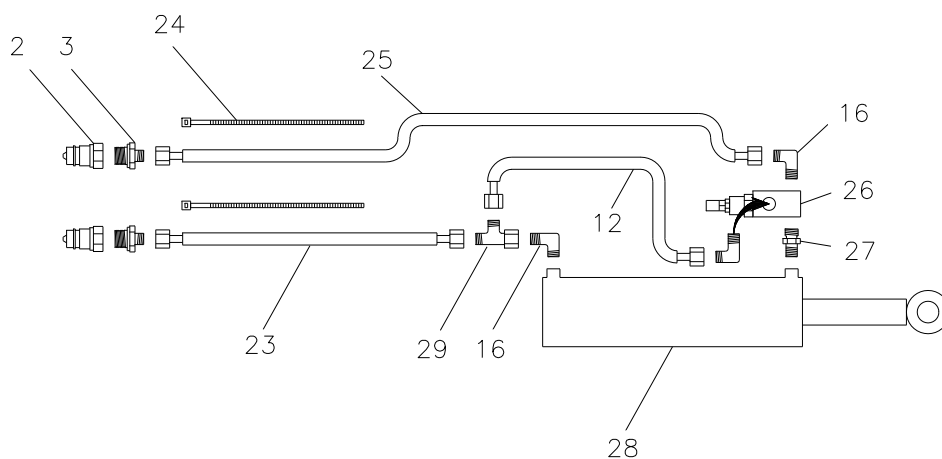


Pos.	Item no.	Designation	6.3 m
1	690119202	Cable straps (blue)	2
2	690203001	Quick coupling, male E402 ½"	4
3	690203003	Fitting, straight 10- ½" BSP	4
4	690201006	Hydraulic hose 3800mm ¼" st/st	1
5	690206822	Manometer 250 bar Ø100mm	1
6	690206823	Manometer fitting 10- ½"	1
7	690203010	Cutting ring Ø10	1
8	690203011	Union nut Ø10	1
9	690203020	Fitting EVT 10 L without union nut/cutting ring	1
10	690203016	Fitting 90angle 10mm	4
11	690201042	Hydraulic hose 500mm 1/4" st/st	2
12	690201015	Hydraulic hose 710mm 1/4" st/st	4
13	690206410	Accumulator H700R. 40 Bar	1
13a	690206403	Accumulator H700R 15 bar	1
14	690201016	Hydraulic hose 1830mm 1/4" st/st	2
15	630762047	Cross cylinder 90/40x280mm (right + left)	2
15A	690200274	Gasket set 90/40	
16	690203006	Fitting, 90angle 10-3/8" Bsp	7
17	690207901	Restrictor 1mm	4
18	690201055	Hydraulic hose 1010mm 1/4" st/st	1
19	690203015	Fitting T10	4
20	690201059	Hydraulic hose 350mm 1/4" st/st	1
21	690203012	Fitting, straight M18x1,5x12mm w/joint ring	2
22	690201038	Hydraulic hose 4000mm 1/4" st/st	1
23	690201029	Hydraulic hose 4300mm 1/4" st/st	1
24	690119203	Cable straps (red)	2
25	690201045	Hydraulic hose 4800mm 1/4" st/st	1
26	690207104	Adjustable pressure control valve 3/8"	1
27	690202810	Hexagon nipple 3/8"x 3/8" BSP-T	1
28	690200020	Tip cylinder Ø100/50 x 700mm, Ø35 mm	1
28a	690200028	Gasket set 100/50	
29	690203004	Fitting T10V	1

Hydraulics for folding & weight transfer system (blue) 8.2m (Before serial no. 352600)

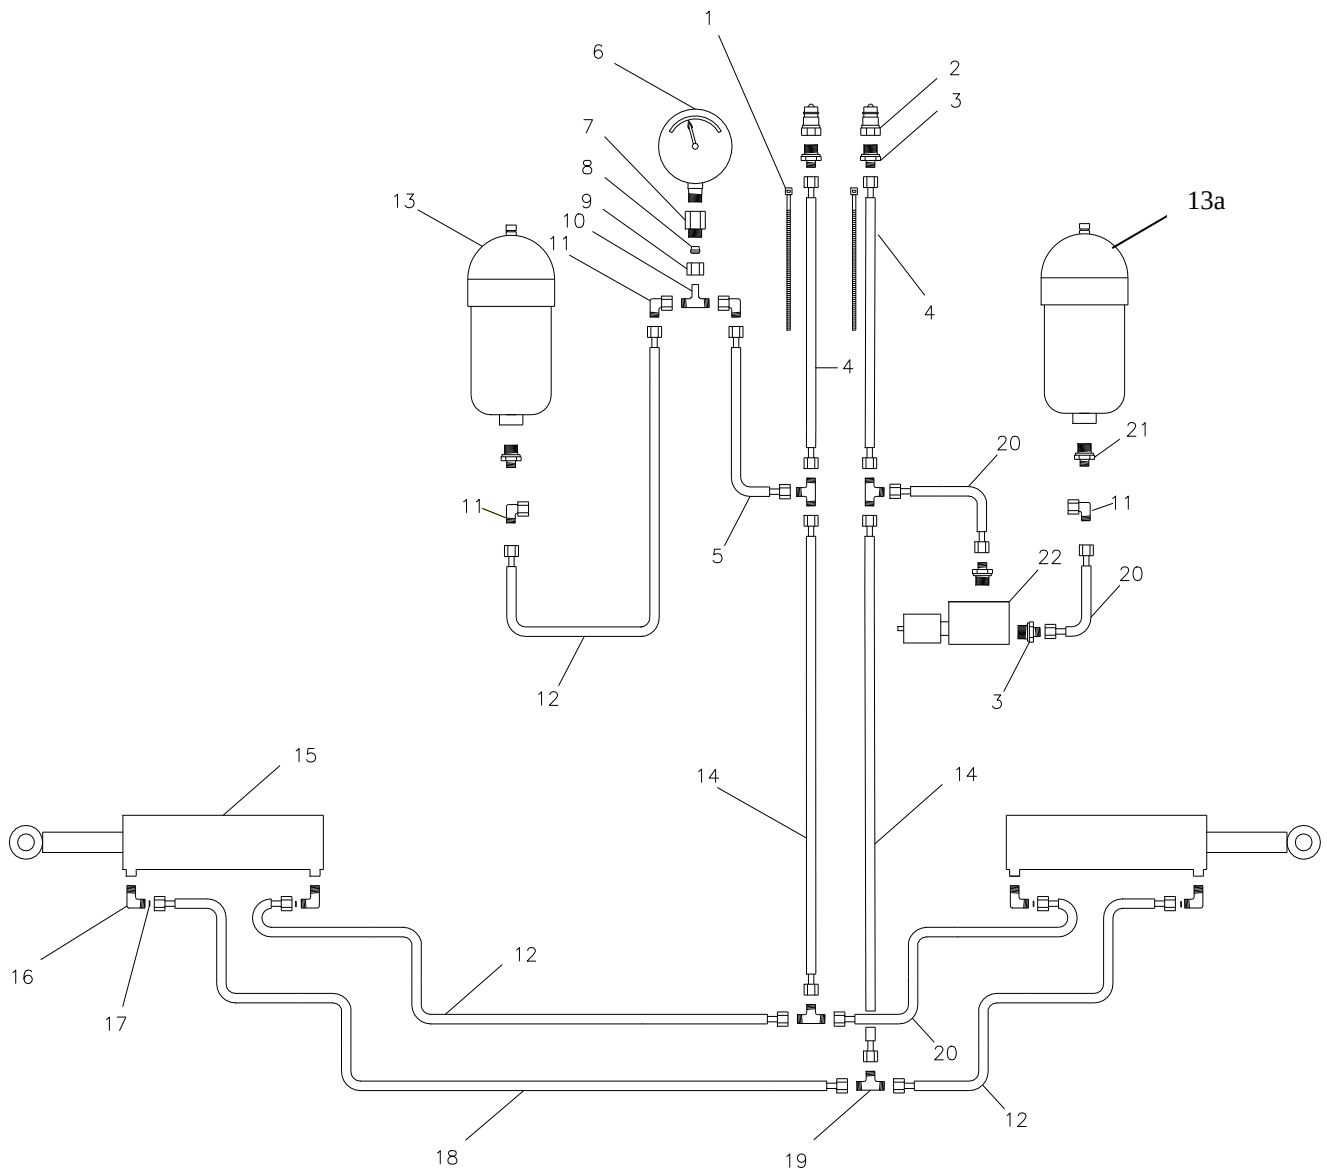


Tip cylinder for middle section (red) 8.2m

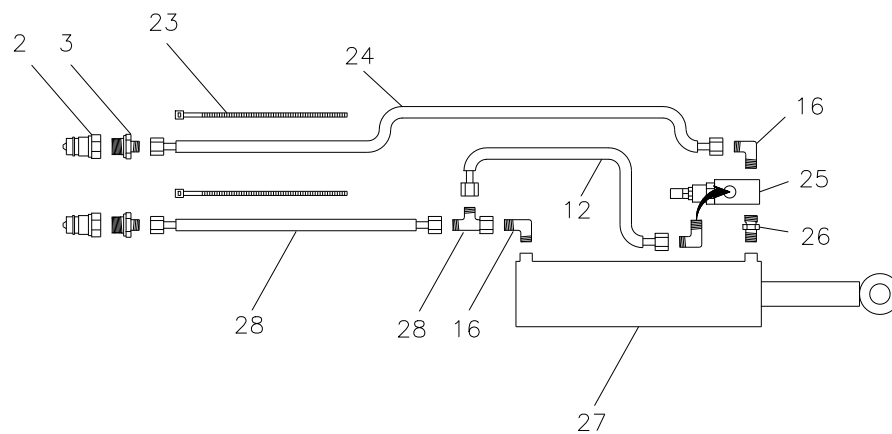

Pos.	Item no.	Designation	8.2m
1	690119202	Cable straps (blue)	2
2	690203001	Quick coupling, male E402 ½"	4
3	690203003	Fitting, straight 10- ½" BSP	4
4	690201048	Hydraulic hose 3610mm 1/4" st/st	2
5	690201051	Hydraulic hose 250mm ¼ " st/st	1
6	690206822	Manometer 250 bar Ø100mm	1
7	690206823	Manometer fitting 10- ½"	1
8	690203010	Cutting ring Ø10	1
9	690203011	Union nut Ø10	1
10	690203020	Fitting EVT 10 L without union nut / cutting ring	1
11	690203016	Fitting 90angle 10mm	4
12	690201055	Hydraulic hose 1010mm 1/4" st/st	3
13	690206410	Accumulator H700R. 40 Bar	1
13a	690206403	Accumulator H700R 15 bar	1
14	690201022	Hydraulic hose 3140mm 1/4" st/st	2
15	630762047	Cross cylinder 90/40x280mm (right)	2
15a	690200274	Gasket set 90/40	
16	690203006	Fitting, 90angle 10-3/8" Bsp	4
17	690207901	Restrictor 1mm	4
18	690201055	Hydraulic hose 1010mm 1/4" st/st	2
19	690203015	Fitting T10	4
20	690201059	Hydraulic hose 350mm 1/4" st/st	3
21	690203012	Fitting, straight M18x1,5x12mm w/joint ring	2
22	690209453	Depth stop valve, electric	1
23	690119203	Cable straps (red)	2
24	690201025	Hydraulic hose 5640mm 1/4" st/st	1
25	690207104	Adjustable pressure control valve 3/8"	1
26	690202810	Hexagon nipple 3/8"x 3/8" BSP-T	1
27	690200014	Tip cylinder Ø100/60 x 1000mm, Ø35 mm	1
27a	690200019	Gasket set 100/60	
27	690200315	Tip cylinder Ø110/60 x 1000 mm, Ø35/Ø35 mm	1
27b	690200019	Gasket set 110/60	
28	690203004	Fitting T10V	1
29	690201047	Hydraulic hose 4610mm 1/4" st/st	1

Hydraulics for folding & weight transfer system (blue) 8.2m (From serial no. 352600)

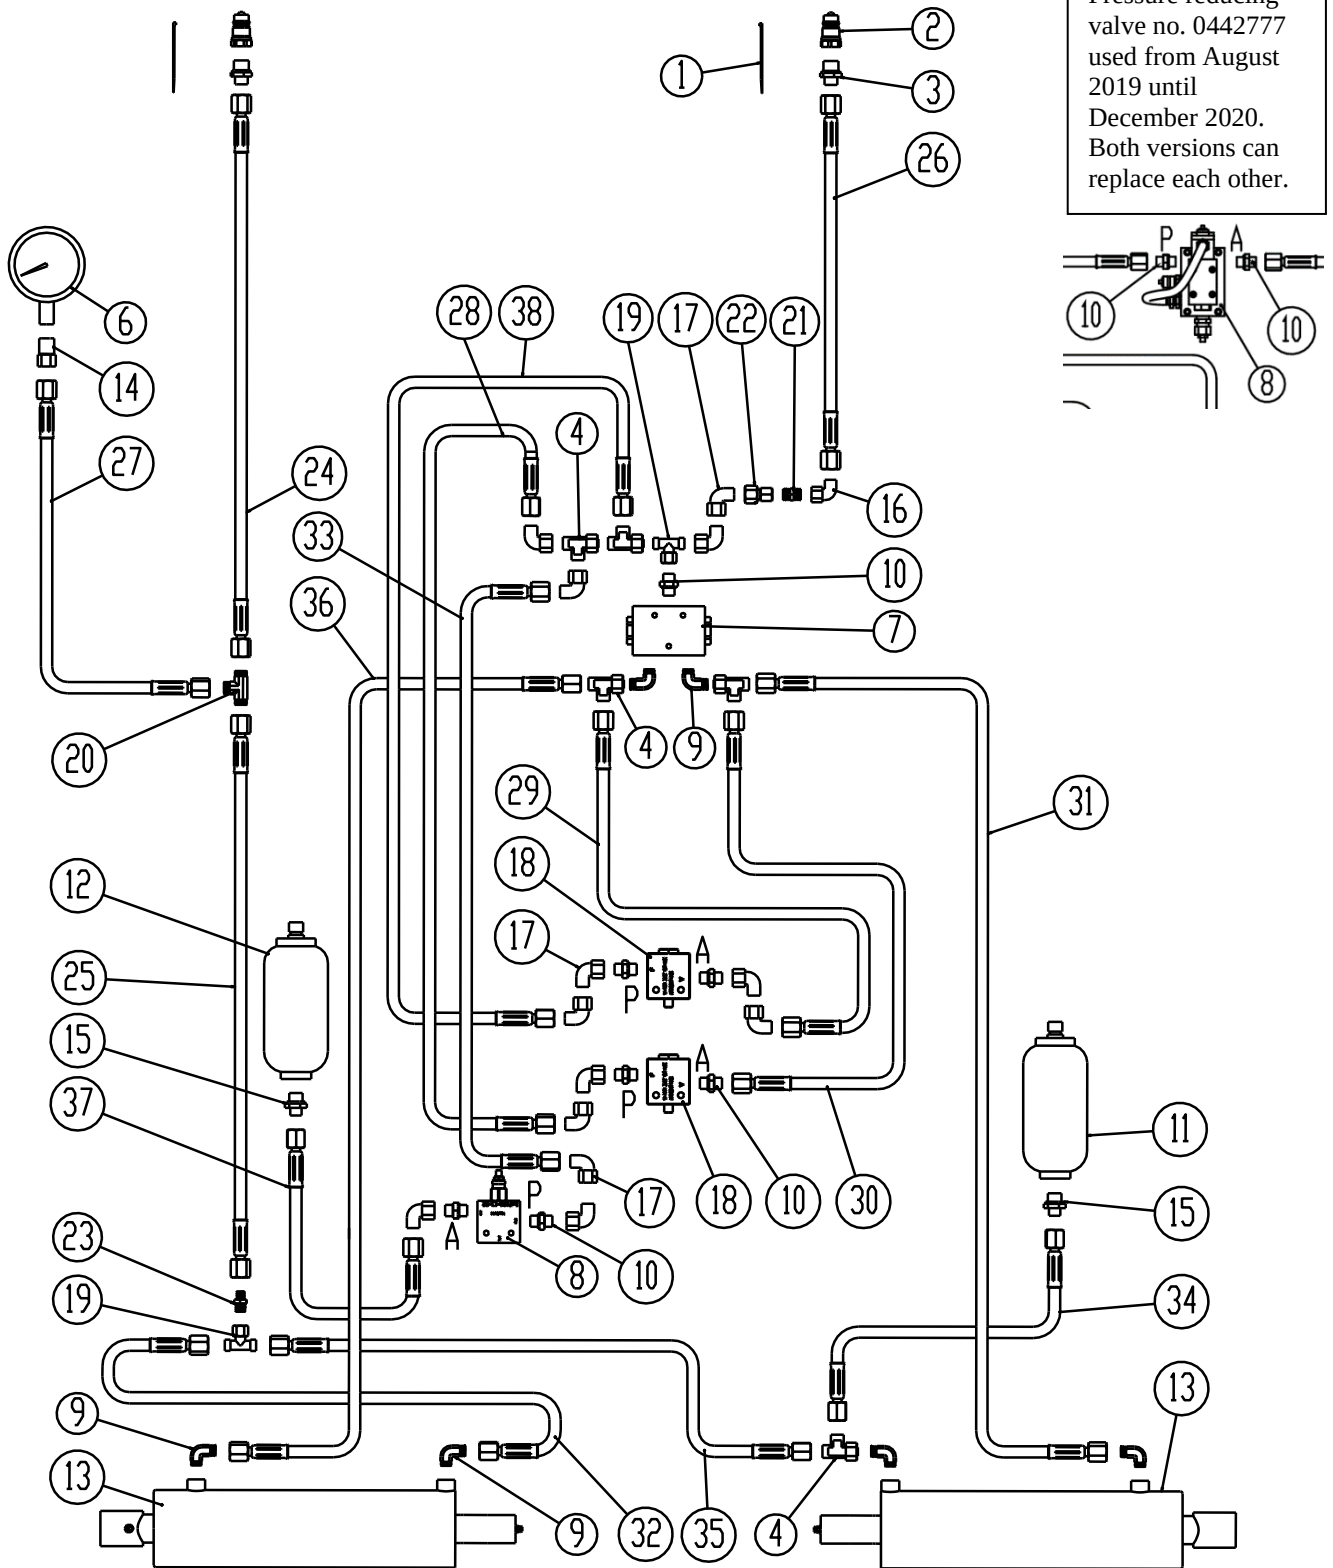


Pos.	Item no.	Designation	8,2 m
1	690119202	Straps (red)	2
2	0444020	Quick coupling, male E402 ½"	2
3	690203103	Fitting, straight 10- ½" BSP	2
4	690203017	Fitting T12, w/O-ring	6
5	690203115	Fitting T12	2
6	690206822	Manometer 250 bar, Ø100	1
7	0442775	Flowdivider 3/8" 50/50% 10-20 l/min	1
8	0442777	Pressure reducing valve 3/8" From August 2019 - December 2020	1
8a	0442776	Pressure reducing valve 3/8", set to 30 bar, Port 1 = A, Port 2 = P, Notice: Can replace pos. 8 no. 0442777 From January 2021	1
9	690203106	Fitting 90° 12-3/8" BSP	6
10	0446754	Fitting straight, Ø12 x 3/8"	7
11	690206410	Accumulator H700R 40 bar	1
12	690206403	Accumulator H700R 15 bar	1
13	690200340	Cylinder Ø100/40x285	2
14	690206825	Manometer Fitting Ø12 x ¼"	1
15	690203097	Fitting straight M18x1,5x10 mm	2
16	0446678	Fitting 90° adjustable Ø10	1
17	0446679	Fitting 90° adjustable Ø12	13
18	690207108	End stop valve V-101 3/8" DT NC	2
19	690203125	Fitting T12 L adjustable w/O-ring	2
20	690203015	Fitting T10	1
21	690203018	Fitting straight ø10-ø10	2
22	0447529	Fitting straight ø12-ø10 w/2 x O-rings	2
23	0446755	Fitting straight ø12-ø10	1
24	690201048	Hydraulic hose 1/4" L = 3610 mm st/st	1
25	690201022	Hydraulic hose 1/4" L = 3140 mm st/st	1
26	690201028	Hydraulic hose 1/4" L = 6700 mm st/st	1
27	690201009	Hydraulic hose 1/4" L = 355 mm st/st	1
28	0454172	Hydraulic hose 3/8" L = 500 mm st/st	1
29	0454172	Hydraulic hose 3/8" L = 500 mm st/st	1
30	0454172	Hydraulic hose 3/8" L = 500 mm st/st	1
31	0454182	Hydraulic hose 3/8" L = 600 mm st/st	1
32	0454182	Hydraulic hose 3/8" L = 600 mm st/st	1
33	0454172	Hydraulic hose 3/8" L = 500 mm st/st	1
34	1454160	Hydraulic hose 3/8" L = 400 mm st/st	1
35	0454130	Hydraulic hose 3/8" L = 310 mm st/st	1
36	0454234	Hydraulic hose 3/8" L = 870 mm st/st	1
37	0454140	Hydraulic hose 3/8" L = 350 mm st/st	1
38	0454182	Hydraulic hose 3/8" L = 600 mm st/st	1

[illegible]


Pos.	Item no.	Designation	6.3 m
1	690119204	Cable straps (green)	2
2	690203001	Quick coupling, male E402 ½"	2
3	690203003	Fitting, straight 10- ½" BSP	2
4	690201038	Hydraulic hose 4000mm ¼ " st/st	2
5	690201044	Hydraulic hose 3460mm 1/4" st/st	1
6	690201064	Hydraulic hose 820mm ¼ " st/st	1
7	690200040	Cylinder 50/30x155mm ø20/ø20	3
7a	690200045	Gasket set 50/30	
8	690203006	Fitting, 90angle 10-3/8" Bsp	6
9	690201055	Hydraulic hose 1010mm ¼ " st/st	1
10	690201068	Hydraulic hose 1950mm ¼ " st/st	2
11	690201006	Hydraulic hose 3800mm 1/4" st/st	1
12	690201048	Hydraulic hose 3610mm 1/4" st/st	2
13	690203015	Fitting T10	4
14	690207901	Restrictor 1mm	3

Hydraulics, front harrow (green) 8.2m

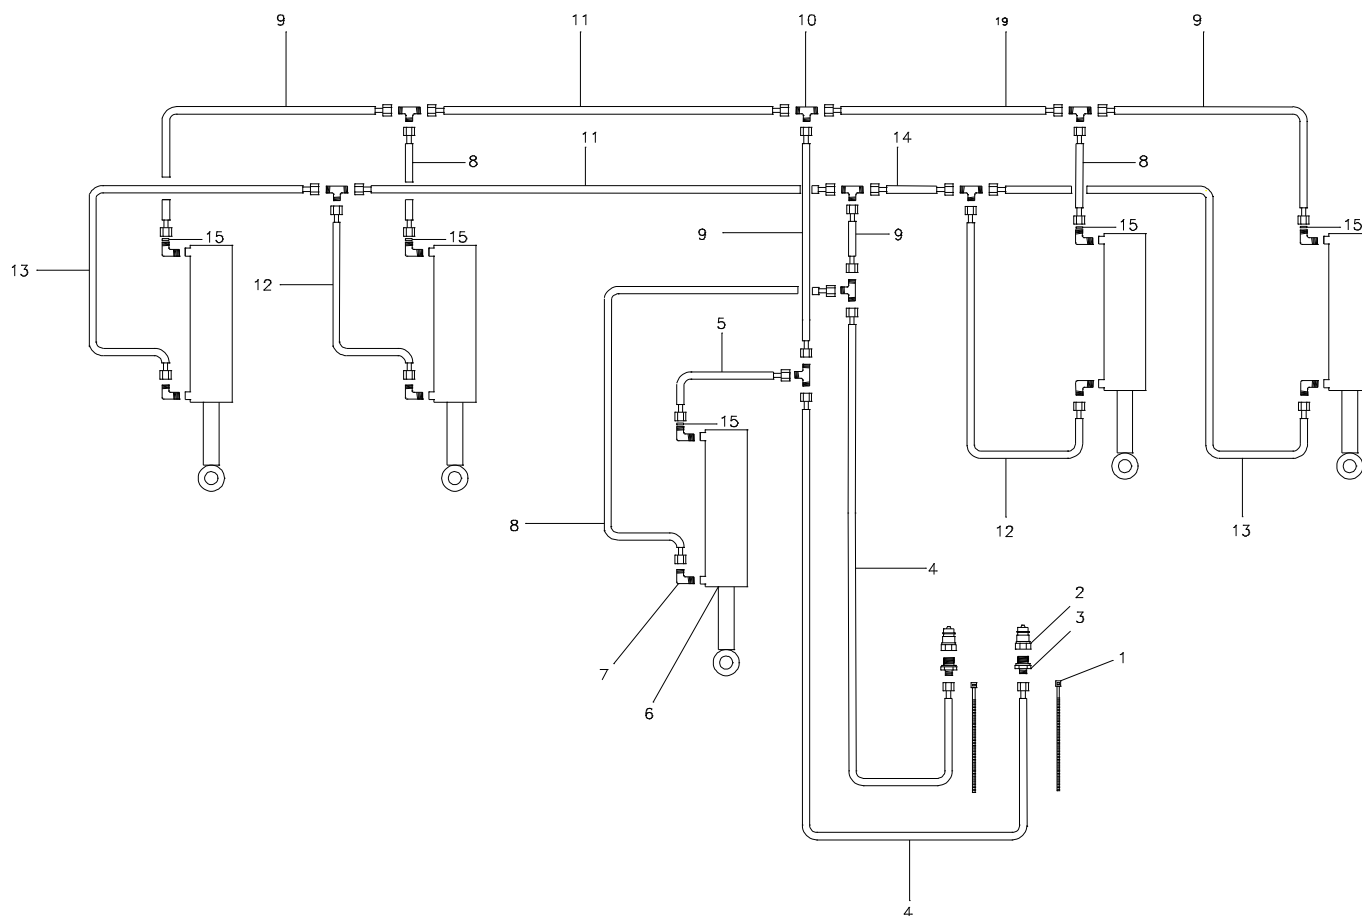


Pos.	Item no.	Designation	8.2m
1	690119204	Cable straps (green)	2
2	690203001	Quick coupling, male E402 1/2"	2
3	690203003	Fitting, straight 10- 1/2" BSP	2
4	690201045	Hydraulic hose 4800mm 1/4" st/st	2
5	690201042	Hydraulic hose 500mm 1/4" st/st	1
6	690200040	Cylinder 50/30x155mm ø20/ø20	5
6a	690200045	Gasket set 50/30	
7	690203006	Fitting, 90angle 10-3/8" Bsp	10
8	690201015	Hydraulic hose 710mm 1/4" st/st	3
9	690201068	Hydraulic hose 1950mm 1/4" st/st	4
10	690203015	Fitting T10	8
11	690201237	Hydraulic hose 2800mm 1/4" st/st	2
12	690201052	Hydraulic hose 935mm 1/4" st/st	2
13	690201021	Hydraulic hose 2300mm 1/4" st/st	2
14	690201060	Hydraulic hose 3000mm 1/4" st/st	2
15	690207901	Restrictor 1mm	5

Spring-Board 4,5 - 6,3m

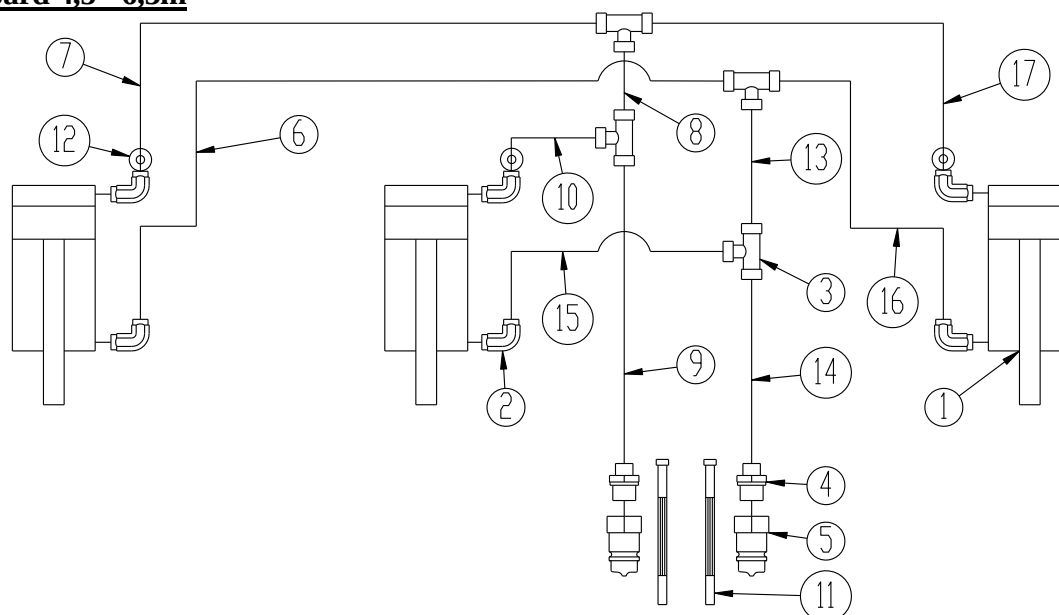


Pos.	Item no.	Designation	4,5m	6,3m
1	690200160	Cylinder 50/30x155 Ø20,25/Clevis	3	3
1a	690200046	Gasket set 50/30 Laizhou		
2	690203006	Fitting, 90° 10-3/8" Bsp	6	6
3	690203015	Fitting T10	4	4
4	690203003	Fitting straight 10- 1/2" BSP	2	2
5	690203001	Quick coupling, male E402 1/2"	2	2
6	690201023	Hydraulic hose 3160 mm 1/4" st/st (right section)	2	
6	690201048	Hydraulic hose 3610 mm 1/4" st/st (right section)		1
7	690201060	Hydraulic hose 3000 mm 1/4" st/st (right section)	1	
7	690201044	Hydraulic hose 3460 mm 1/4" st/st (right section)		1
8	690201020	Hydraulic hose 1625 mm 1/4" st/st	1	
8	690201032	Hydraulikslange 1130 mm 1/4" st/st		1
9	690201005	Hydraulic hose 3300 mm 1/4" st/st	1	
9	690201038	Hydraulikslange 4000 mm 1/4" st/st		1
10	690201055	Hydraulic hose 1010 mm 1/4" st/st	1	
10	690201051	Hydraulikslange 250 mm 1/4" st/st		1
11		Straps, yellow	2	
12	690207901	Restrictor ø1mm	3	
13	690201020	Hydraulic hose 1625 mm 1/4" st/st	1	
13	690201053	Hydraulic hose 1260 mm 1/4" st/st		1
14	690201005	Hydraulic hose 3300 mm 1/4" st/st	1	
14	690201006	Hydraulic hose 3800 mm 1/4" st/st		1
15	690201055	Hydraulic hose 1010 mm 1/4" st/st	1	
15	690201059	Hydraulic hose 350 mm 1/4" st/st		1
16	690201005	Hydraulic hose 3300 mm 1/4" st/st (left section)	1	
16	690201006	Hydraulic hose 3800 mm 1/4" st/st (left section)		1
17	690201023	Hydraulic hose 3160 mm 1/4" st/st (left section)	1	
17	690201048	Hydraulic hose 3610 mm 1/4" st/st (left section)		1

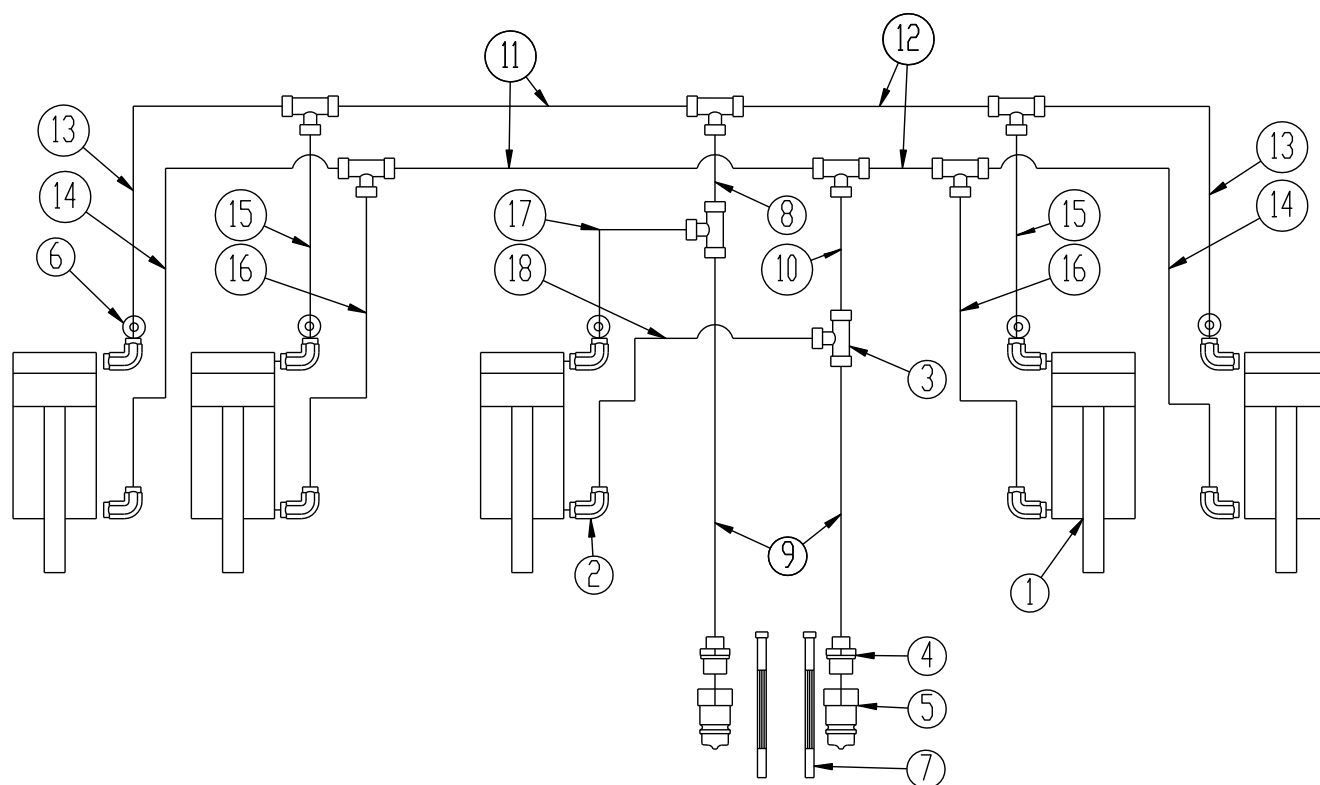

Pos.	Item no.	Designation	8,2m
1	690200160	Cylinder 50/30x155 Ø20,25/Clevis	5
1a	690200046	Gasket set 50/30 Laizhou	
2	690203006	Fitting, 90° 10-3/8" Bsp	10
3	690203015	Fitting T10	8
4	690203003	Fitting straight 10- ½" BSP	2
5	690203001	Quick coupling, male E402 ½"	2
6	690207901	Restrictor ø1mm	5
7		Straps	2
8	690201032	Hydraulic hose 1130 mm 1/4" st/st	1
9	690201047	Hydraulic hose 4610 mm 1/4" st/st	2
10	690201053	Hydraulic hose 1260 mm 1/4" st/st	1
11	690201063	Hydraulic hose 1600 mm 1/4" st/st	2
12	690201016	Hydraulic hose 1830 mm 1/4" st/st	2
13	690201060	Hydraulic hose 3000 mm 1/4" st/st	2
14	690201022	Hydraulic hose 3140 mm 1/4" st/st	2
15	690201009	Hydraulic hose 355 mm 1/4" st/st	2
16	690201069	Hydraulic hose 350 mm 1/4" st/st	2
17	690201051	Hydraulic hose 250 mm 1/4" st/st	1
18	690201059	Hydraulic hose 350 mm 1/4" st/st	1



Hydraulic brakes

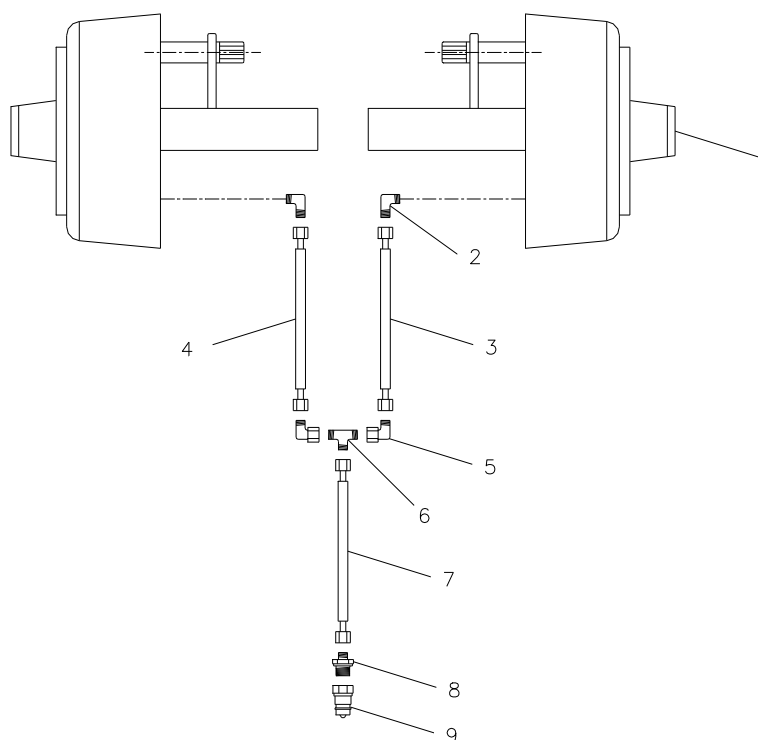

Pos.	Item no.	Designation	Pcs.
1		Look at pos. 4 page 18	2
2	690202921	Fitting, 90angle 1/4"x 10 w/union nut	2
3	690201018	Hydraulic hose 1480mm 1/4" st/st	1
4	690201053	Hydraulic hose 1260mm 1/4" st/st	1
5	690203016	Fitting 90angle 10mm	2
6	690203015	Fitting T10	1
7	690201012	Hydraulic hose 6000mm 1/4" st/st	1
8	690203003	Fitting, straight 10-1/2" BSP	2
9	690203013	Quick coupling 1/2" female BSP ISO567	2

Air brakes

New model brake arm and belongings
See pos. 31 - 35

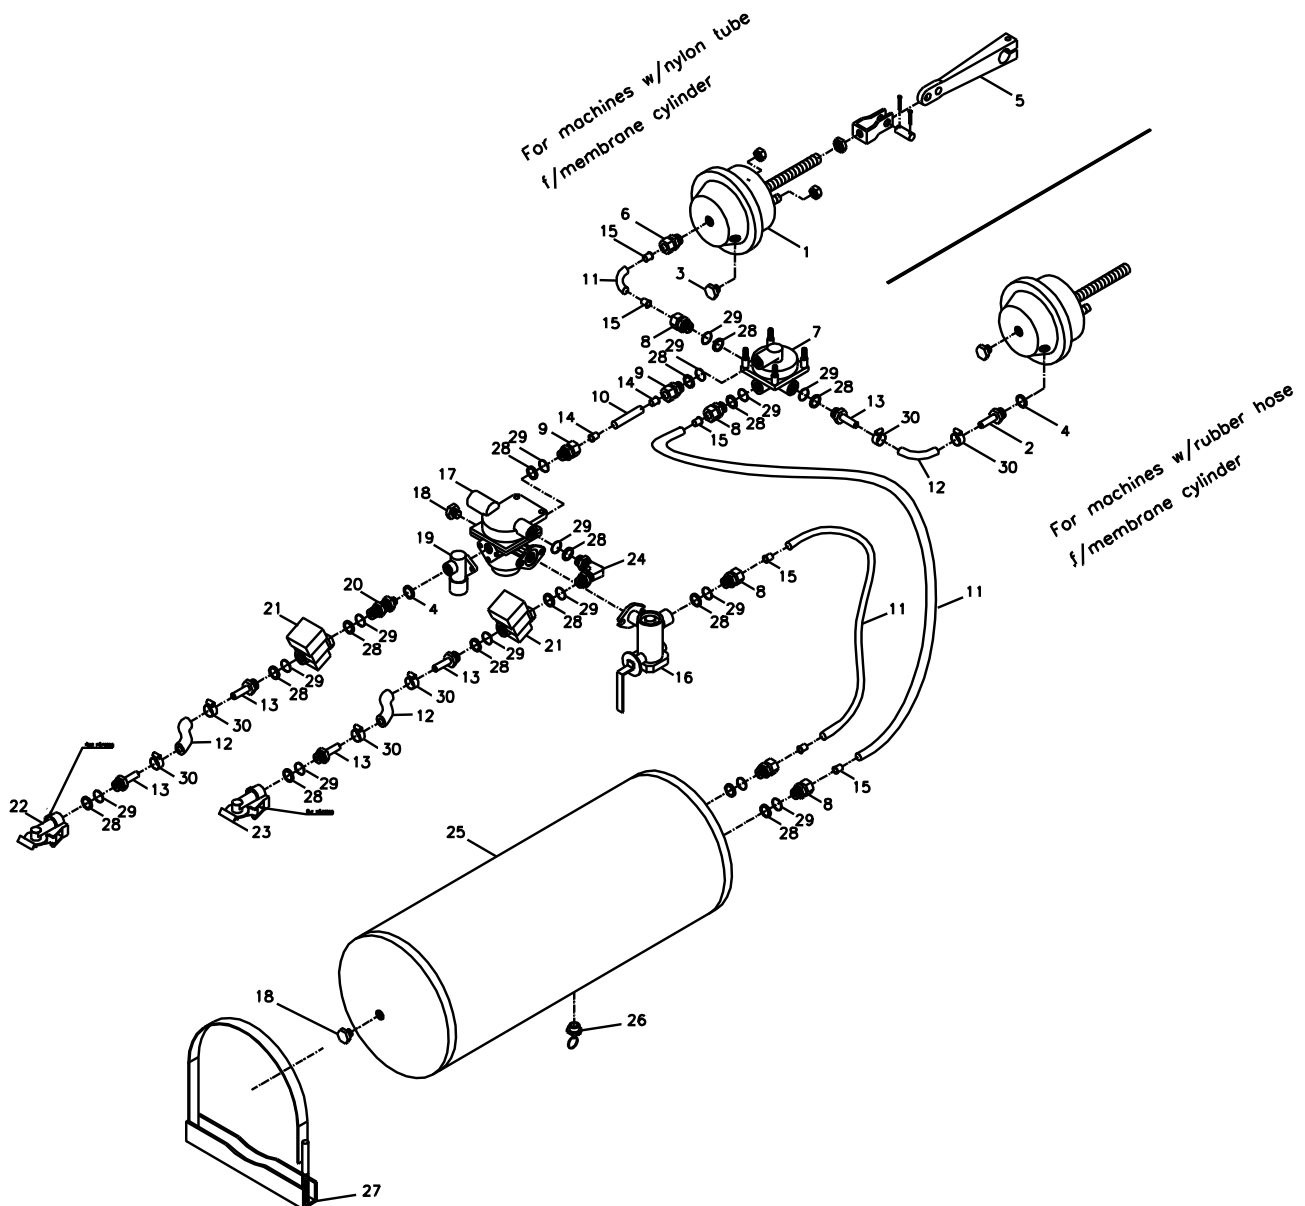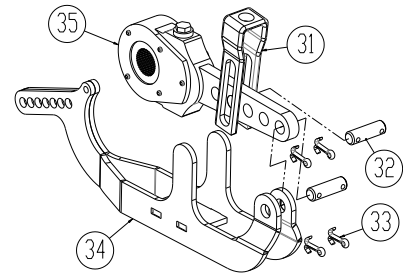

Pos.	Item no.	Designation	w/artificial tube for membrane cylinder	w/rubber hose for membrane cylinder
1	690190001	Membrane cylinder 16"	2	2
2	690190070	Hose fitting M16x1,5 m/ Ø12 fitting	0	2
3	690190005	Test fitting, straight M16x1,5	2	2
4	690208102	Bonded seal PP 45-12	1	3
5	690190010	Mounting set, short yoke	2	2
6	690202930	Fitting, straight M16x1,5, Ø15 hose	2	0
7	690190015	Relay valve M22x1,5	1	1
8	690202941	Fitting, straight M22x1,5, Ø15 hose	6	4
9	690202940	Fitting, straight M22x1,5, Ø10 hose	2	2
10	690190080	Artificial tube Ø10x1mm	1	1
11	690190085	Artificial tube Ø15x1,5mm	4	2
12	690190105	Hose Ø14,5x5mm	2	4
13	690190073	Hose fitting M22x1,5, m/Ø12 fitting	4	6
14	690190090	Support bushing for tube Ø10x1,5mm	2	2
15	690190095	Support bushing for tube Ø15x1,5mm	8	4
16	690190020	Brake power regulator M22x1,5	1	1
17	690190025	Trailer air brake valve M22x1,5	1	1
18	690190026	Plug	2	2
19	690190035	Relief valve	1	1
20	690203420	Fitting straight M16x1,5+M22x1,5	1	1
21	690190040	Filter M22x1,5	2	2
22	690190045	Hose coupling M22x1,5 (red)	1	1
23	690190046	Hose coupling M22x1,5 (yellow)	1	1
24	690190030	V-Fitting M22x1,5	1	1
25	690190050	Air receiver 40ltr	1	1
26	690190051	Drainage valve	1	1
27	690190052	Suspension for air receiver	2	2
28	690190060	Pressure ring M22x1,5	15	15
29	690190065	O-ring M22x1,5	15	15
30	690109305	Clamp 15-24 mm	4	8
31	7297510	Samlebeslag, ny model		2
32	690190010-003	Pin ø14x45		4
33	690190010-002	Steel split ø4x40 galvanized		8
34	7297582	Brake lever adjustable, new model		2
35	7297597	Brake lever for handbrake, new model		2



GOOD AS IT LOOKS!

AS GOOD AS IT LOOKS!

AS GOOD AS IT LOOKS!

AS GOOD AS IT LOOKS!

AS GOOD AS



Oikeudet rakenteen muutoksiin pidätetään siitä erikseen ilmoittamatta.